


**19013**


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

**1**

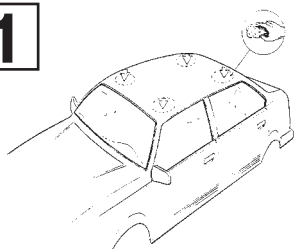


**PULIRE IL TETTO**  
CLEAN THE ROOF  
LIMPIAR EL TECHO  
DACH REINIGEN  
NETTOYER LE TOIT  
DAK SCHOONMAKEN

**2**

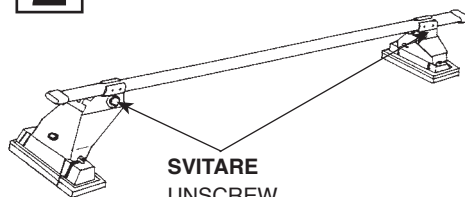


**SVITARE**  
UNSCREW  
AFLOJAR  
ABSCHRAUBEN  
DEVISSER  
OPENSCHROEVEN

**3**

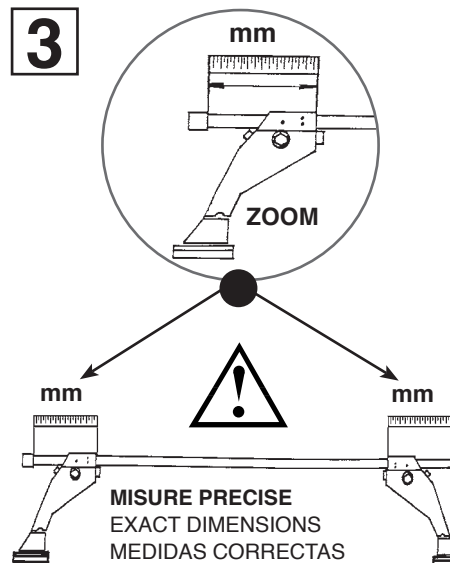

**MISURE PRECISE**  
EXACT DIMENSIONS  
MEDIDAS CORRECTAS  
GENAUE MASSE  
REGLER A LA COTE EXACTE  
EXACTE AFMETINGEN



MODELLI AUTO / CARS / COCHES  
WAGEN / VOITURES / AUTO

| ANTERIORE<br>FRONT<br>DELANTERO<br>VORDERE<br>AVANT<br>VOORSTE G. | POSTERIORE<br>REAR<br>TRASERO<br>HINTERE<br>ARRIERE<br>ACHTERSTE G. |
|-------------------------------------------------------------------|---------------------------------------------------------------------|
|-------------------------------------------------------------------|---------------------------------------------------------------------|


X Y

**PEUGEOT 306 5P**

138 mm 143 mm


**4**

**AVVITARE (A FONDO)**  
TO SCREW (DOWN)  
APRETAR (A FONDO)  
FESTSCHRAUBEN  
VISSER (À FOND)  
VASTSCHROEVEN

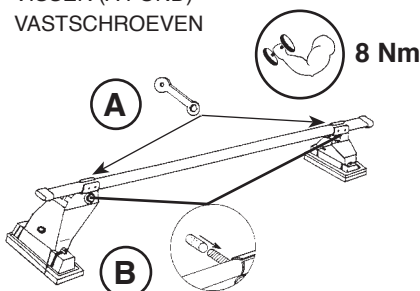

**INSERIRE TAPPO SU VITE**  
INSERT THE CAP ON THE SCREW  
CUBRIR TORNILLO CON SU PLASTICO  
STOPFEN AUF DIE SCHRAUBE EINSETZEN  
ENFILER LE CAPUCHON SUR LA VIS  
BEVESTIG DE DOP OP DE SCHROEF


**5**

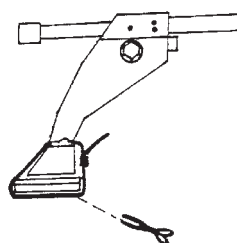

**TAGLIARE**  
TO CUT  
CORTAR  
SCHNEIDEN  
COUPER  
SNIJDEN

**6**

MODELLI AUTO  
CARS  
COCHES  
WAGEN  
VOITURES  
AUTO

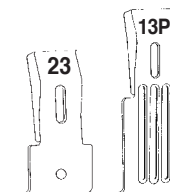


| ANTERIORE<br>FRONT<br>DELANTERO<br>VORDERE<br>AVANT<br>VOORSTE G. | POSTERIORE<br>REAR<br>TRASERO<br>HINTERE<br>ARRIERE<br>ACHTERSTE G. |
|-------------------------------------------------------------------|---------------------------------------------------------------------|
|-------------------------------------------------------------------|---------------------------------------------------------------------|

**PEUGEOT 306 5P**

23 13P

**MONTAGGIO GANASCINE**  
HOW TO ASSEMBLE THE CLAMPS  
COMO MONTAR LAS FIJACIONES  
ZUSAMMENBAU DER SPANNBACKEN  
MONTAGE PATTE  
MONTAGE VAN DE KLEMMEN

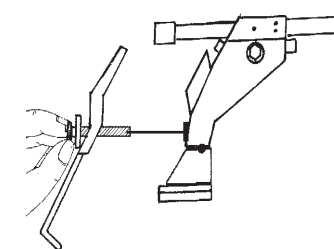

7

### CENTRARE IL P. TUTTO SUL TETTO


CENTRE THE UNIVERSAL BAR  
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES  
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH  
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER  
IN HET MIDDEN VAN HET DAK

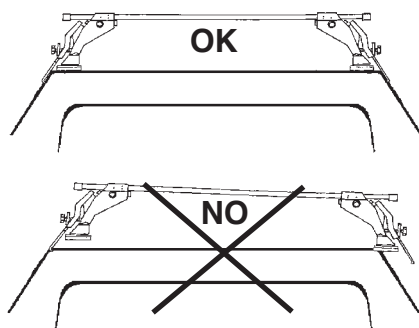

### MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER

MODELOS CON PREDISPOSICION DEL FABRICANTE

AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN

“À TROUVER SUR LE BATTANT DE LA PORTE OU  
DANS LE MANUAL TECHNIQUE DE LA VOITURE “

### SCALZARE LA GUARNIZIONE


REMOVE THE GASKET

QUITE LA MOLDURA


DICHTUNG HERAUSZIEHEN

OTER LE JOINT

PAKKUNG LOSMAKEN

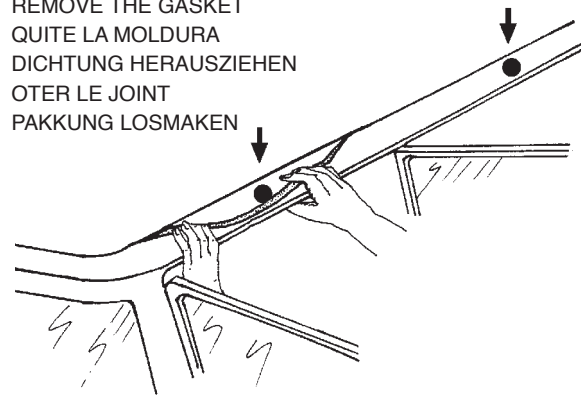

8

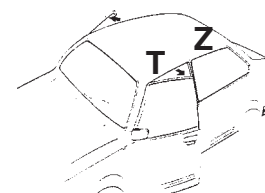

ANTERIORE  
FRONT  
DELANTERO  
VORDERE  
AVANT  
VOORSTE G.

POSTERIORE  
REAR  
TRASERO  
HINTERE  
ARRIERE  
ACHTERSTE G.


MODELLI AUTO / CARS / COCHES  
WAGEN / VOITURES / AUTO

PEUGEOT 306 5P

T

Z

AVVITARE  
TO SCREW  
APRETAR  
FESTSCHRAUBEN  
VISSER  
VASTSCHROEVEN

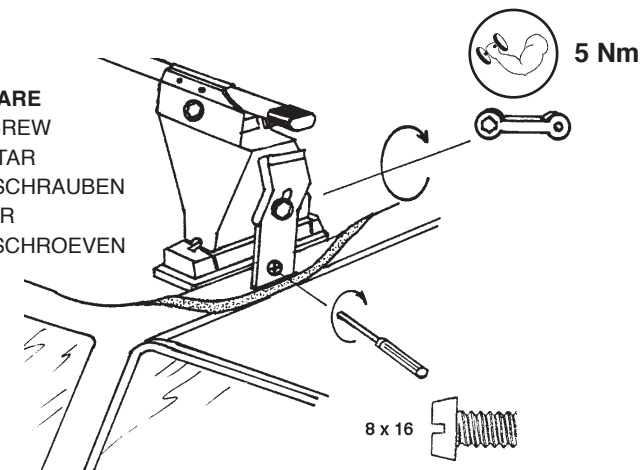

S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy