


19015


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

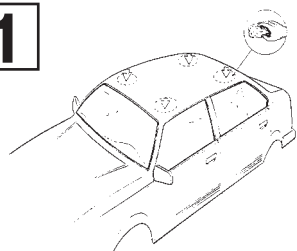


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

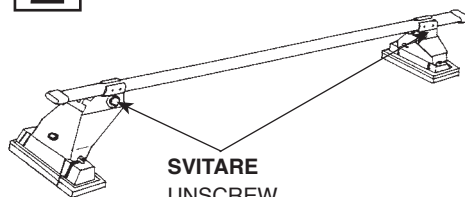


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

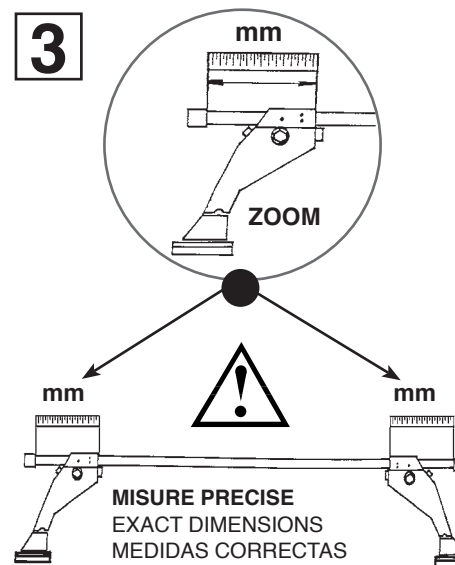

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN



MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

X

Y


RENAULT TWINGO (->07)

110 mm

110 mm

4

AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

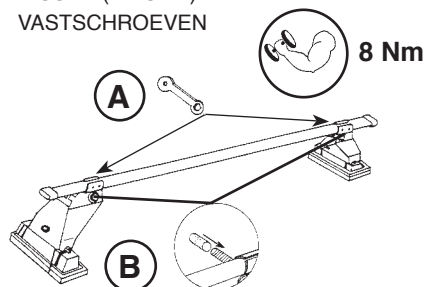


8 Nm

INSERIRE TAPPO SU VITE

INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF


5

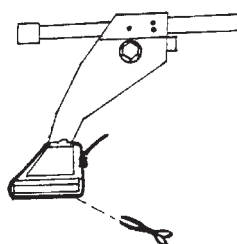

TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6

MODELLI AUTO
CARS
COCHES
WAGEN
VOITURES
AUTO

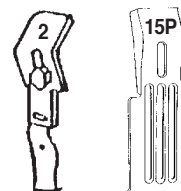


ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

RENAULT TWINGO (->07)

2


15P

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

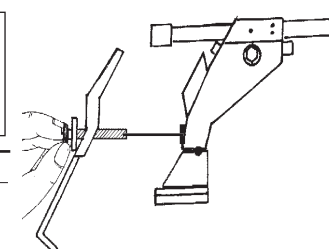


7

OPTIMUM

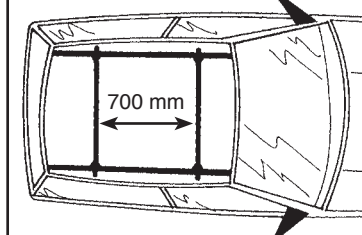

8

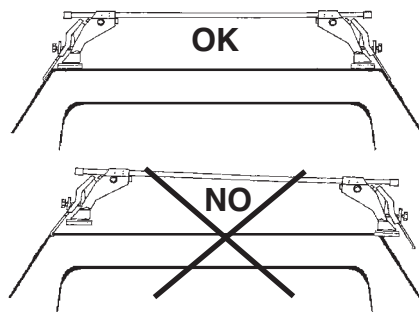**CENTRARE IL P. TUTTO SUL TETTO**CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOFCENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHOLASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK**MODELLI SENZA PREDISPOSIZIONE DELLA CASA AUTO**

CARS WITHOUT PRE-EXISTING FIXING POINT

PARA COCHES SIN PREDISPOSICION DEL FABRICANTE

AUTOS OHNE VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES SANS POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S ZONDER DOOR DE FABRIKANT VOORZIENE BEVESTIGINGSPUNTEN

10

MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO**RENAULT TWINGO (->07)**ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.

T

350 mm

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN



5 Nm

SCALZARE LA GUARNIZIONEREMOVE THE GASKET
QUITE LA MOLDURA
DICHTUNG HERAUSZIEHEN
OTER LE JOINT
PAKKUNG LOSMAKEN**MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO**

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER

MODELOS CON PREDISPOSICION DEL FABRICANTE


AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN

9

“À TROUVER SUR LE BATTANT DE LA PORTE OU
DANS LE MANUAL TECHNIQUE DE LA VOITURE “

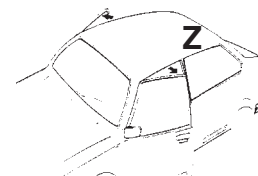
MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO**RENAULT TWINGO (->07)**POSTERIORE
REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.

Z

VETRO FISSONON OPENING WINDOW
CRISTAL FIJO
FESTE GLASSCHEIBE
GLACE FIXE
VASTE RUIT

5 Nm

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

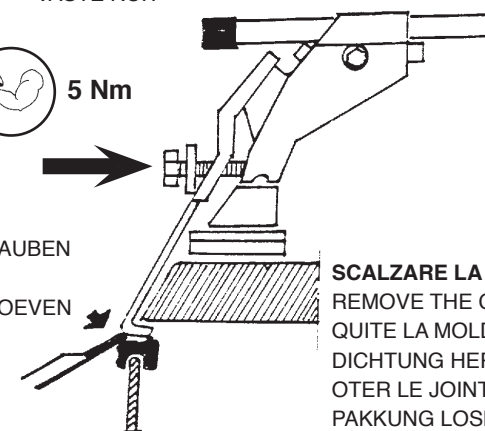

SCALZARE LA GUARNIZIONE
REMOVE THE GASKET
QUITE LA MOLDURA
DICHTUNG HERAUSZIEHEN
OTER LE JOINT
PAKKUNG LOSMAKEN



S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy