


19090


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

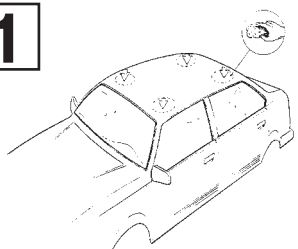


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

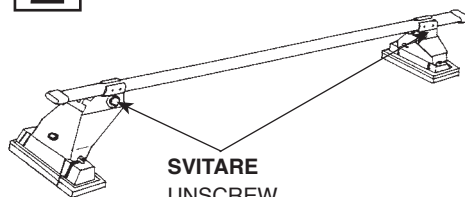


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

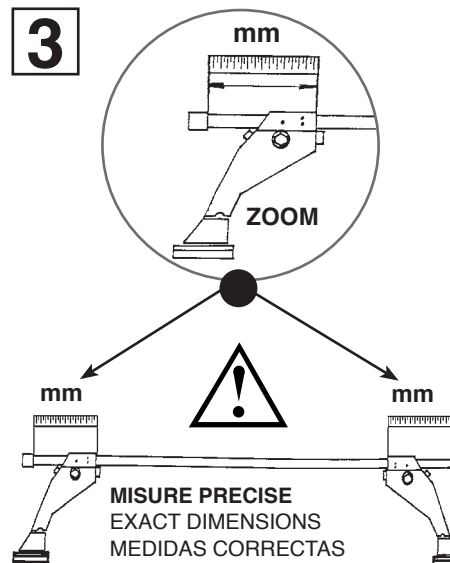

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN




MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

	X	Y
FIAT GRANDE PUNTO 3P (05->)	103 mm	117 mm
FIAT PUNTO EVO 3P	103 mm	117 mm

4


AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

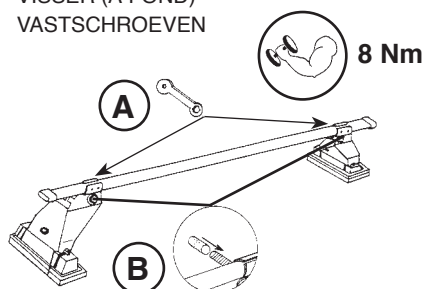

INSERIRE TAPPO SU VITE

INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF


5

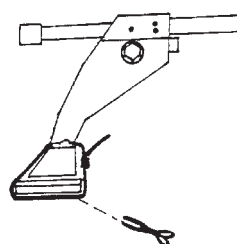

TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6


MODELLI AUTO
CARS
COCHES
WAGEN
VOITURES
AUTO

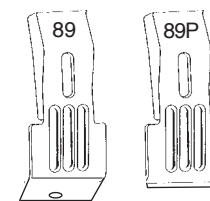


ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

FIAT GRANDE PUNTO 3P (05->)	89	89P
FIAT PUNTO EVO 3P	89	89P

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

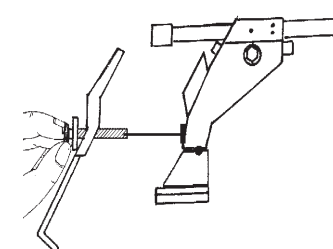

7

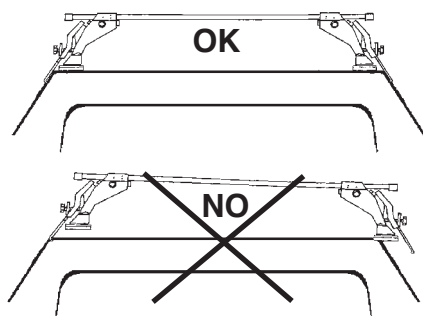

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

8

MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER

MODELOS CON PREDISPOSICION DEL FABRICANTE

AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE



VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN

“À TROUVER SUR LE BATTANT DE LA PORTE OU
DANS LE MANUAL TECHNIQUE DE LA VOITURE “



ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.

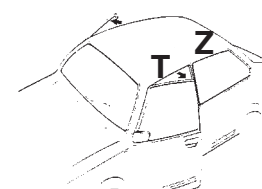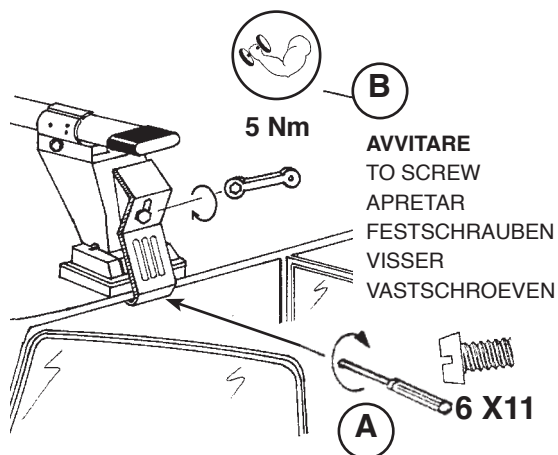

ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.

POSTERIORE
REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.

MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

FIAT GRANDE PUNTO 3P (05->)

T

Z


FIAT PUNTO EVO 3P

T

Z



POSTERIORE
REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.

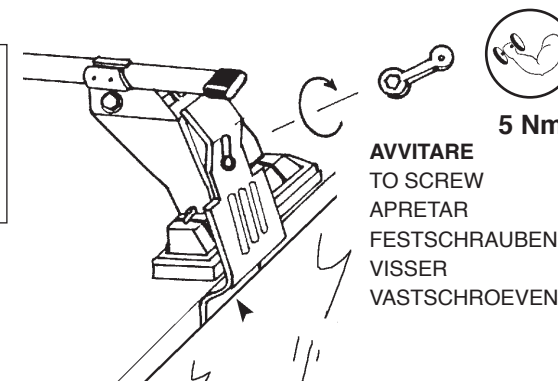

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN



S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy