

19096

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

BMW: SERIE 1 5P


BMW: NEW SERIE 1 3-5P

BMW: NEW SERIE 3 BERLINA (05->)


BMW: NEW SERIE 3 COUPÈ (05->)

BMW: NEW SERIE 3 TOURING NO RAILS (05->)

EXEMPLE

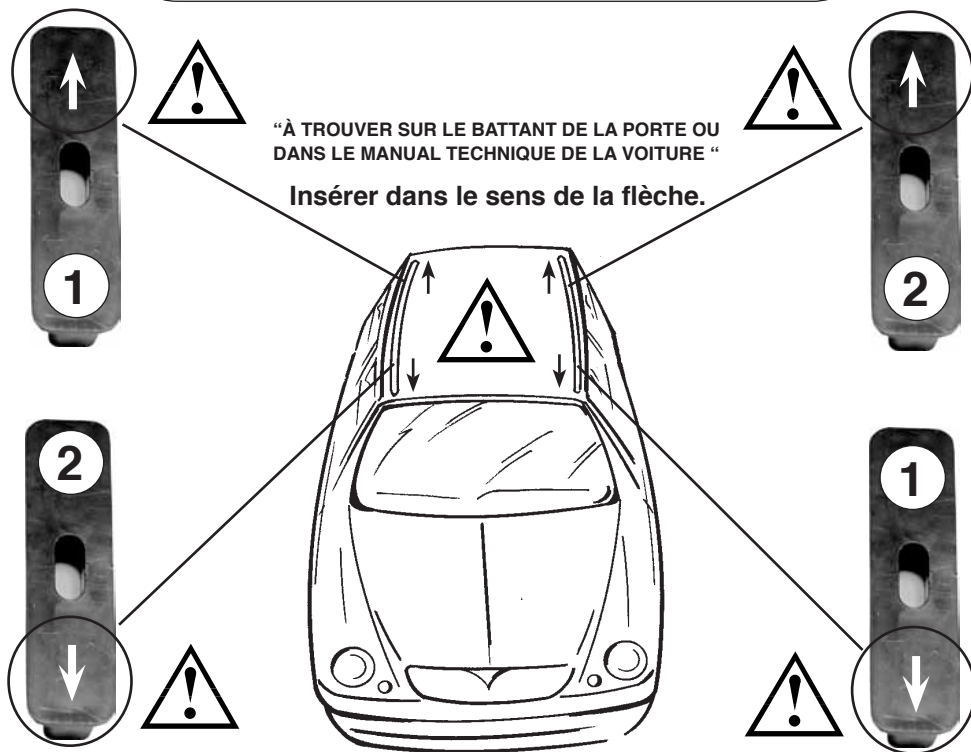

2

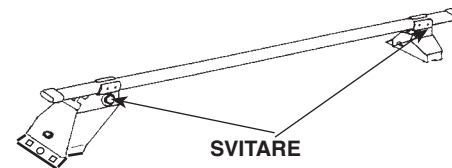

SVITARE

UNSCREW



AFLOJAR

ABSCHRAUBEN

DEVISSER

OPENSCHROEVEN

3

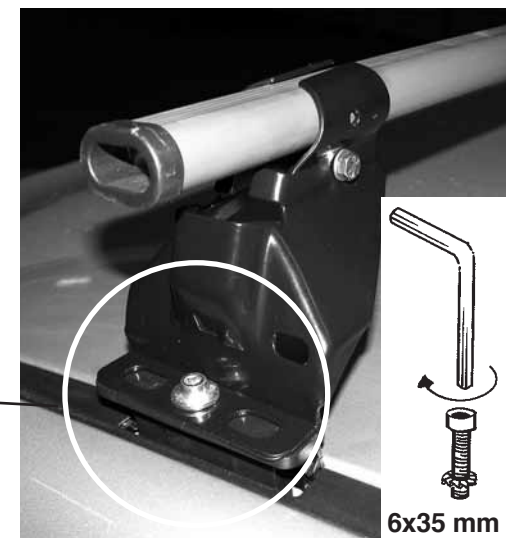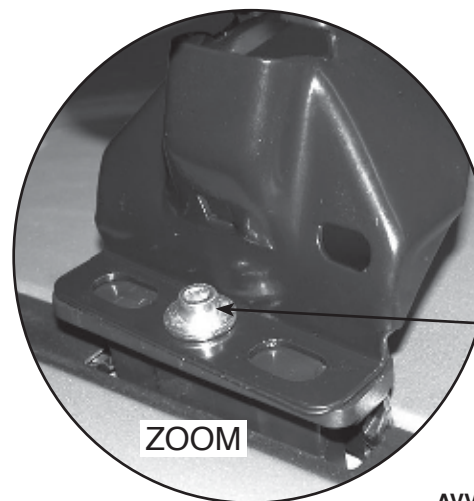

AVVITARE

TO SCREW

APRETAR

FESTSCHRAUBEN

VISSER


VASTSCHROEVEN



5 Nm

6x35 mm

4

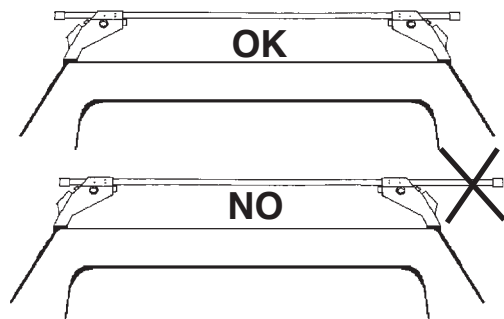

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO


LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

5

A

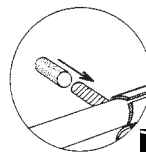

INSERIRE TAPPO SU VITE


INSERT THE CAP ON THE SCREW

CUBRIR TORNILLO CON SU PLASTICO

STOPFEN AUF DIE SCHRAUBE EINSETZEN

ENFILER LE CAPUCHON SUR LA VIS

BEVESTIG DE DOP OP DE SCHROEF

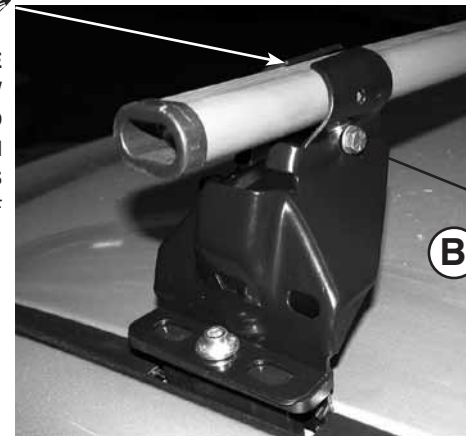

B

AVVITARE (A FONDO)

TO SCREW (DOWN)

APRETAR (A FONDO)

FESTSCHRAUBEN

VISSER (À FOND)

VASTSCHROEVEN



8 Nm



S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy