
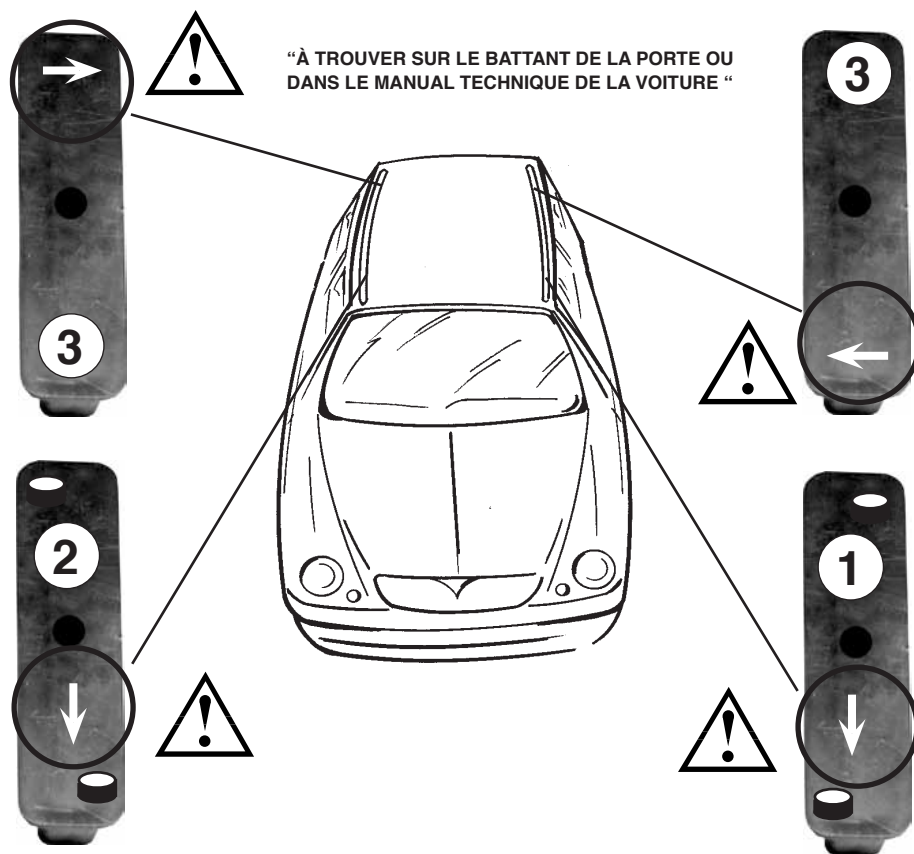


19098


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

# **MERCEDES: NEW CLASSE A NEW CLASSE A COUPÉ CLASSE B**

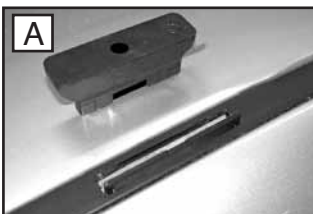

2

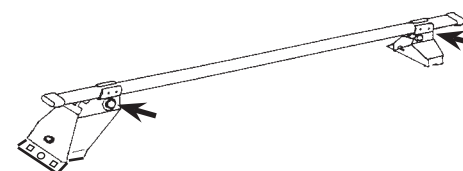

**SVITARE**  
UNSCREW  
AFLOJAR  
ABSCHRAUBEN  
DEVISSER  
OPENSCHROEVEN

3

## **MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO**

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER

MODELOS CON PREDISPOSICION DEL FABRICANTE


AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR


AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN



**POSTERIORE**  
REAR  
TRASERO  
HINTERE  
ARRIERE  
ACHTERSTE G.

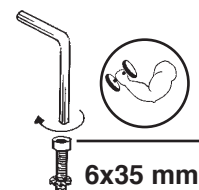


**AVVITARE**  
TO SCREW  
APRETAR  
FESTSCHRAUBEN  
VISSER  
VASTSCHROEVEN

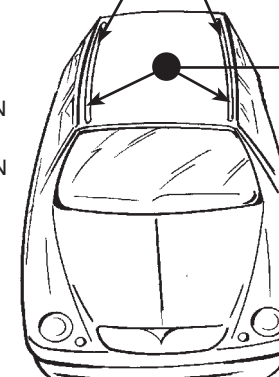


**AVVITARE**  
TO SCREW  
APRETAR  
FESTSCHRAUBEN  
VISSER  
VASTSCHROEVEN

**AVVITARE**  
TO SCREW  
APRETAR  
FESTSCHRAUBEN  
VISSER  
VASTSCHROEVEN

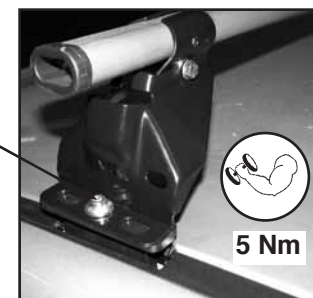

**ANTERIORE**  
FRONT  
DELANTERO  
VORDERE  
AVANT  
VOORSTE G.

4

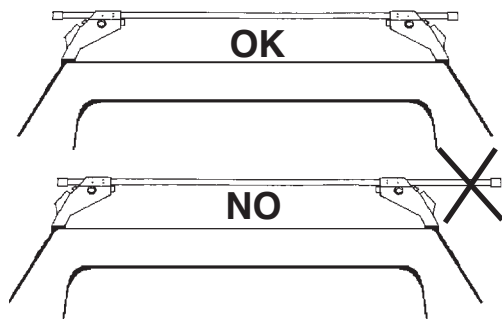

**CENTRARE IL P. TUTTO SUL TETTO**

CENTRE THE UNIVERSAL BAR  
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES  
SOBRE EL TECHO


LASTENTRÄGER AUF DEM DACH  
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER  
IN HET MIDDEN VAN HET DAK

5

B

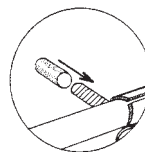

**INSERIRE TAPPO SU VITE**


INSERT THE CAP ON THE SCREW

CUBRIR TORNILLO CON SU PLASTICO

STOPFEN AUF DIE SCHRAUBE EINSETZEN

ENFILER LE CAPUCHON SUR LA VIS

BEVESTIG DE DOP OP DE SCHROEF

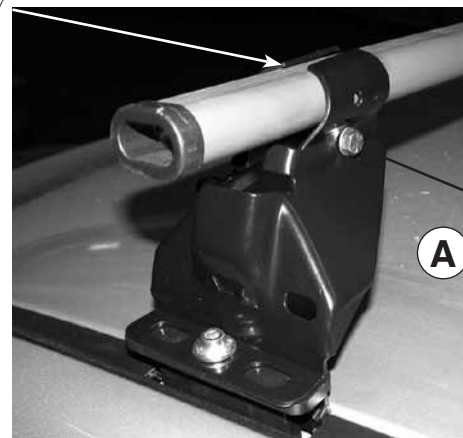

A

**AVVITARE (A FONDO)**

TO SCREW (DOWN)

APRETAR (A FONDO)

FESTSCHRAUBEN

VISSER (À FOND)

VASTSCHROEVEN



8 Nm



S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy