


19099


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

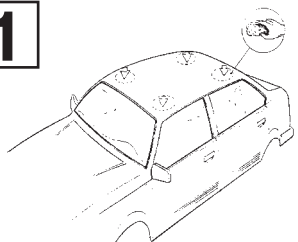


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

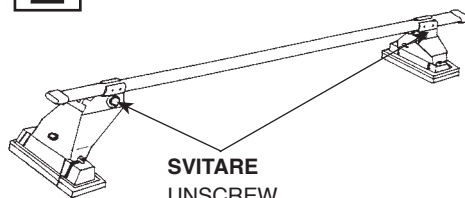


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

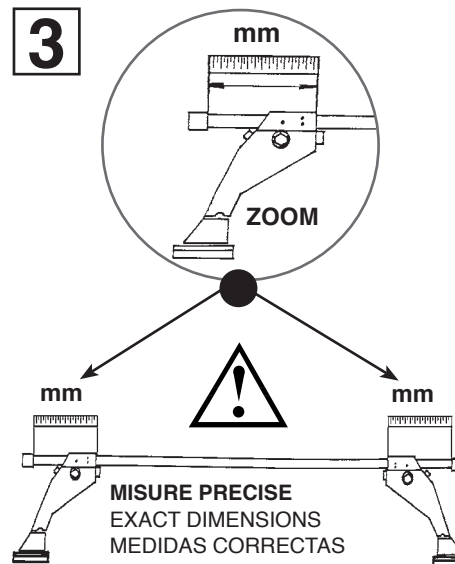

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN




MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

X	Y
CHEVROLET NEW MATIZ	CHEVROLET NEW MATIZ
143 mm	143 mm

4


AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

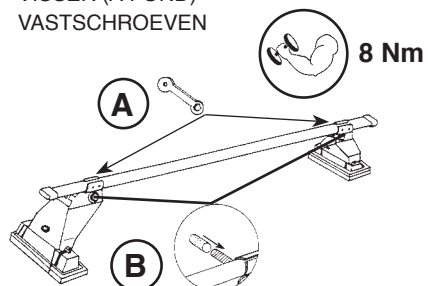

INSERIRE TAPPO SU VITE

INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF


5

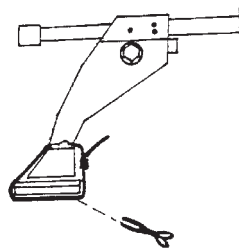

TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6


MODELLI AUTO
CARS
COCHES
WAGEN
VOITURES
AUTO

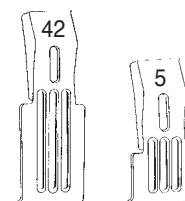

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--


CHEVROLET NEW MATIZ	42	5
----------------------------	----	---

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

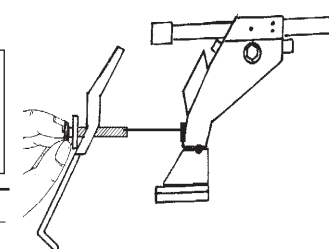


7

OPTIMUM

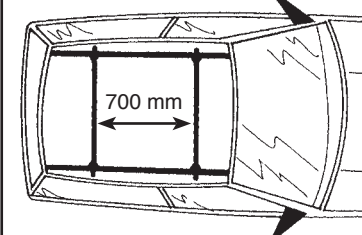

8

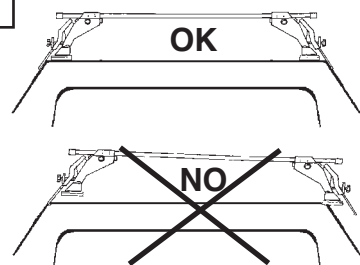**CENTRARE IL P. TUTTO SUL TETTO**

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF


CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

9

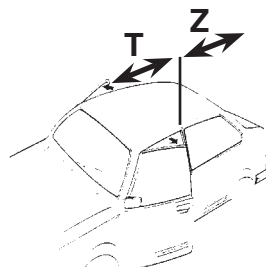

ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.

POSTERIORE
REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.

MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

	T	Z
CHEVROLET NEW MATIZ	350 mm	300 mm

MODELLI SENZA PREDISPOSIZIONE DELLA CASA AUTO

CARS WITHOUT PRE-EXISTING FIXING POINT

PARA COCHES SIN PREDISPOSICION DEL FABRICANTE

AUTOS OHNE VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES SANS POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S ZONDER DOOR DE FABRIKANT VOORZIENE BEVESTIGINGSPUNTEN

AVVITARE


TO SCREW

APRETAR

FESTSCHRAUBEN

VISSER

VASTSCHROEVEN

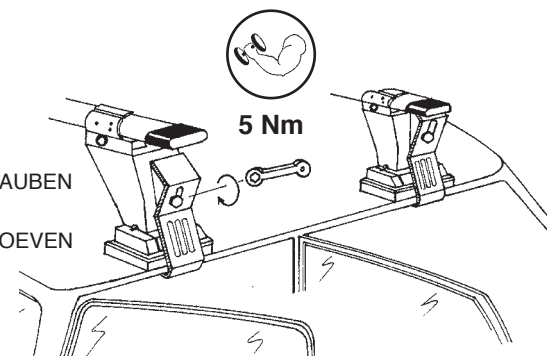

S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy