

19613


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

FORD: FOCUS C-MAX (->10) senza tetto in vetro


MAZDA: 3 senza tetto in vetro

MAZDA: NEW 3 senza tetto in vetro

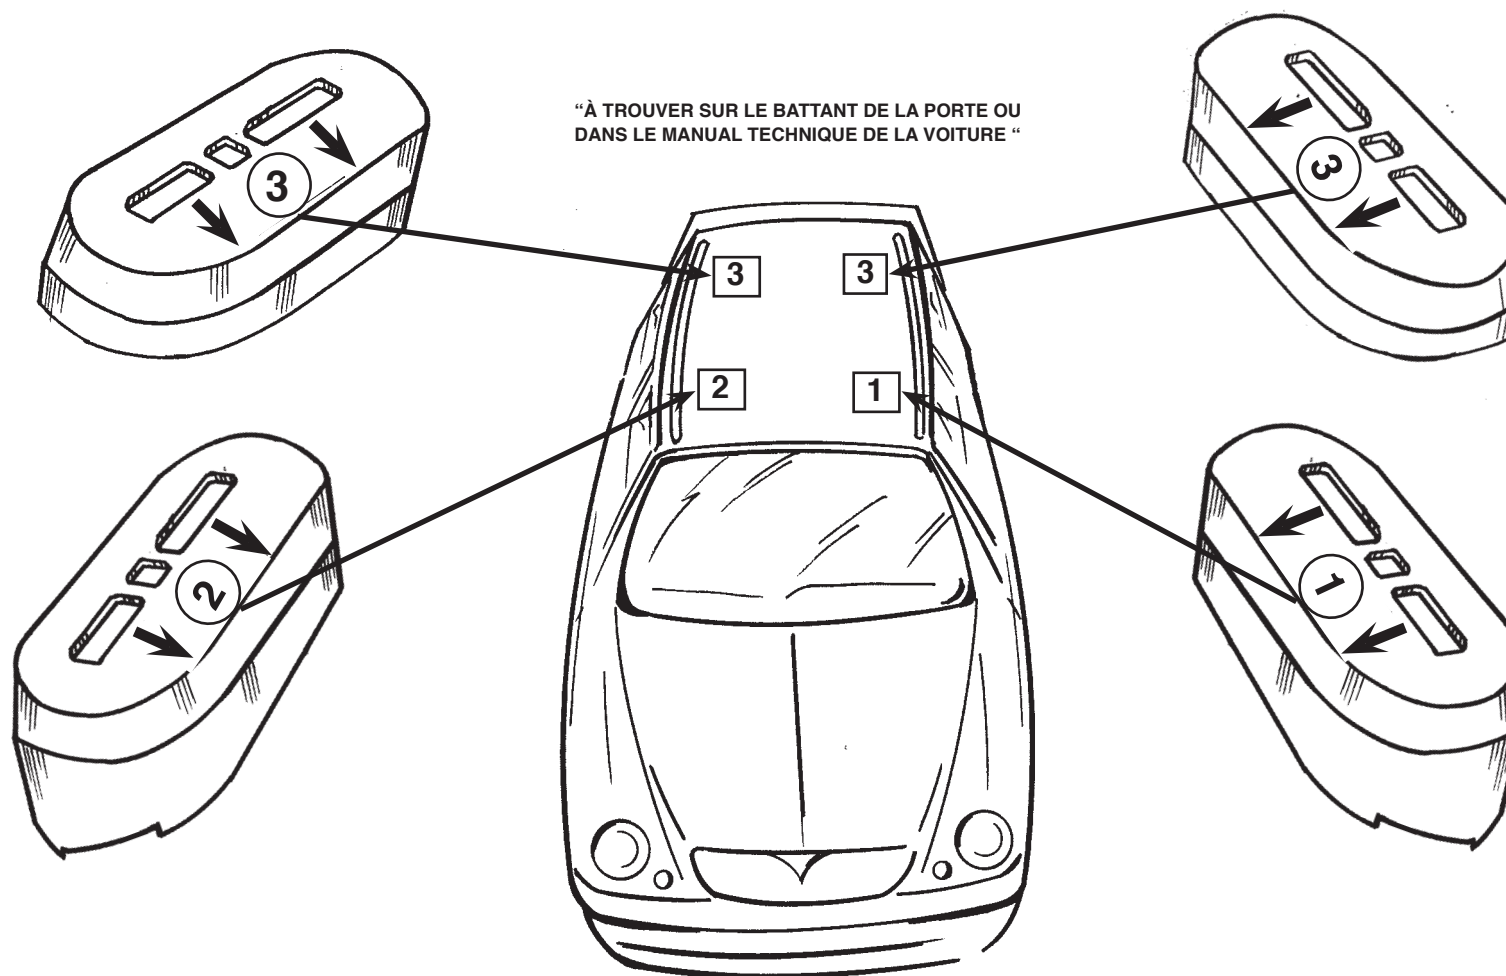

2


TETTO VETTURE
ROOF AUTO
TOIT VOITURE
DACH AUTOMOBILE
AZOTEA AUTOMOVIL
DACH AUTO

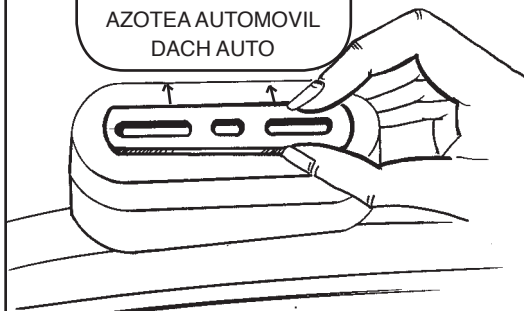

3A

FORD FOCUS C-MAX- 6 x75 mm
MAZDA 3 - 6 x60 mm
MAZDA NEW 3 - 6 x60 mm


ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.

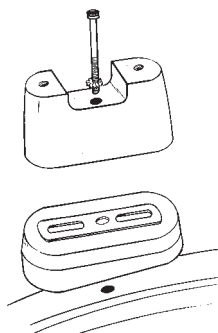


3B

FORD FOCUS C-MAX- 6 x70 mm
MAZDA 3 - 6 x55 mm
MAZDA NEW 3 - 6 x55 mm

POSTERIORE
REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.

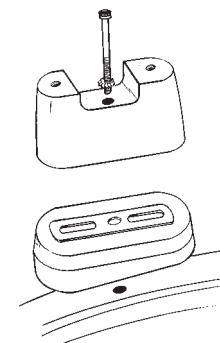


4

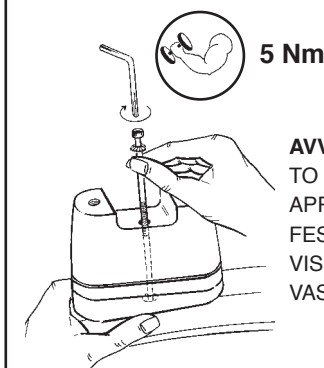


5 Nm

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

5

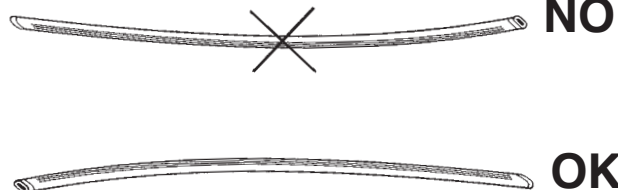

6

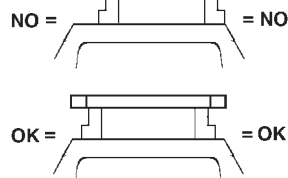

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT


PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

7



5 Nm

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

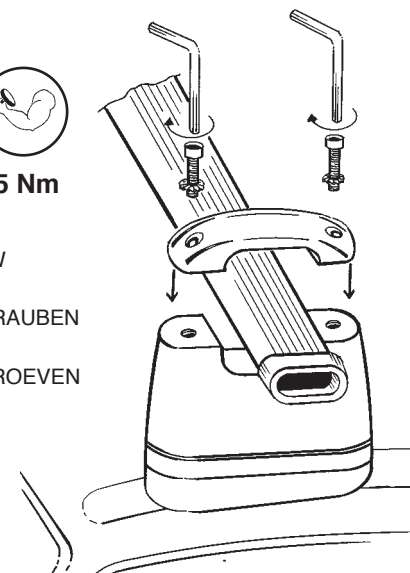

S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy