


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:


ISTRUZIONI PER BARRE IN FERRO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN FER - MOUNTING INSTRUCTIONS FOR BAR - CARRIERS MADE OF IRON - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN HIERRO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS EISEN.

CITROEN: NEMO NO RAILS - **FIAT:** NEW FIORINO (08->) NO RAILS - **PEUGEOT:** BIPPER NO RAILS


1

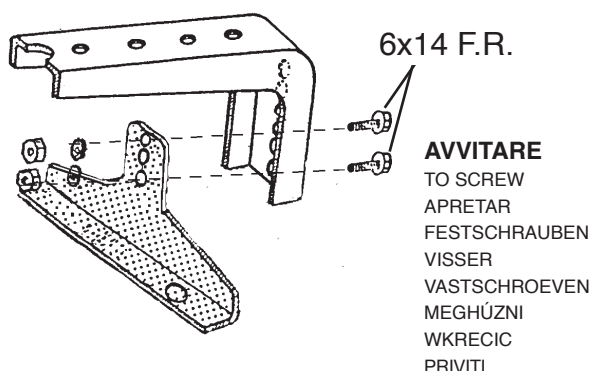

2

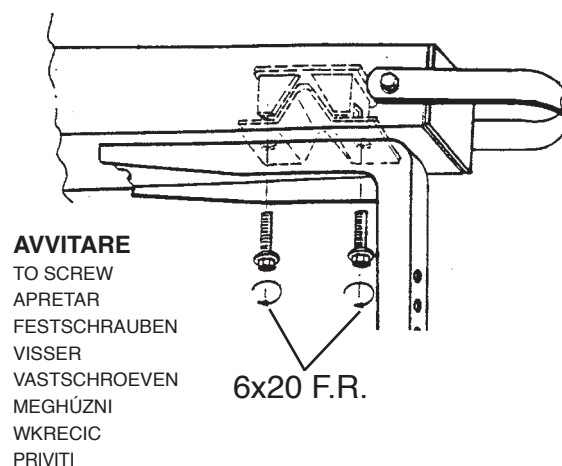

3

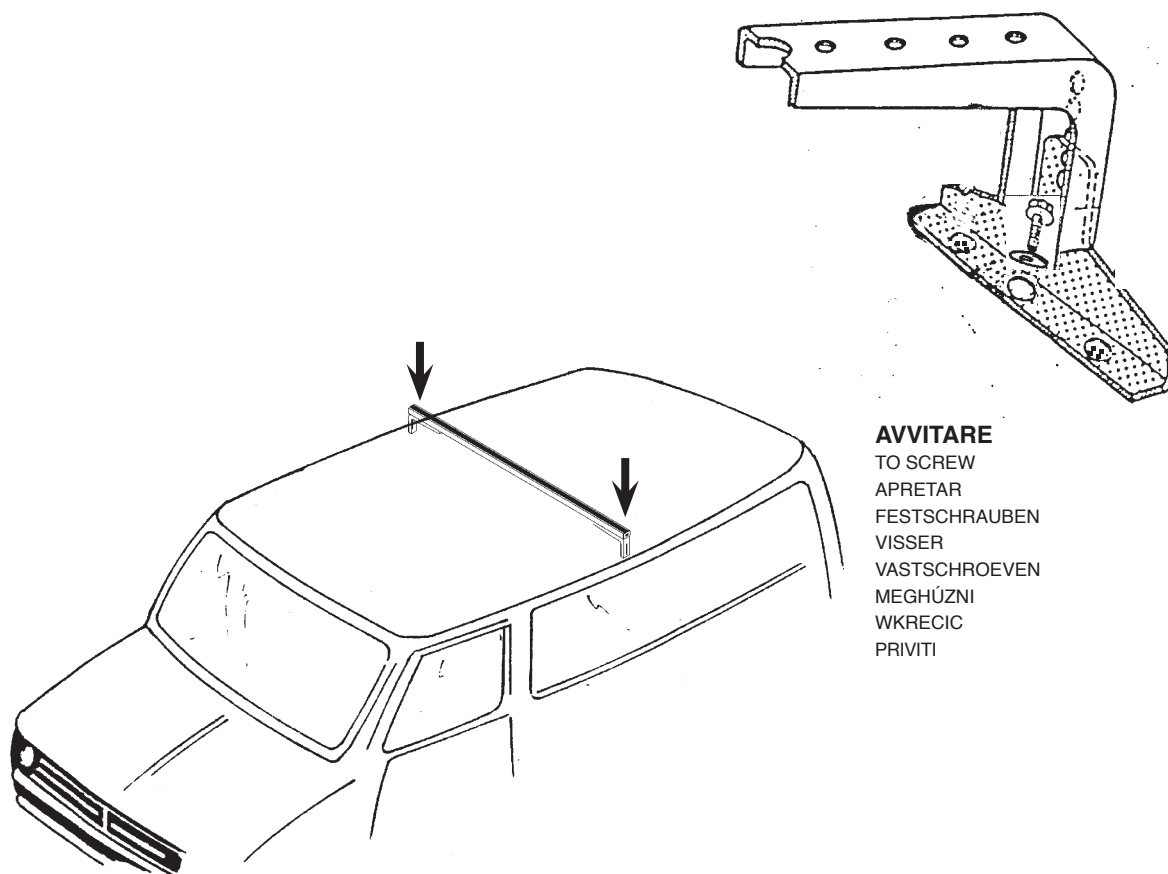

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:

ISTRUZIONI PER BARRE IN ALLUMINIO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN ALUMINIUM - MOUNTING INSTRUCTIONS FOR BAR-CARRIERS MADE OF ALUMINIUM - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN ALUMINIO - MONTAGEANWEISUNGEN FUER LASTENTRAEGER AUS ALUMINIUM.

CITROEN: NEMO NO RAILS - FIAT: NEW FIORINO (08->) NO RAILS - PEUGEOT: BIPPER NO RAILS

