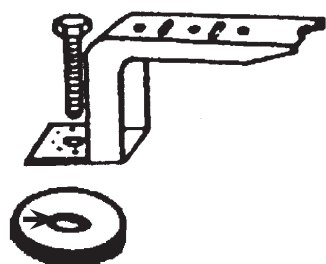


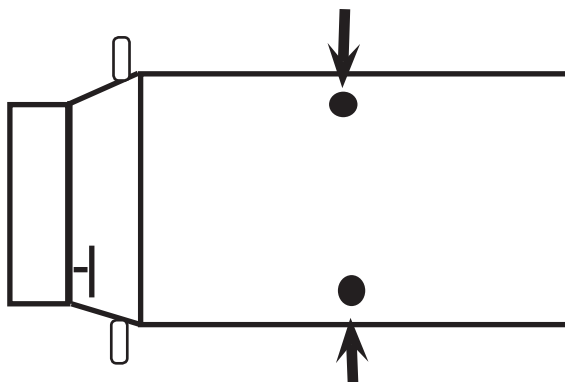
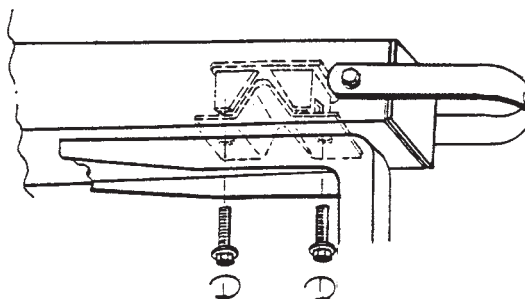
ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:

ISTRUZIONI PER BARRE IN FERRO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN FER - MOUNTING INSTRUCTIONS FOR BAR - CARRIERS MADE OF IRON - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN HIERRO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS EISEN.

VW: NEW CADDY MAXI**1****AVVITARE**

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

**2**

6x20 F.R.

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAŻU - NAVODILA O MONTAŽI.

ATTENZIONE:

ISTRUZIONI PER BARRE IN ALLUMINIO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN ALUMINIUM - MOUNTING INSTRUCTIONS FOR BAR-CARRIERS MADE OF ALUMINIUM - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN ALUMINIO - MONTAGEANWEISUNGEN FUER LASTENTRAEGER AUS ALUMINIUM.

VW: NEW CADDY MAXI

