


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASITÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:

ISTRUZIONI PER BARRE IN FERRO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN FER - MOUNTING INSTRUCTIONS FOR BAR - CARRIERS MADE OF IRON - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN HIERRO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS EISEN.

CITROEN: NEMO NO RAILS **FIAT:** NEW FIORINO (08 ->) NO RAILS, QUBO NO RAILS - **PEUGEOT:** BIPPER NO RAILS


1

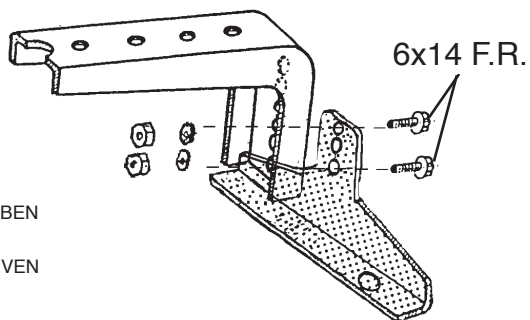

AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSE
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI


2

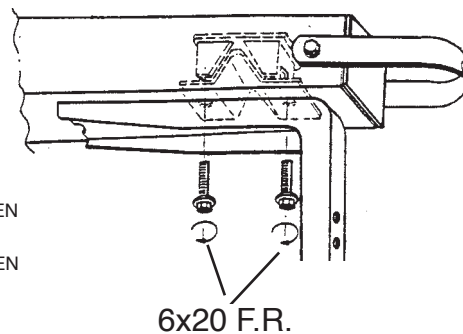


AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSE
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI


3

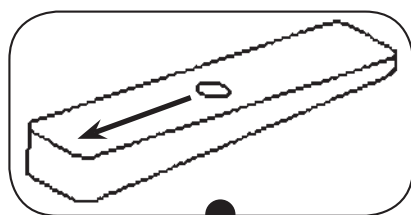

A

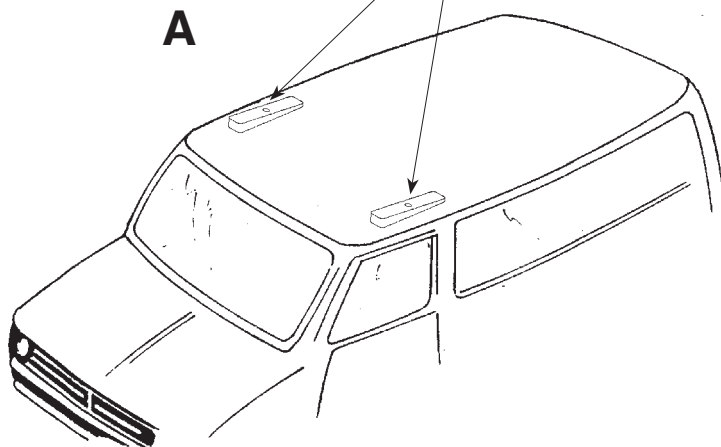

B

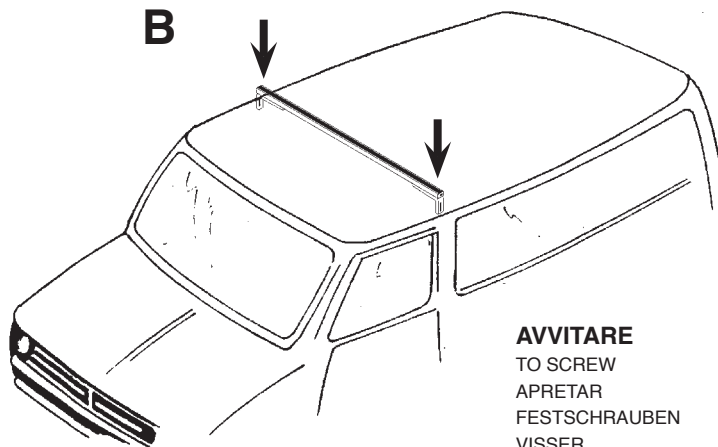

AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSE
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:


ISTRUZIONI PER BARRE IN ALLUMINIO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN ALUMINIUM - MOUNTING INSTRUCTIONS FOR BAR-CARRIERS MADE OF ALUMINIUM - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN ALUMINIO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS ALUMINIUM.

CITROEN: NEMO NO RAILS **FIAT:** NEW FIORINO (08 ->) NO RAILS, QUBO NO RAILS - **PEUGEOT:** BIPPER NO RAILS

1

AVVITARE


TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

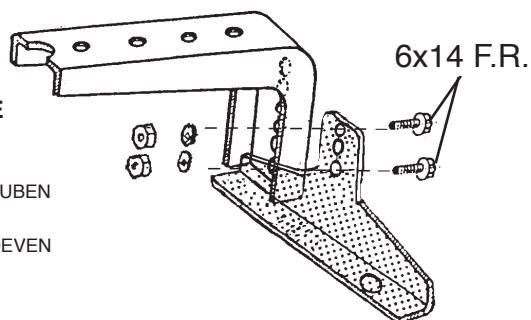

2

INSERIRE


INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOŽIC
VSTAVITI

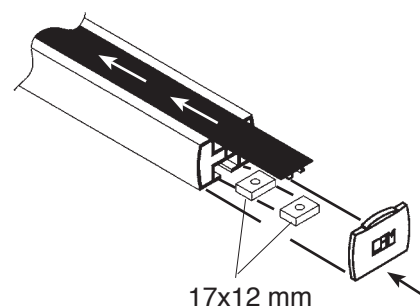

3

AVVITARE


TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

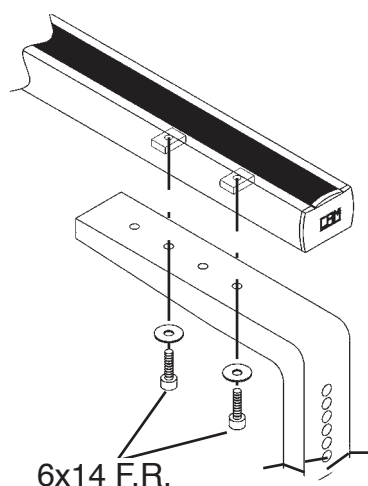

4

INSERIRE



INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOŽIC
VSTAVITI

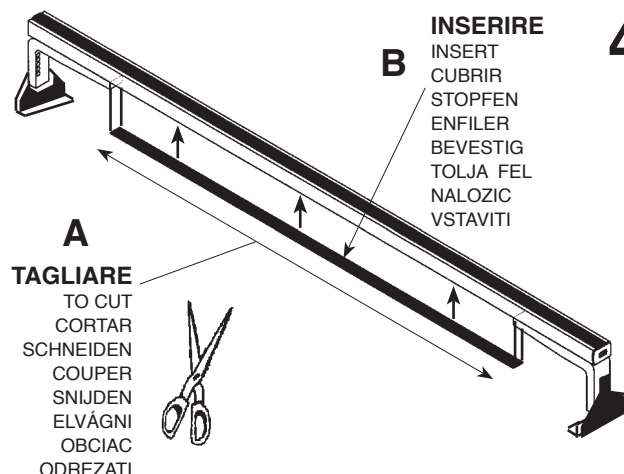

TAGLIARE

TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN
ELVÁGNI
OBCIAC
ODREZATI

5

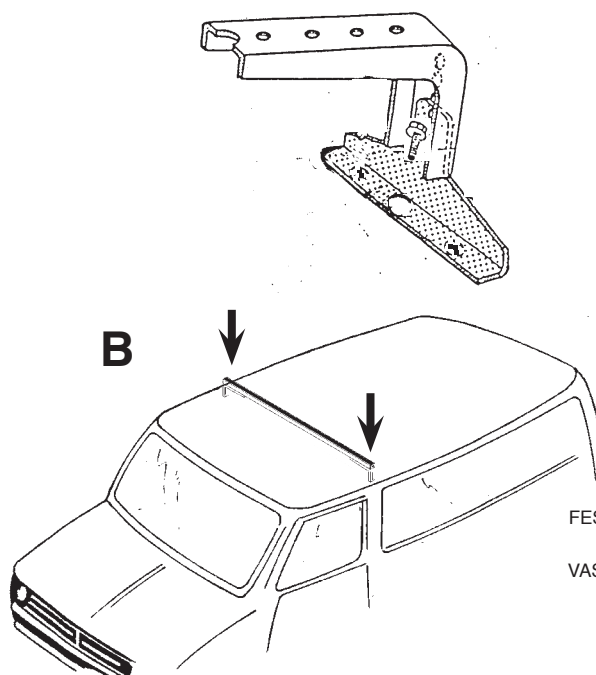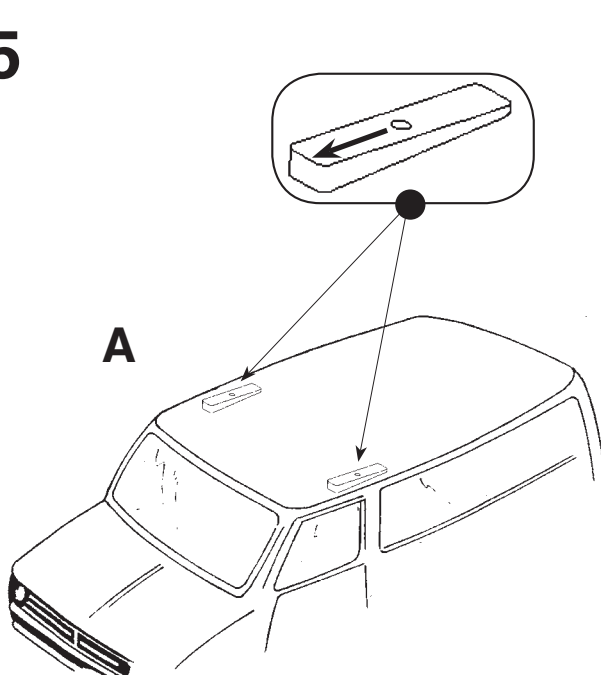

AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI