

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN -
INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.


ATTENZIONE:

ISTRUZIONI PER BARRE IN FERRO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN FER -
MOUNTING INSTRUCTIONS FOR BAR - CARRIERS MADE OF IRON - INSTRUCCIONES DE MONTAJE PARA BARRAS
PORTATODO EN HIERRO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS EISEN.

1



A

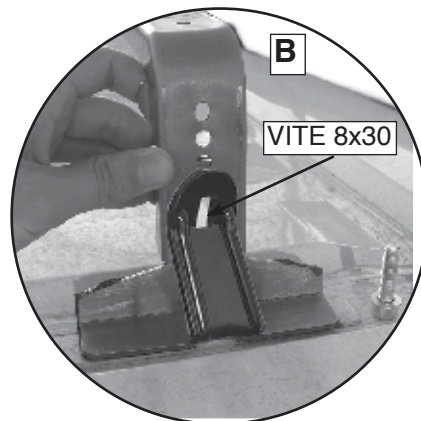


B


VITE 8x30

AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

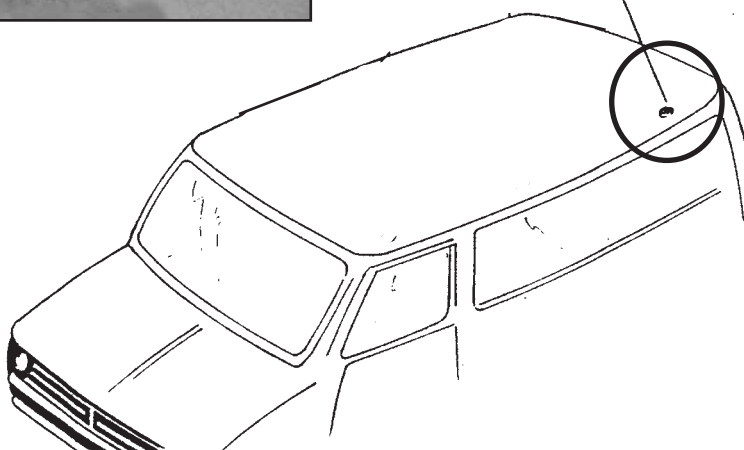

2

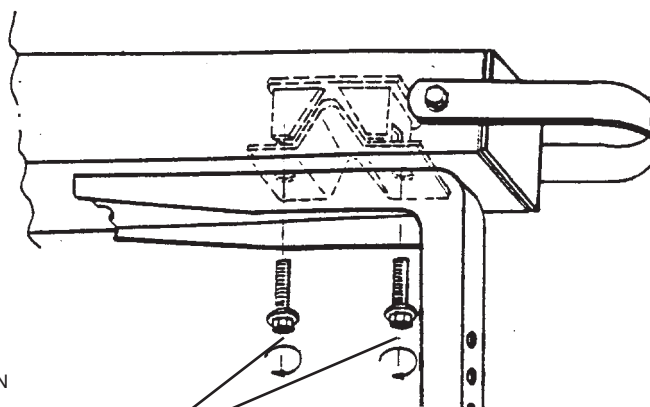

6x20 F.R.

AVVITARE


TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:


ISTRUZIONI PER BARRE IN ALLUMINIO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN ALUMINIUM - MOUNTING INSTRUCTIONS FOR BAR-CARRIERS MADE OF ALUMINIUM - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN ALUMINIO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS ALUMINIUM.

1

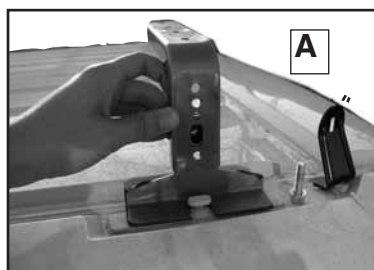


AVVITARE


TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

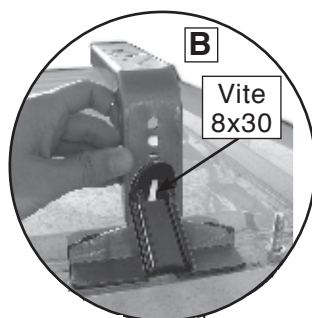

Vite
8x30

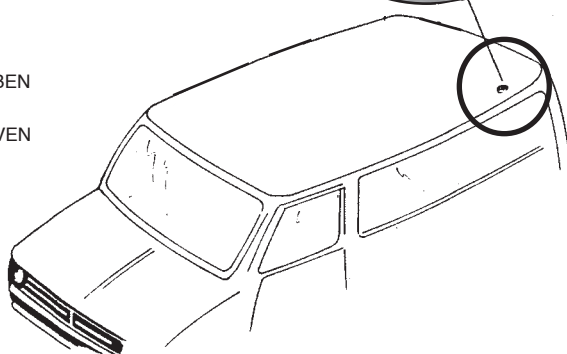

2

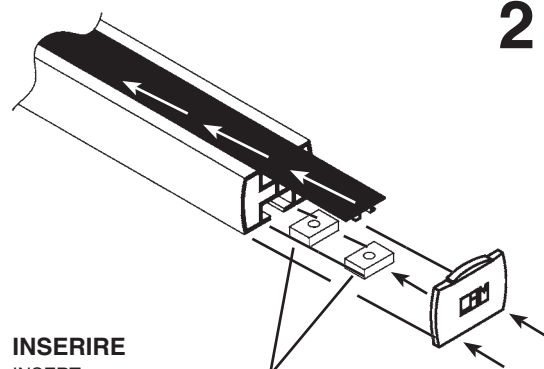


INSERIRE

INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOZIC
VSTAVITI

17x12mm

3

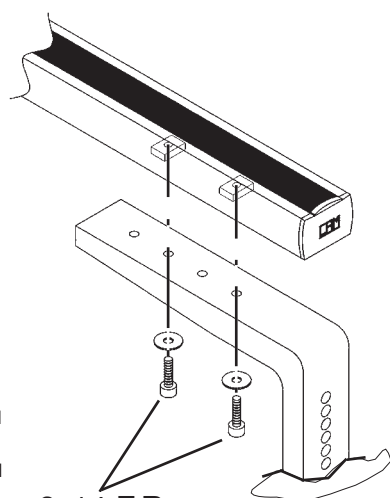


AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

6x14 F.R.

4

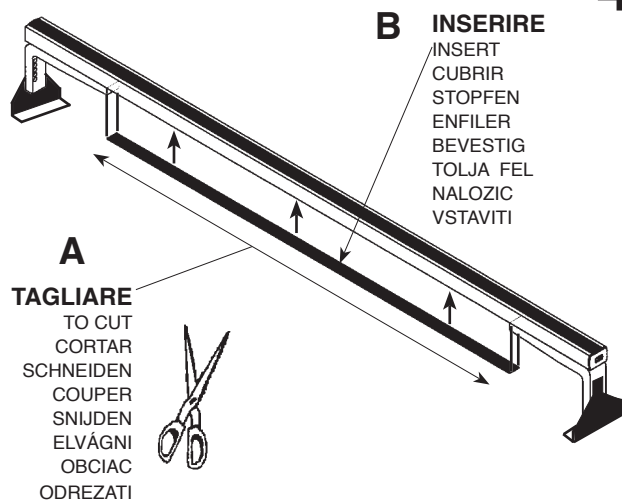

TAGLIARE

TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN
ELVÁGNI
OBCIAC
ODREZATI

B INSERIRE

INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOZIC
VSTAVITI