


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.

ATTENZIONE:


ISTRUZIONI PER BARRE IN FERRO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN FER - MOUNTING INSTRUCTIONS FOR BAR - CARRIERS MADE OF IRON - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN HIERRO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS EISEN.

1**AVVITARE**

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

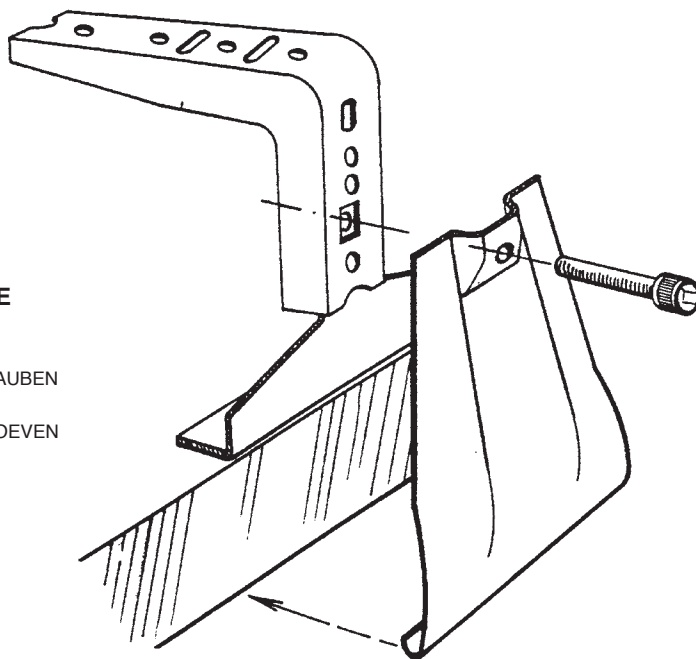**2****AVVITARE**

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

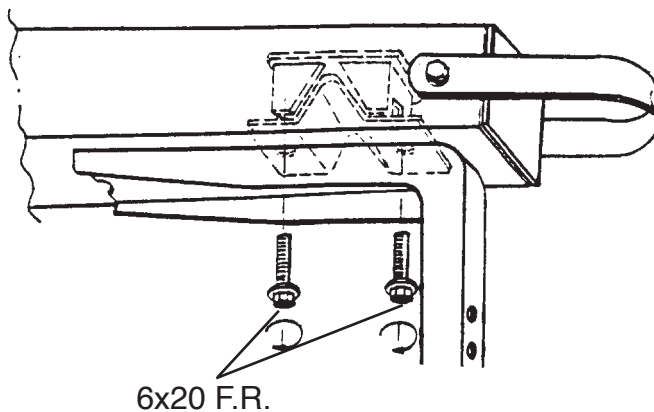


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAŻU - NAVODILA O MONTAŽI.

ATTENZIONE:

ISTRUZIONI PER BARRE IN ALLUMINIO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN ALUMINIUM - MOUNTING INSTRUCTIONS FOR BAR-CARRIERS MADE OF ALUMINIUM - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN ALUMINIO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS ALUMINIUM.


1

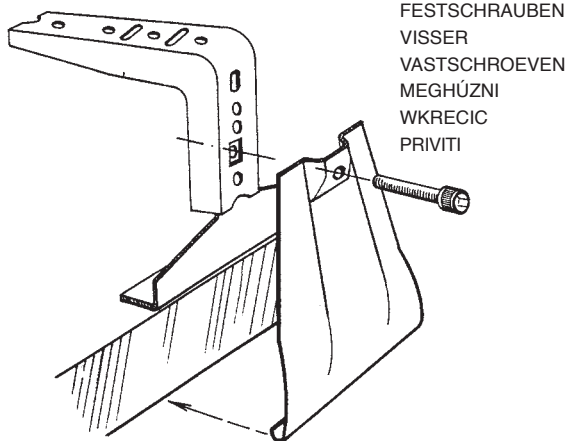

2

INSERIRE

INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOZIC
VSTAVITI

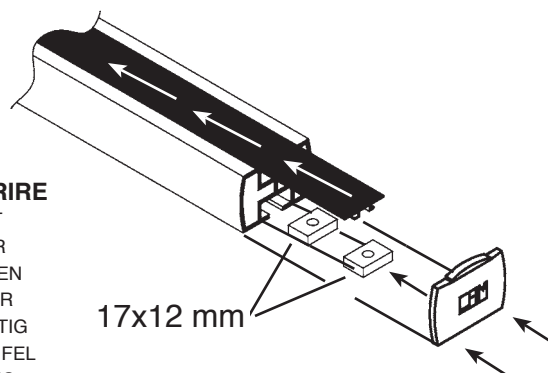


3

AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

6x14 F.R.

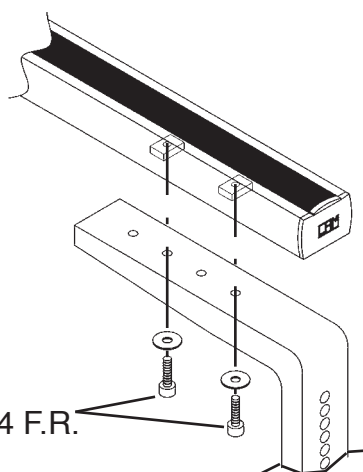

4

A

TAGLIARE

TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN
ELVÁGNI
OBCIAC
ODREZATI



B

INSERIRE

INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG
TOLJA FEL
NALOZIC
VSTAVITI

