

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN -
INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.


ATTENZIONE:

ISTRUZIONI PER BARRE IN FERRO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN FER -
MOUNTING INSTRUCTIONS FOR BAR - CARRIERS MADE OF IRON - INSTRUCCIONES DE MONTAJE PARA BARRAS
PORTATODO EN HIERRO - MONTAGEANWEISUNGEN FÜR LASTENTRÄGER AUS EISEN.

1

AVVITARE


TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

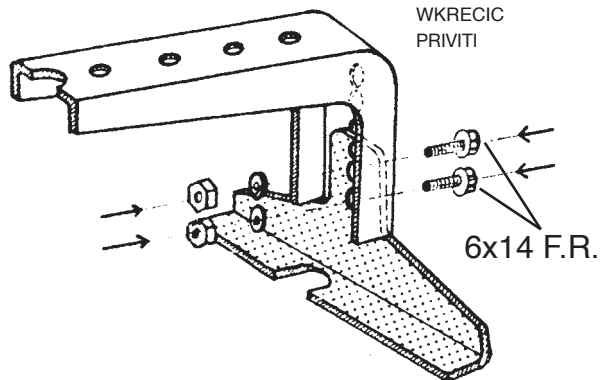

2

AVVITARE


TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

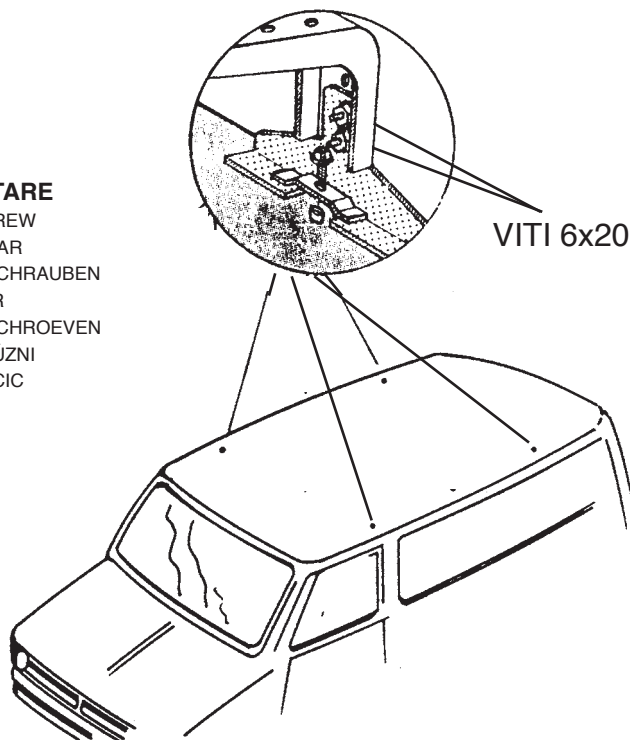

3

AVVITARE

TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN
MEGHÚZNI
WKRECIC
PRIVITI

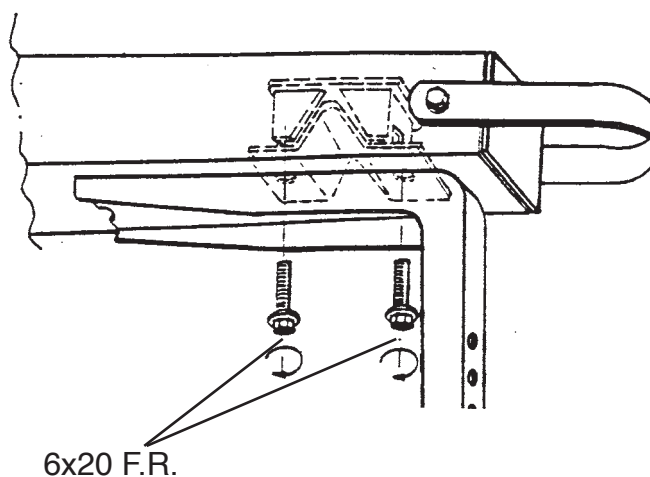


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES - SZERELÉSI UTASÍTÁS - INSTRUKCJA MONTAZU - NAVODILA O MONTAŽI.


ATTENZIONE:

ISTRUZIONI PER BARRE IN ALLUMINIO - NOTICES DE MONTAGE POUR BARRES DE PORTAGE EN ALUMINIUM - MOUNTING INSTRUCTIONS FOR BAR-CARRIERS MADE OF ALUMINIUM - INSTRUCCIONES DE MONTAJE PARA BARRAS PORTATODO EN ALUMINIO - MONTAGEANWEISUNGEN FUER LASTENTRAEGER AUS ALUMINIUM.


1

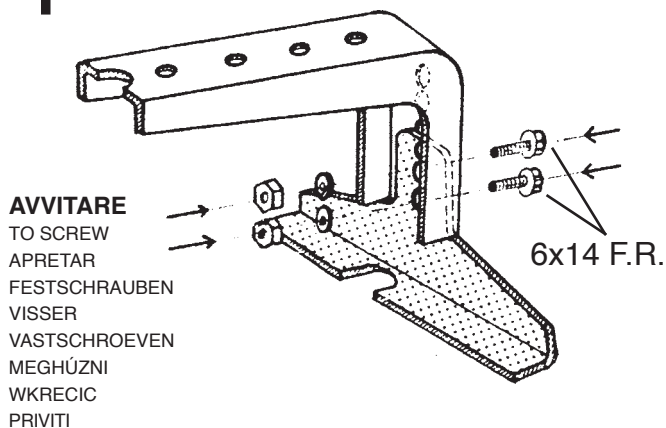


2

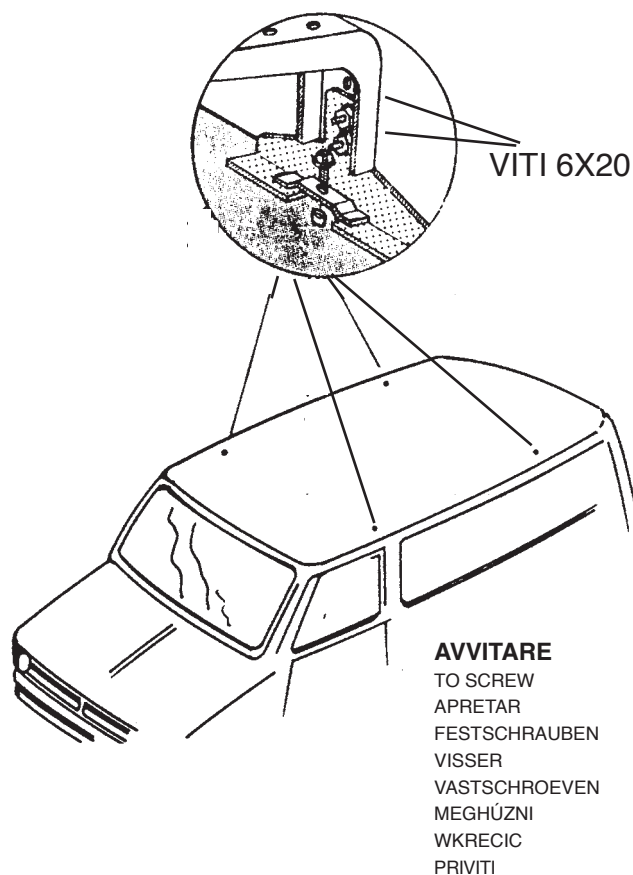

3

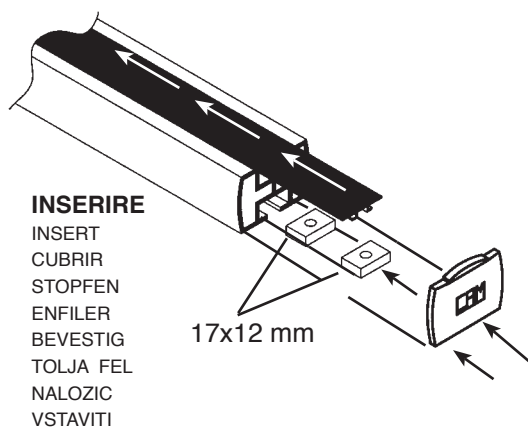

4

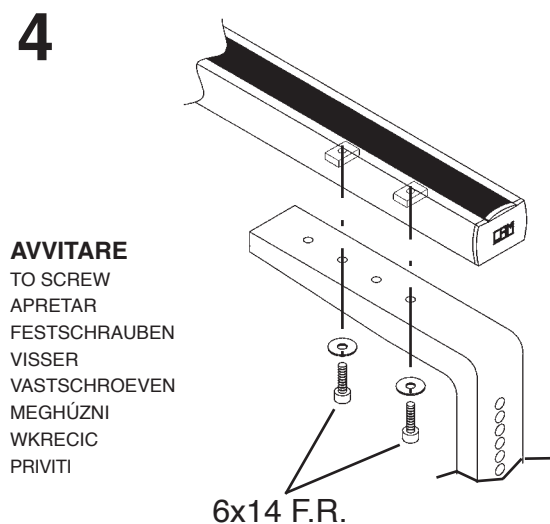

5

