


19000

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

AUTO CON GOCCIOLATOIO - CARS PROVIDED WITH RAIN GUTTER - COCHES CON VIERTEAGUAS - WAGEN MIT REGENRINNE - VOITURE AVEC GOUTTIÈRE - AUTO MET DAKGOOT.


1

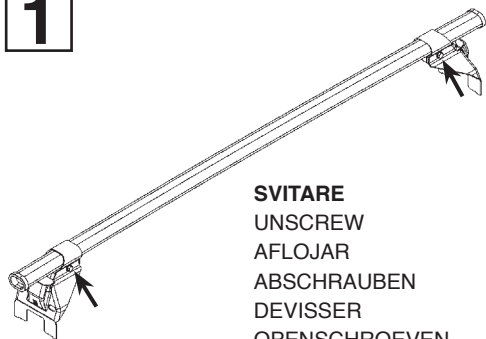

SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

MONTAGGIO GANASCINE


HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

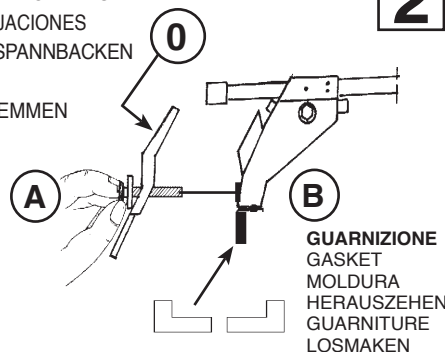

2

GUARNIZIONE
GASKET
MOLDURA
HERAUSZEHEN
GUARNITURE
LOSMAKEN

3

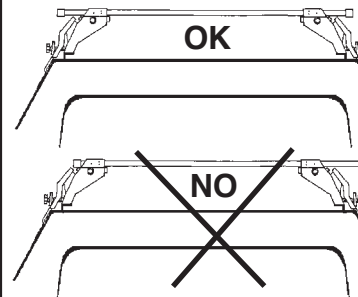


CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF
CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO
LASTENTRÄGER AUF DEM DACH
ZENTRIEREN
CENTRER LE PORTE-TOUT SUR LE TOIT
PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

4

AVVITARE (A FONDO)

TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

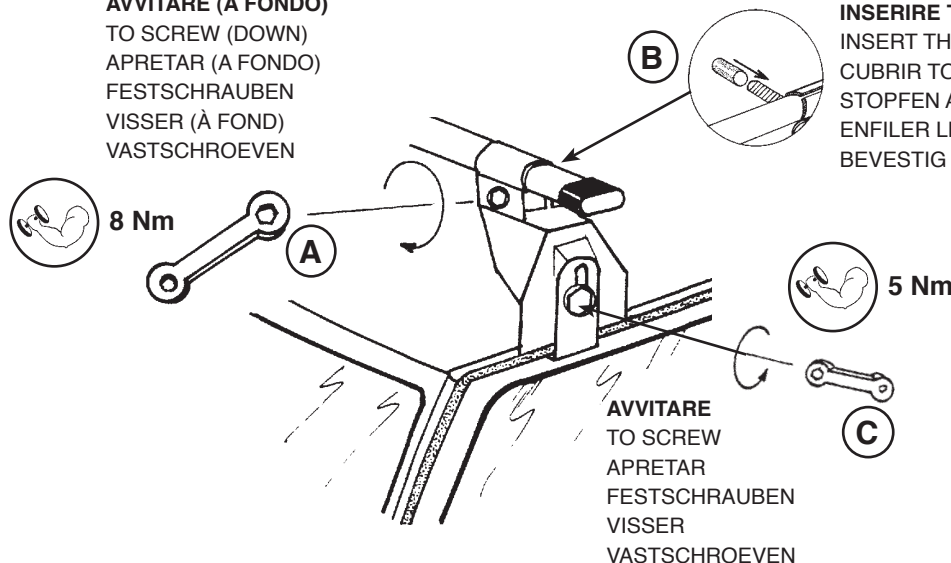

INSERIRE TAPPO SU VITE

INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN



S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy