


19017


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

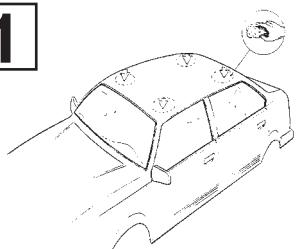


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

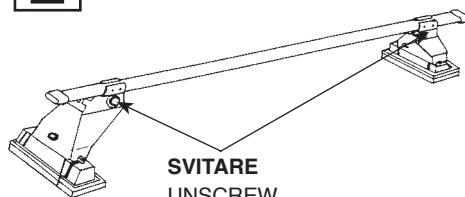


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

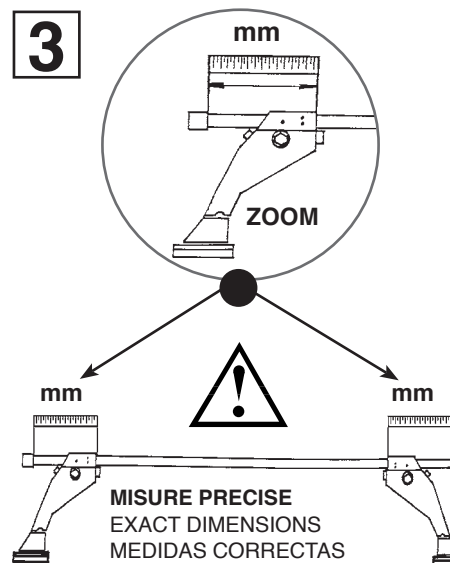

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN



MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO


ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
---	---

X Y

	X	Y
RENAULT R19 5P	148 mm	148 mm
RENAULT CLIO 5P (->97)	148 mm	148 mm


4

AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

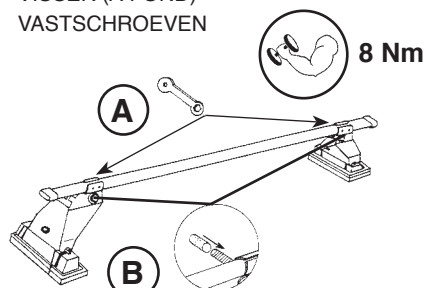


INSERIRE TAPPO SU VITE
INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF

5

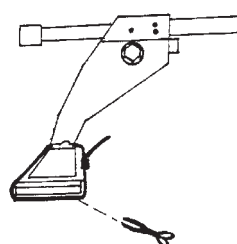

TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6

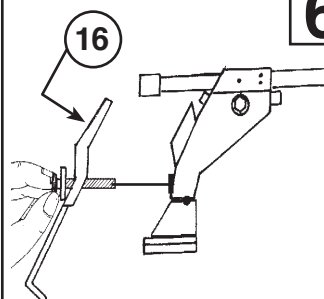

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

7

CENTRARE IL P. TUTTO SUL TETTO


CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

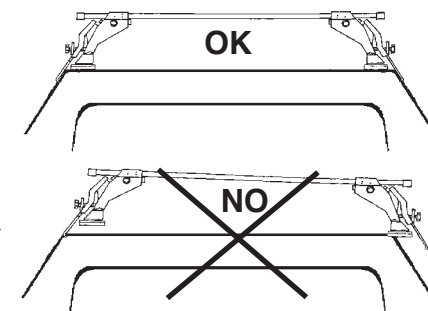

MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER


MODELOS CON PREDISPOSICION DEL FABRICANTE

AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR


AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN

“À TROUVER SUR LE BATTANT DE LA PORTE OU
DANS LE MANUAL TECHNIQUE DE LA VOITURE “

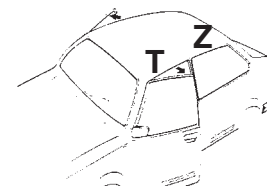

MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE	POSTERIORE
FRONT	REAR
DELANTERO	TRASERO
VORDERE	HINTERE
AVANT	ARRIERE
VOORSTE G.	ACHTERSTE G.

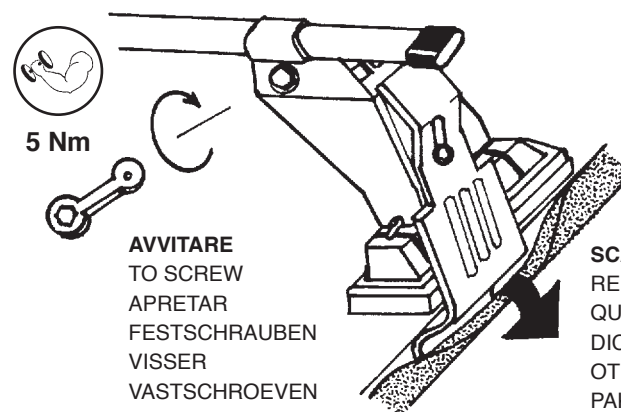RENAULT R19 5P.**T****Z****RENAULT CLIO 5P (->97)****T****Z**

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

SCALZARE LA GUARNIZIONE
REMOVE THE GASKET
QUITE LA MOLDURA
DICHTUNG HERAUSZIEHEN
OTER LE JOINT
PAKKUNG LOSMAKEN

