


19032


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

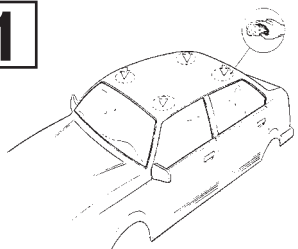


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

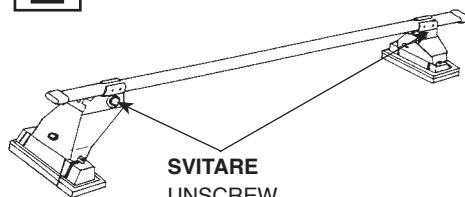


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

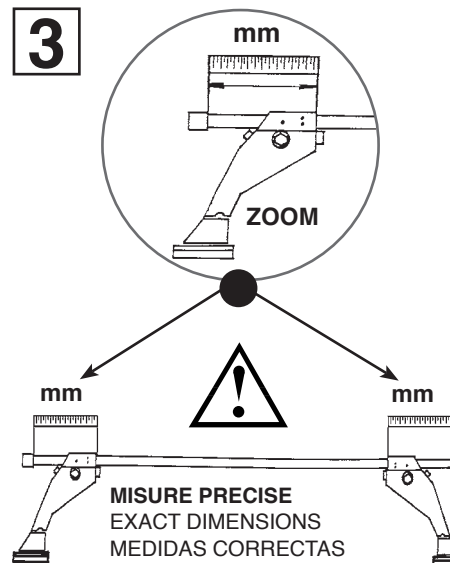

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN



MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

CITROEN SAXO 3P

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

X


Y

150 mm

168 mm

4

AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

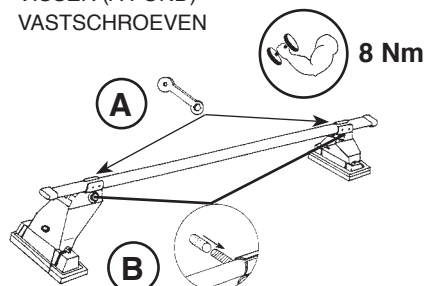


8 Nm

INSERIRE TAPPO SU VITE

INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF

5

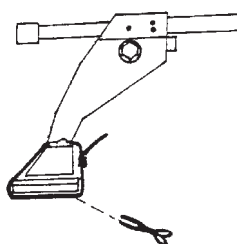


TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6

MODELLI AUTO
CARS
COCHES
WAGEN
VOITURES
AUTO

CITROEN SAXO 3P

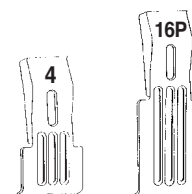


ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
--	--

4


16P

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

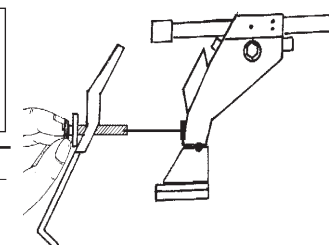

7


OPTIMUM

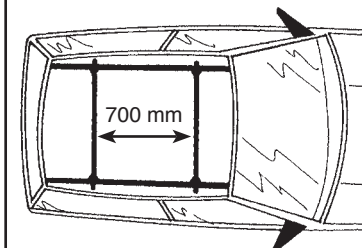

8

CENTRARE IL P. TUTTO SUL TETTOCENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOFCENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHOLASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

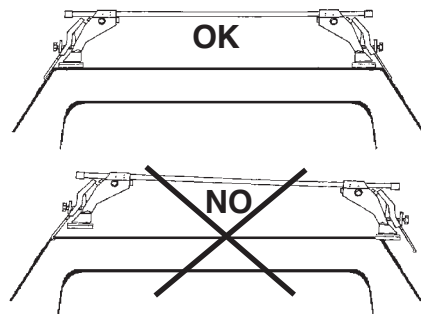PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK**MODELLI SENZA PREDISPOSIZIONE DELLA CASA AUTO**

CARS WITHOUT PRE-EXISTING FIXING POINT

PARA COCHES SIN PREDISPOSICION DEL FABRICANTE

AUTOS OHNE VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES SANS POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR


AUTO'S ZONDER DOOR DE FABRIKANT VOORZIENE BEVESTIGINGSPUNTEN

9



ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIÈRE ACHTERSTE G.
---	---

T Z

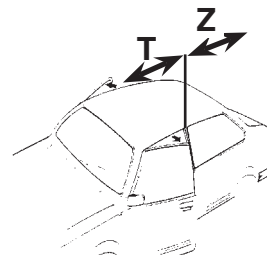MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO**CITROEN SAXO 3P** 280 mm 320 mm

10

ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.**AVVITARE**
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

11

POSTERIORE
REAR
TRASERO
HINTERE
ARRIÈRE
ACHTERSTE G.**AVVITARE**
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

5 Nm

SCALZARE LA GUARNIZIONE
REMOVE THE GASKET
QUITE LA MOLDURA
DICHTUNG HERAUSZIEHEN
OTER LE JOINT
PAKKUNG LOSMAKEN**VETRO APRIBILE**
OPENING WINDOW
CRISTAL ABATIBLE
ZU ÖFFNENDE GLASSCHEIBE
GLACE OUVRABLE
TE OPENEN RUIT**AVVITARE**
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy