

19049

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER


MODELOS CON PREDISPOSICION DEL FABRICANTE

AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN

CITROEN: C4 BERLINA (->10)
CITROEN: C4 COUPE' (->10)

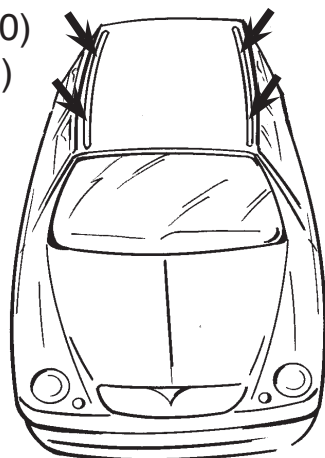


2




SVITARE
 UNSCREW
 AFLOJAR
 ABSCHRAUBEN
 DEVISSER
 OPENSCHROEVEN

3

EXEMPLE

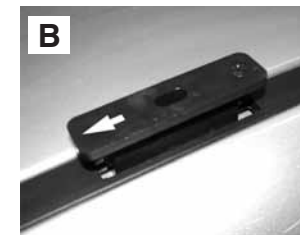

“À TROUVER SUR LE BATTANT DE LA PORTE OU
 DANS LE MANUAL TECHNIQUE DE LA VOITURE “



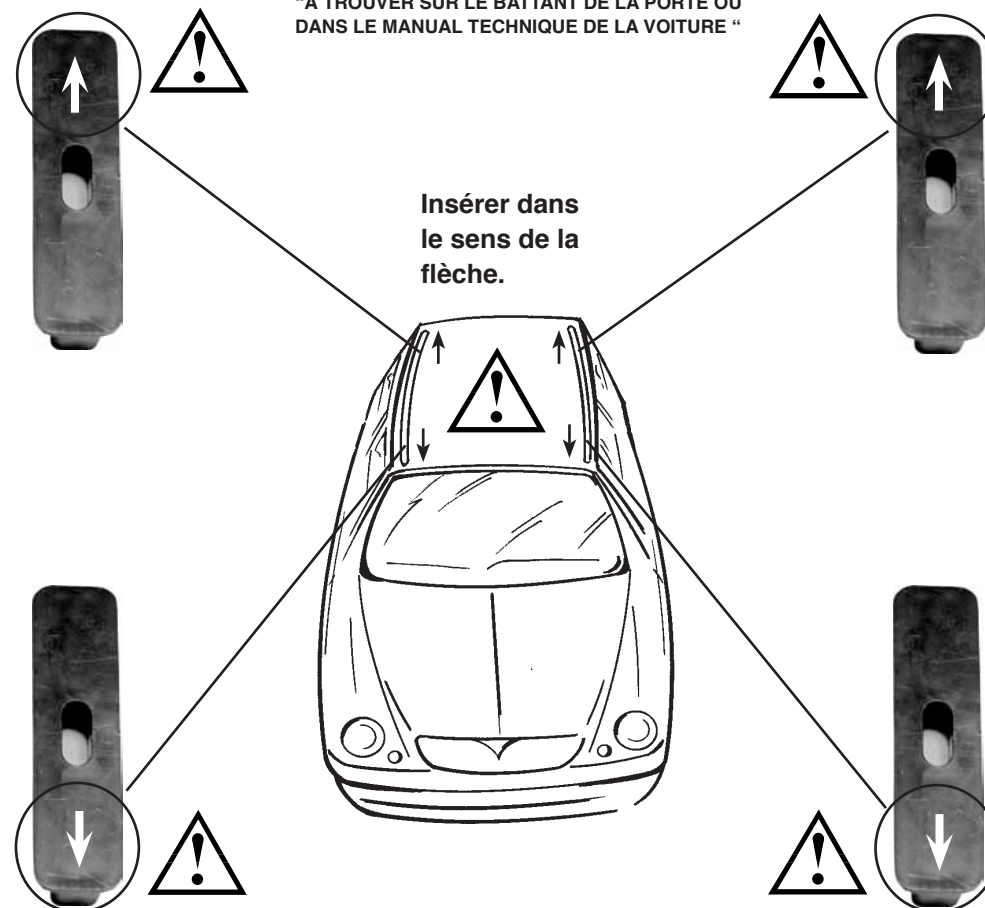


4


AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN



5 Nm

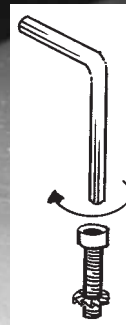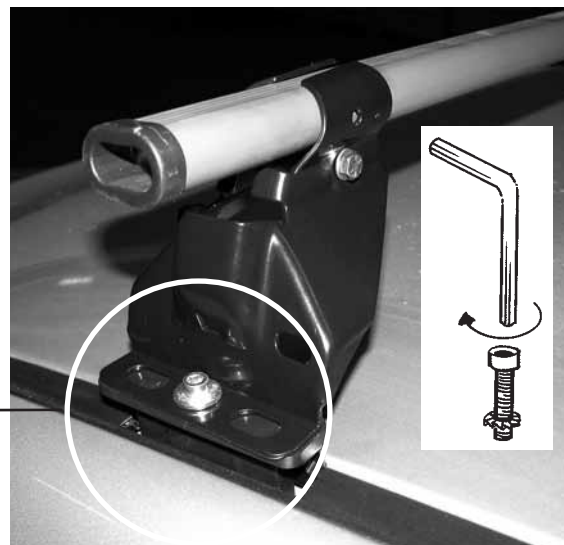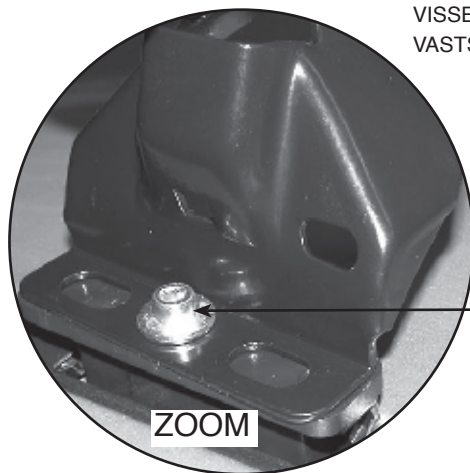

5

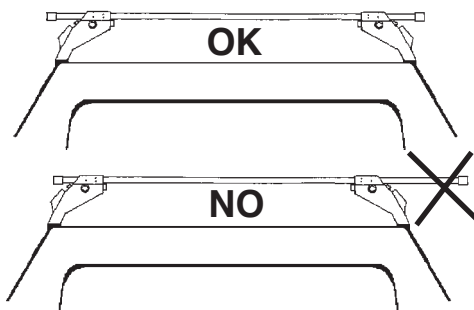

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF


CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

6

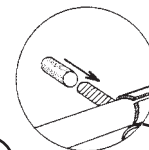

(B)

INSERIRE TAPPO SU VITE


INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF

(A)

AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN



8 Nm

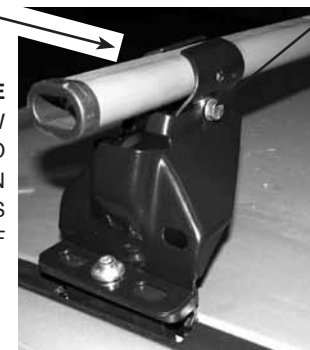

S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy