


19061


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

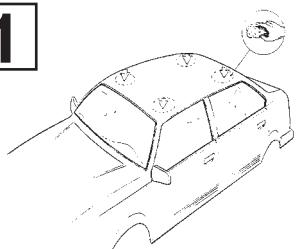


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

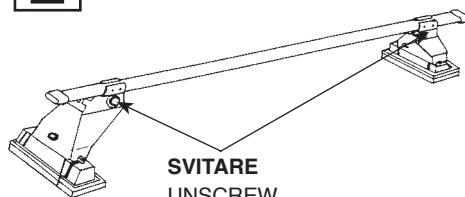


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

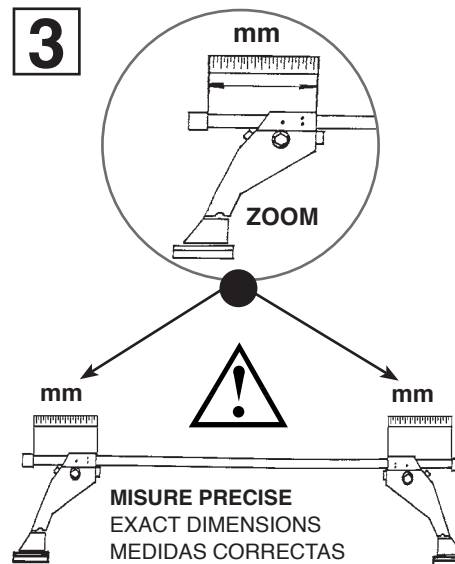

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN



MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO


ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
---	---

X Y

CITROEN C3 (->09)	94 mm	103 mm
TOYOTA YARIS 5P (->05)	109 mm	124 mm

4


AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

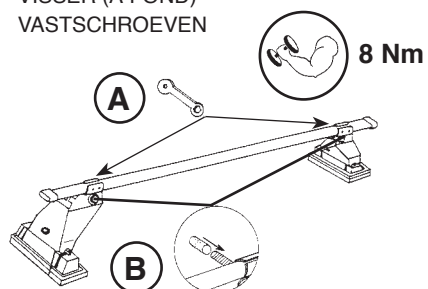

INSERIRE TAPPO SU VITE


INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF

5

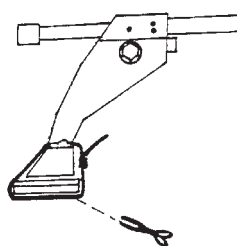


TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6

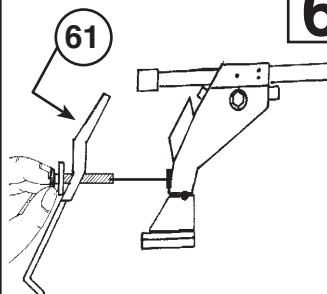

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN


7

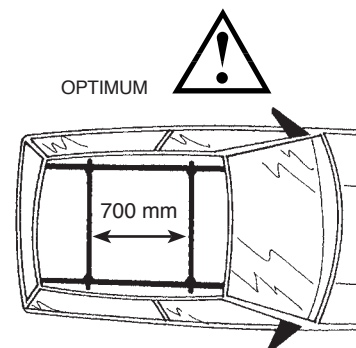

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF
CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO
LASTENTRÄGER AUF DEM DACH
ZENTRIEREN
CENTRER LE PORTE-TOUT SUR LE TOIT
PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

8

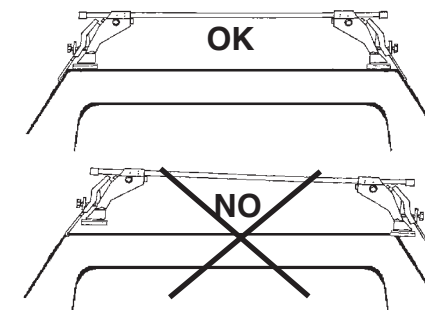

MODELLI SENZA PREDISPOSIZIONE DELLA CASA AUTO


CARS WITHOUT PRE-EXISTING FIXING POINT

PARA COCHES SIN PREDISPOSICION DEL FABRICANTE

AUTOS OHNE VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES SANS POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S ZONDER DOOR DE FABRIKANT VOORZIENE BEVESTIGINGSPUNTEN

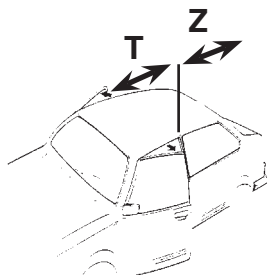

MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE
FRONT
DELANTERO
VORDERE
AVANT
VOORSTE G.

POSTERIORE
REAR
TRASERO
HINTERE
ARRIERE
ACHTERSTE G.

**CITROEN C3 (->09)****250 mm****350 mm****TOYOTA YARIS 5P (->05)****200 mm****500 mm**

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSE
VASTSCHROEVEN

