

19085

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO

CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER

MODELOS CON PREDISPOSICION DEL FABRICANTE

AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES AVEC POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN

1

CITROEN: NEW C5 (08->)


"À TROUVER SUR LE BATTANT DE LA PORTE OU
DANS LE MANUAL TECHNIQUE DE LA VOITURE "

CITROEN: C6 5P


PEUGEOT: 207 3-5P

PEUGEOT: 308


PEUGEOT: 407 BERLINA (05->)

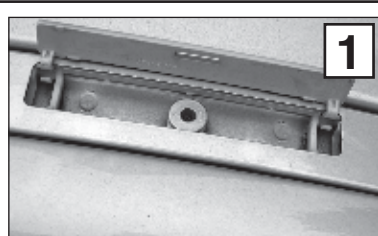


1

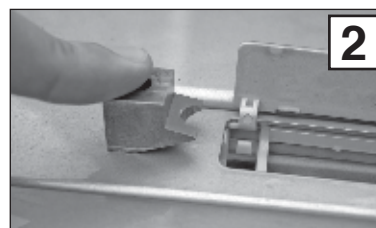


2

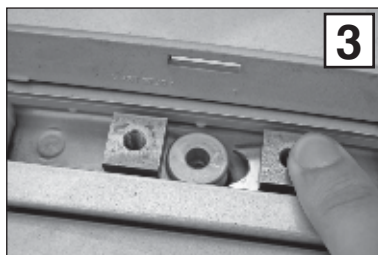


3

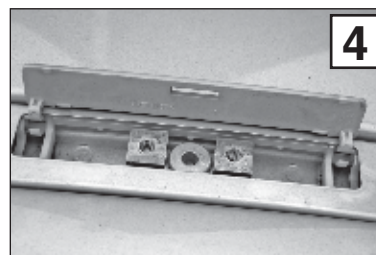






4

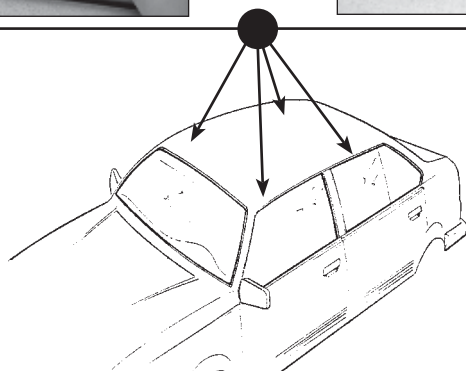

2

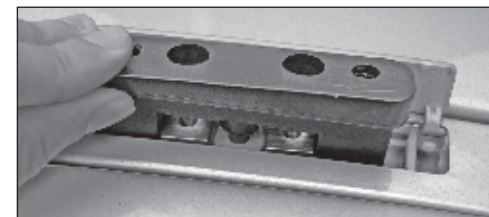

INSERIRE
INSERT
CUBRIR
STOPFEN
ENFILER
BEVESTIG

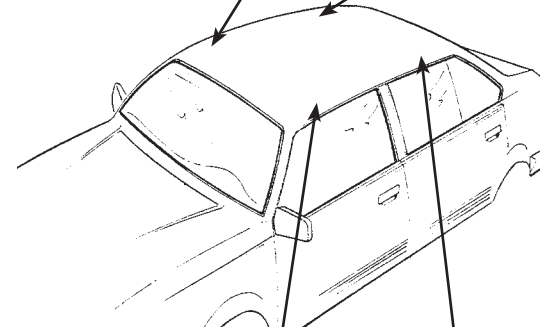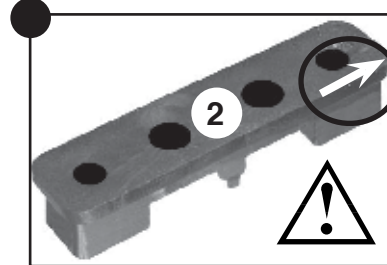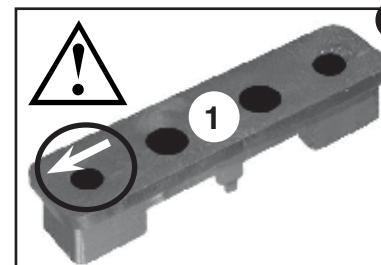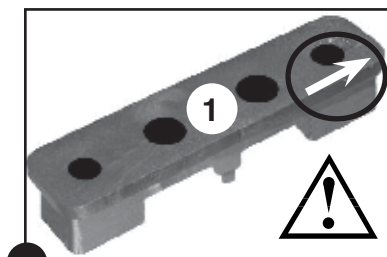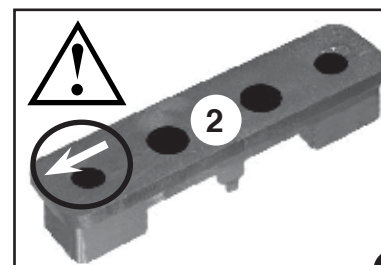


3




5 Nm

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

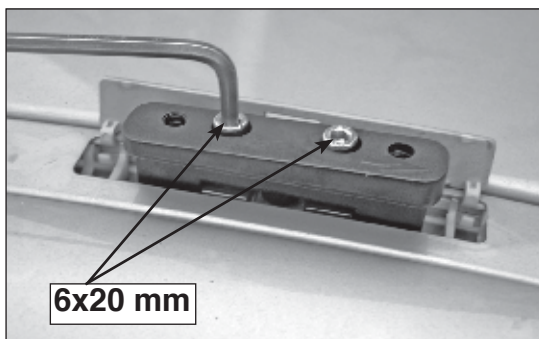

6x20 mm

6

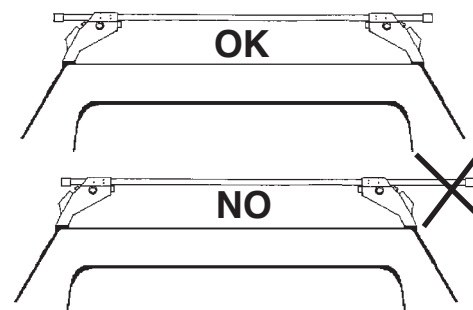

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

4




SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

5




5 Nm

AVVITARE
TO SCREW
APRETAR
FESTSCHRAUBEN
VISSER
VASTSCHROEVEN

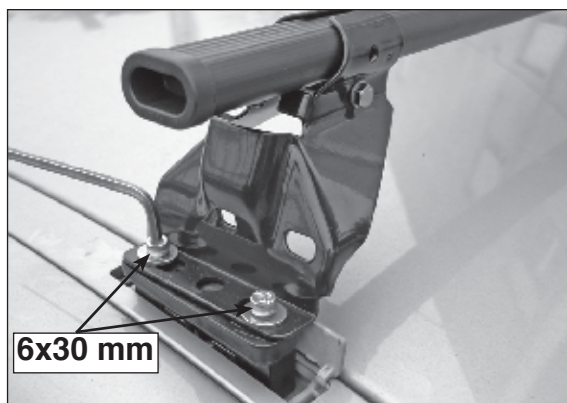

6x30 mm

7

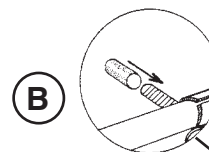

INSERIRE TAPPO SU VITE


INSERT THE CAP ON THE SCREW

CUBRIR TORNILLO CON SU PLASTICO

STOPFEN AUF DIE SCHRAUBE EINSETZEN

ENFILER LE CAPUCHON SUR LA VIS

BEVESTIG DE DOP OP DE SCHROEF

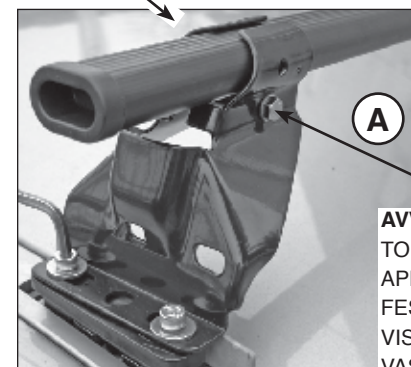

A



8 Nm

AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN



S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy