


19100


ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

1

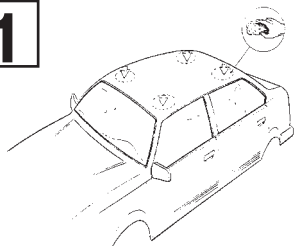


PULIRE IL TETTO
CLEAN THE ROOF
LIMPIAR EL TECHO
DACH REINIGEN
NETTOYER LE TOIT
DAK SCHOONMAKEN

2

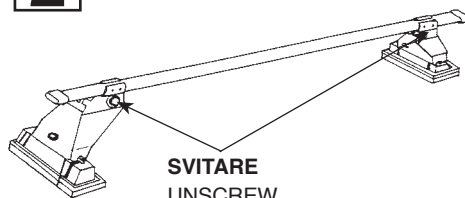


SVITARE
UNSCREW
AFLOJAR
ABSCHRAUBEN
DEVISSER
OPENSCHROEVEN

3

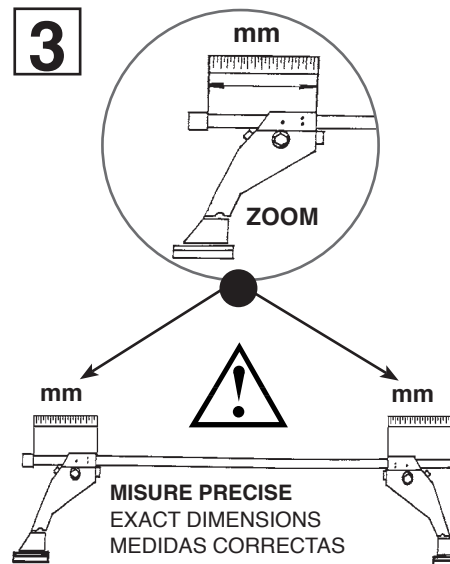

MISURE PRECISE
EXACT DIMENSIONS
MEDIDAS CORRECTAS
GENAUE MASSE
REGLER A LA COTE EXACTE
EXACTE AFMETINGEN




MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
X	Y

CITROEN C4 PICASSO 5 POSTI NO RAILS	68 mm	92 mm
CITROEN GRAND C4 PICASSO 7 POSTI No Rails	68 mm	99 mm

4


AVVITARE (A FONDO)
TO SCREW (DOWN)
APRETAR (A FONDO)
FESTSCHRAUBEN
VISSER (À FOND)
VASTSCHROEVEN

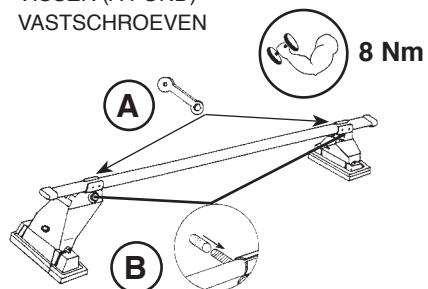

8 Nm


INSERIRE TAPPO SU VITE
INSERT THE CAP ON THE SCREW
CUBRIR TORNILLO CON SU PLASTICO
STOPFEN AUF DIE SCHRAUBE EINSETZEN
ENFILER LE CAPUCHON SUR LA VIS
BEVESTIG DE DOP OP DE SCHROEF

5

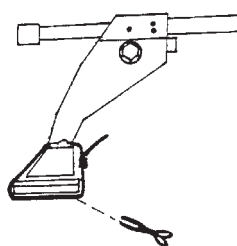


TAGLIARE
TO CUT
CORTAR
SCHNEIDEN
COUPER
SNIJDEN

6

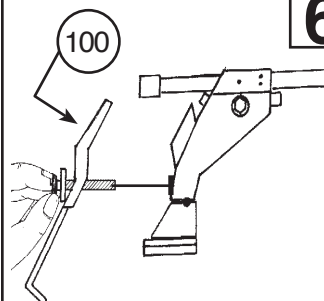

MONTAGGIO GANASCINE
HOW TO ASSEMBLE THE CLAMPS
COMO MONTAR LAS FIJACIONES
ZUSAMMENBAU DER SPANNBACKEN
MONTAGE PATTE
MONTAGE VAN DE KLEMMEN

7

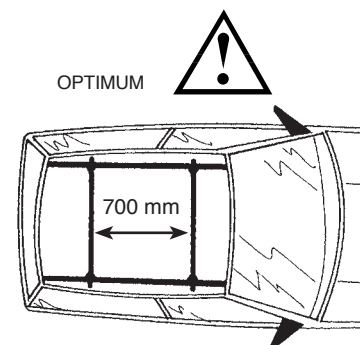

OPTIMUM

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
CARRIER ON THE ROOF


CENTRAR EL PORTAEQUIPAJES
SOBRE EL TECHO


LASTENTRÄGER AUF DEM DACH
ZENTRIEREN

CENTRER LE PORTE-TOUT SUR LE TOIT

PLAATS DE UNIVERSELE DRAGER
IN HET MIDDEN VAN HET DAK

8

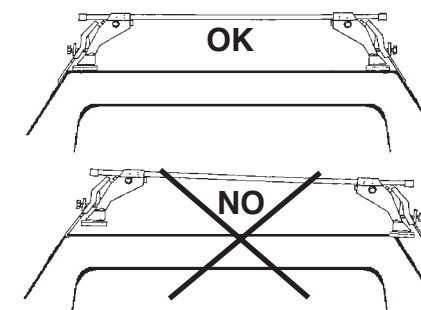

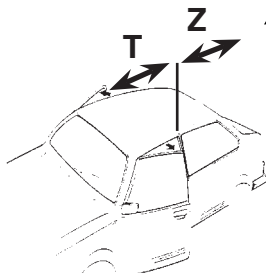

MODELLI AUTO / CARS / COCHES
WAGEN / VOITURES / AUTO

ANTERIORE FRONT DELANTERO VORDERE AVANT VOORSTE G.	POSTERIORE REAR TRASERO HINTERE ARRIERE ACHTERSTE G.
T	Z

CITROEN C4 PICASSO 5 POSTI NO RAILS	190 mm	400 mm
CITROEN GRAND C4 PICASSO 7 POSTI No rails	220 mm	480 mm

MODELLI SENZA PREDISPOSIZIONE DELLA CASA AUTO

CARS WITHOUT PRE-EXISTING FIXING POINT

PARA COCHES SIN PREDISPOSICION DEL FABRICANTE

AUTOS OHNE VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE

VOITURES SANS POINTS DE RÉPÈRE PRÉVUS PAR LE CONSTRUCTEUR

AUTO'S ZONDER DOOR DE FABRIKANT VOORZIENE BEVESTIGINGSPUNTEN

AVVITARE

TO SCREW

APRETAR

FESTSCHRAUBEN

VISSER

VASTSCHROEVEN

