


19601

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.


CITROEN: C5 (->08) - PEUGEOT: 307 - 607

1

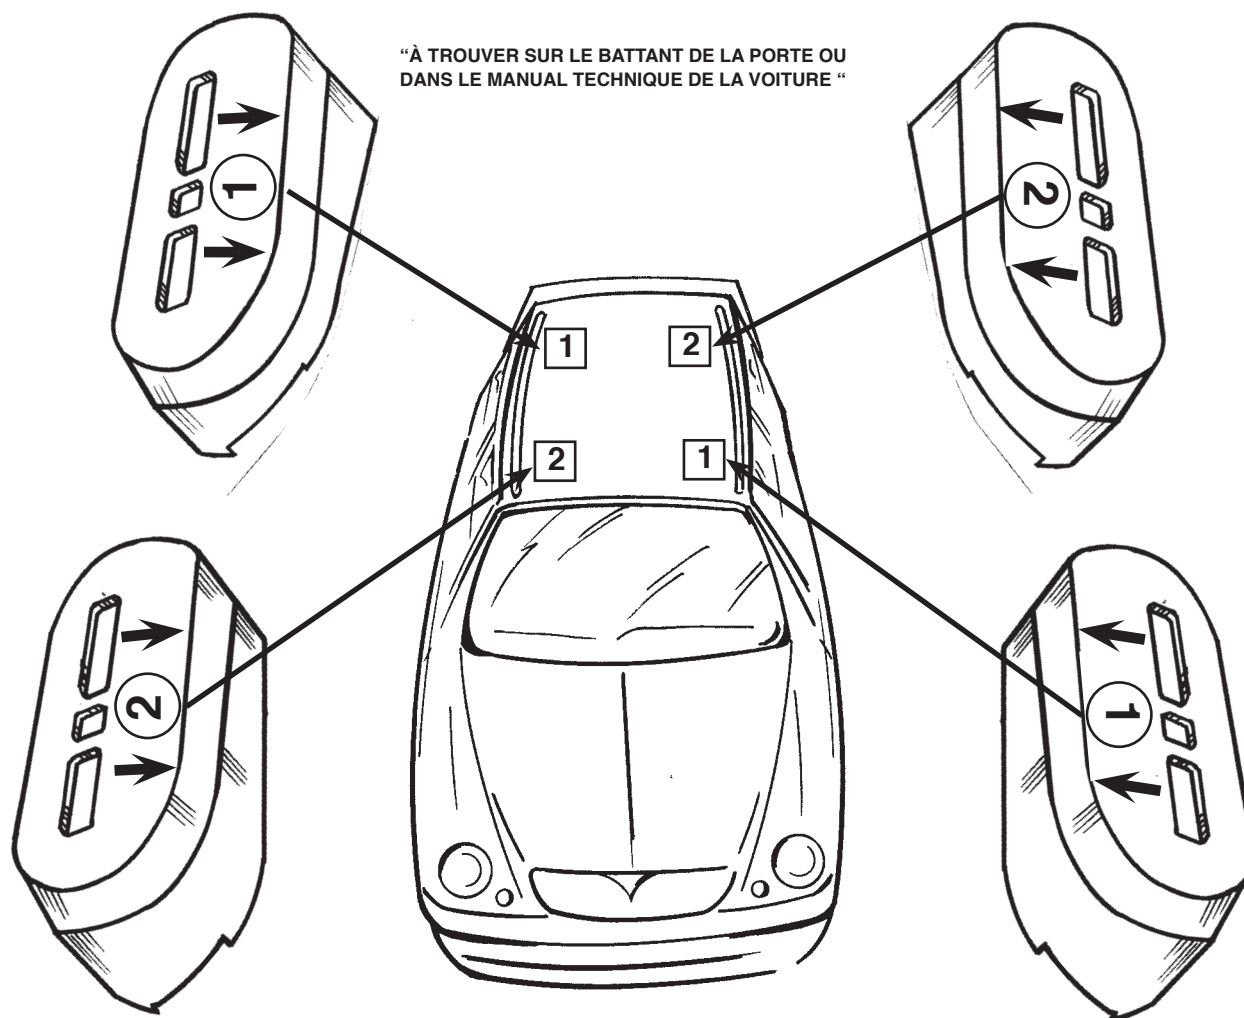

2

TETTO VETTURE
 ROOF AUTO
 TOIT VOITURE
 DACH AUTOMOBILE
 AZOTEA AUTOMOVIL
 DACH AUTO

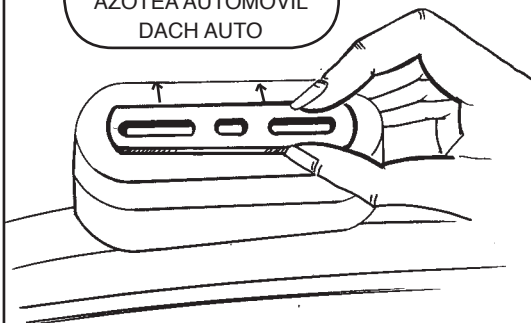


3A

CITROEN: C5 (->08)
PEUGEOT: 607





5 Nm

AVVITARE
 TO SCREW
 APRETAR
 FESTSCHRAUBEN
 VISSER
 VASTSCHROEVEN

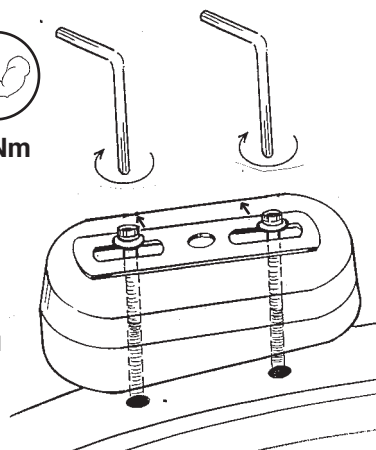


3B

PEUGEOT: 307

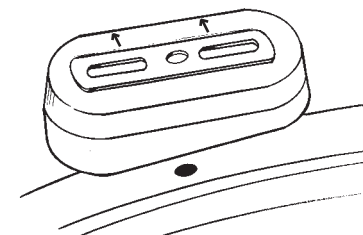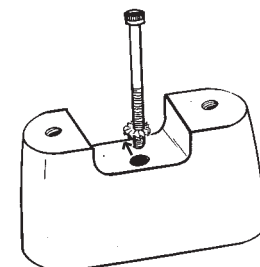

4

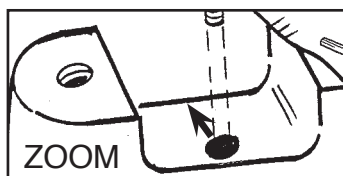


ZOOM



5 Nm


AVVITARE
 TO SCREW
 APRETAR
 FESTSCHRAUBEN
 VISSER
 VASTSCHROEVEN

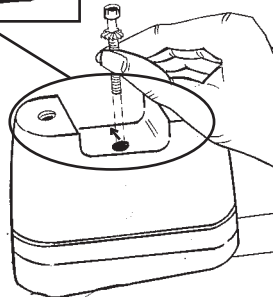

5

NO


OK

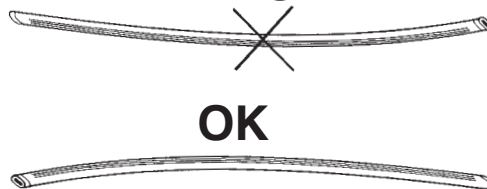

6

NO =

OK =

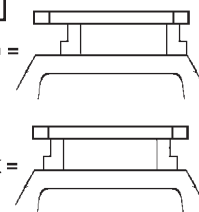

CENTRARE IL P. TUTTO SUL TETTO

CENTRE THE UNIVERSAL BAR
 CARRIER ON THE ROOF

CENTRAR EL PORTAEQUIPAJES
 SOBRE EL TECHO

LASTENTRÄGER AUF DEM DACH
 ZENTRIEREN


CENTRER LE PORTE-TOUT SUR LE TOIT
 PLAATS DE UNIVERSELE DRAGER
 IN HET MIDDEN VAN HET DAK

7

AVVITARE
 TO SCREW
 APRETAR
 FESTSCHRAUBEN
 VISSER
 VASTSCHROEVEN



5 Nm

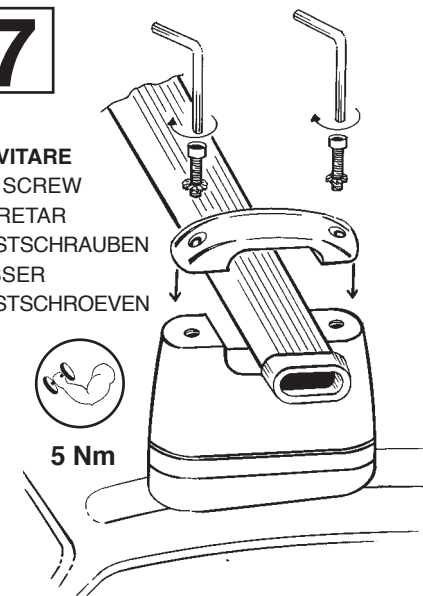

S.r.l. Via Canova N° 53 CAP. 20020 Lainate (MI) Italy