


(IT) **Attenzione:** Istruzioni di montaggio per barre in alluminio. (GB) **Attention:** Mounting instructions for aluminium bar carriers. (E) **Atencion:** Instrucciones de montaje para barras portatodo en aluminio. (D) **Achtung:** Montageanweisungen für Aluminium-Lastenträger. (F) **Attention:** Notices de montage pour barres de portage en aluminium. (NL) **Attentie:** Handleiding voor dakdragers gemaakt van aluminium. (P) **Atenção:** Instruções de montagem para barras de tejadilho em alumínio. (H) **Szerelési utasítás** aluminium tartórudakhoz. (PL) **Uwaga:** Instrukcja montażu bagażników wykonanych ze aluminium. (SLO) **Pozor:** Navodila za montažo nosilcev prtljažnika - aluminijastih. (HR) **Uputstvo za montažu** aluminijaskih nosača.


1

A

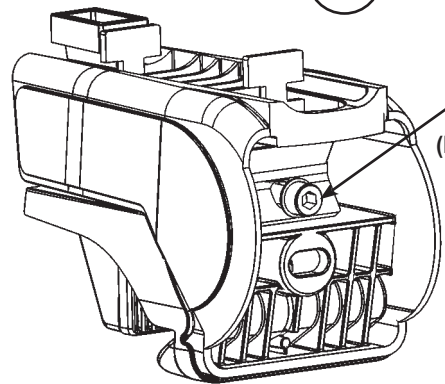


(IT) SVITARE  
(GB) UNSCREW  
(E) AFLOJAR  
(D) ABSCHRAUBEN  
(F) DEVISSER  
(NL) OPENSCHROEVEN  
(P) DESAPARAFUSAR  
(H) KICSAVARNI  
(PL) WYKRECIC  
(SLO) ODVITI  
(HR) ODVITI

B

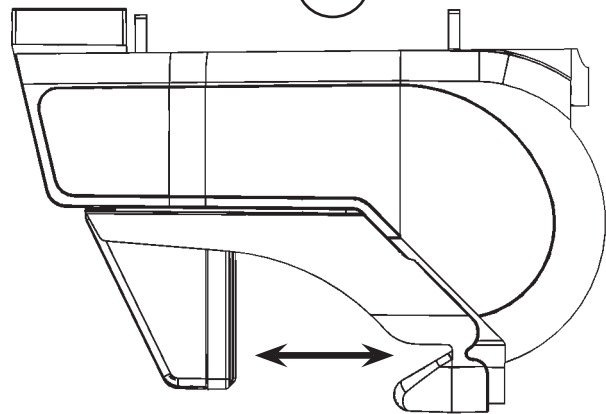


A

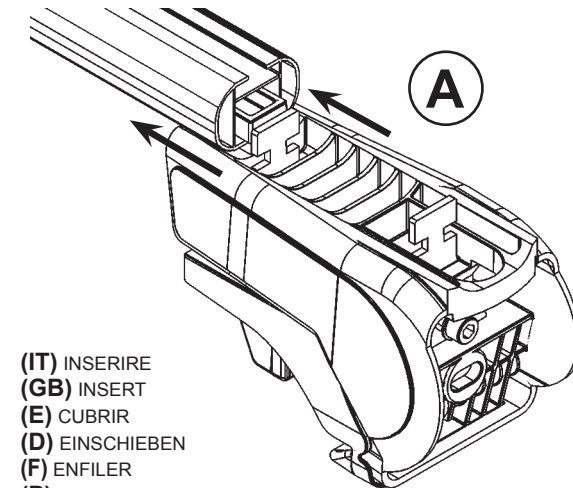

(IT) INSERIRE  
(GB) INSERT  
(E) CUBRIR  
(D) EINSCHIEBEN  
(F) ENFILER  
(P) INSERIR  
(NL) BEVESTIG  
(H) TOLJA FEL  
(PL) NALOZIC  
(SLO) VSTAVITI  
(HR) PREKRITI


B

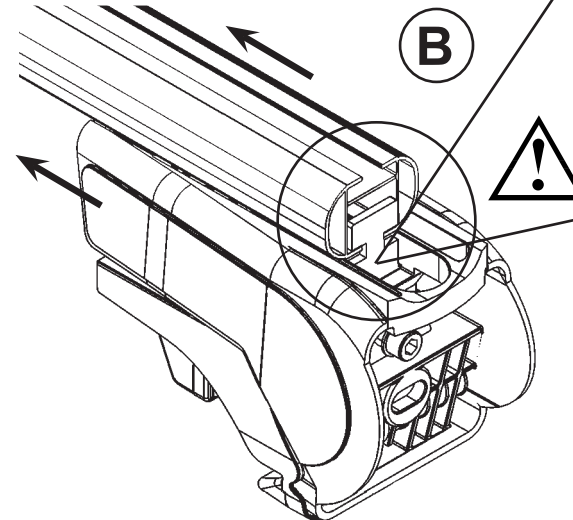


90°

OK


2

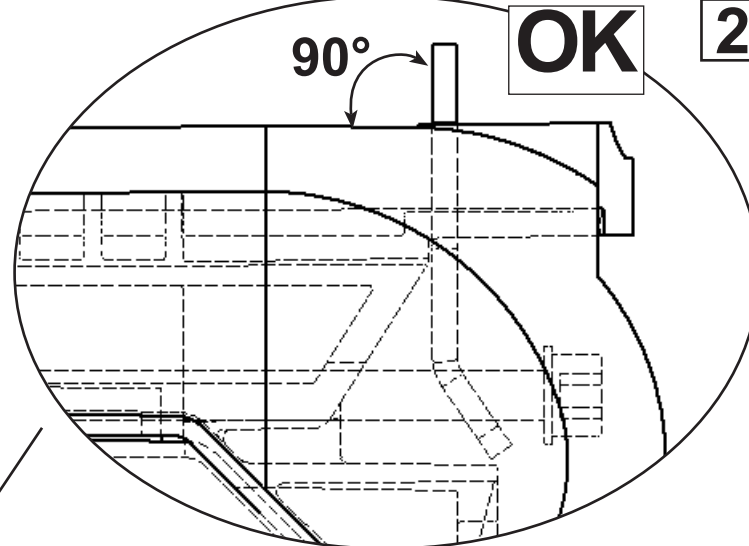

NO

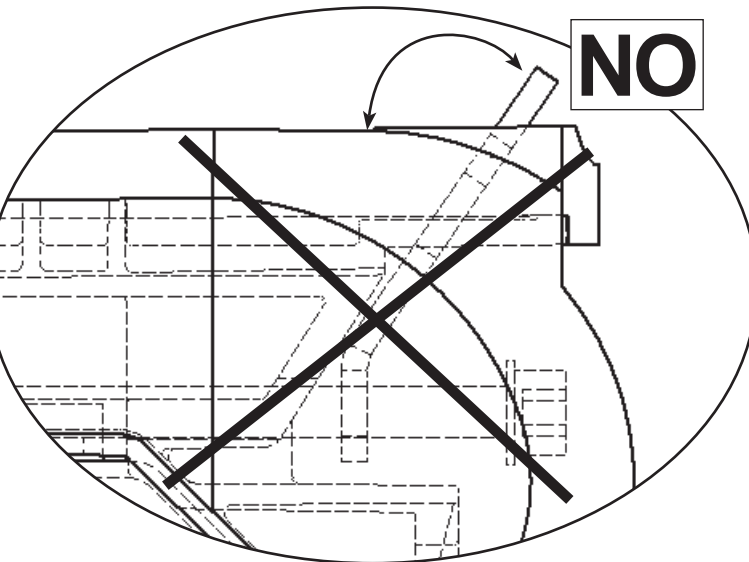


3

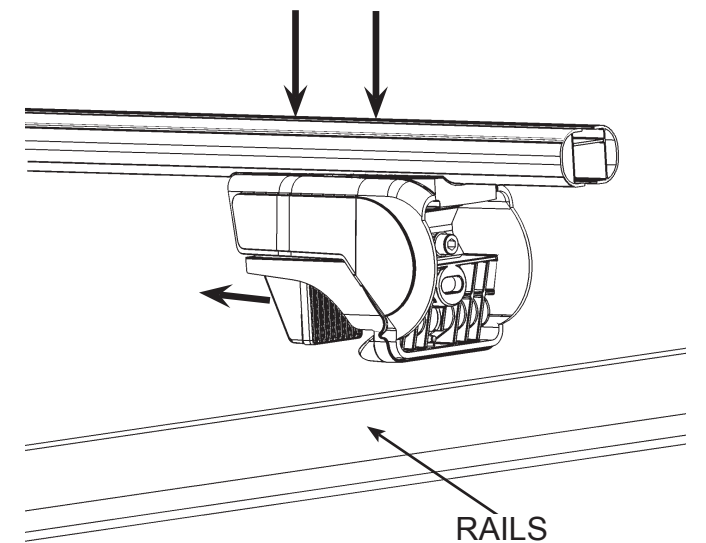


4


(IT) CENTRARE IL P. TUTTO SUL TETTO  
(GB) CENTRE THE UNIVERSAL BAR CARRIER ON THE ROOF  
(E) CENTRAR EL PORTAEQUIPAJES SOBRE EL TECHO  
(D) LASTENTRÄGER AUF DEM DACH ZENTRIEREN  
(F) CENTRER LE PORTE-TOUT SUR LE TOIT  
(NL) PLAATS DE UNIVERSELE DRAGER IN HET MIDDE VAN HET DAK  
(P) CENTRAR AS BARRAS PORTA BAGAGENS NO TEJADILHO  
(H) HELYEZSE KÖZÉPRE A RUDAKAT  
(PL) WYSRODKOWAC BAGAZNIK NA DACHU  
(SLO) CENTRIRATI PRTLJAŽNIK NA STREHO  
(HR) CENTRIRATI NOSAČE NA KROV

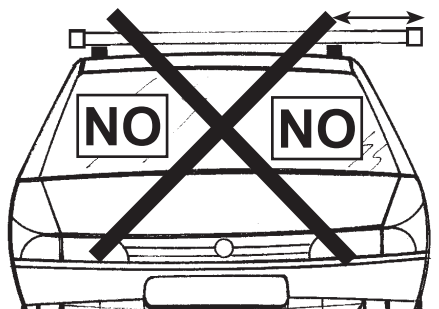

5

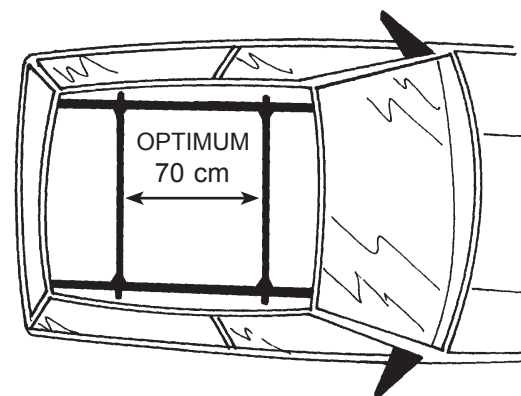

6

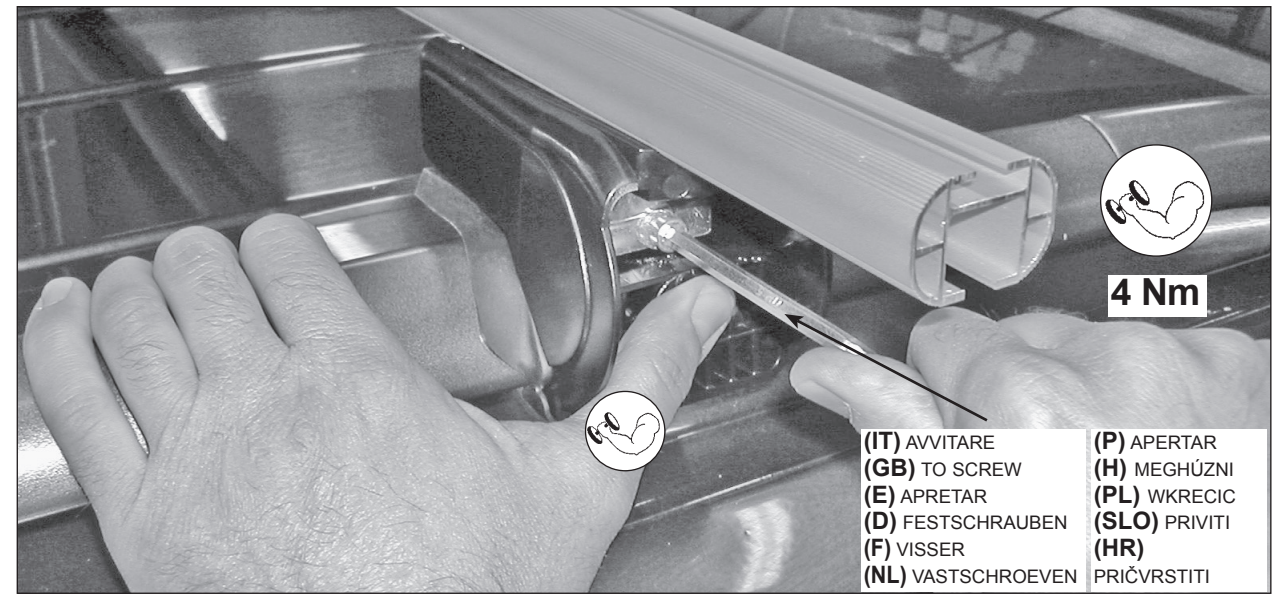

(IT) AVVITARE  
(GB) TO SCREW  
(E) APRETAR  
(D) FESTSCHRAUBEN  
(F) VISSER  
(NL) VASTSCHROEVEN

(P) APERTAR  
(H) MEGHÚZNI  
(PL) WKRECIC  
(SLO) PRIVITI  
(HR) PRIČVRSTITI

