



2161

(IT) **Attenzione:** Istruzioni di montaggio per barre in alluminio. (GB) **Attention:** Mounting instructions for aluminium bar carriers. (E) **Atencion:** Instrucciones de montaje para barras portatodo en aluminio. (D) **Achtung:** Montageanweisungen für Aluminium-Lastenträger. (F) **Attention:** Notices de montage pour barres de portage en aluminium. (NL) **Attentie:** Handleiding voor dakdragers gemaakt van aluminium. (P) **Atenção:** Instruções de montagem para barras de tejadilho em alumínio. (H) Szerelési utasítás alumínium tartórudakhoz. (PL) **Uwaga:** Instrukcja montażu dla belek aluminiowych. (SLO) **Pozor:** Navodila za montažo nosilcev prtljažnika - aluminijastih. (HR) Uputstvo za montažu aluminijaskih nosača.

1

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA BE
(PL) NAŁOŻIĆ
(SLO) VSTAVITI
(HR) UMETNUTI

2A

(IT) MODELLI AUTO (GB) CARS (E) COCHES (D) WAGEN (F) VOITURES (NL) AUTO (P) MODELO AUTO (H) AUTÓ TIPUS (PL) MODELE SAMOCHODÓW (SLO) MODELI AVTOMOBILOV (HR) MODELI AUTA	(IT) TIRANTE (GB) COUPLER (E) TIRANTE (D) KOPPLER (F) TIRANT (NL) TREKSTANG (H) RÖGZÍTŐ BETÉT (PL) ŁAPKA (SLO) SPOJ (HR) ZAKAČKA	(IT) MODELLI AUTO (GB) CARS (E) COCHES (D) WAGEN (F) VOITURES (NL) AUTO (P) MODELO AUTO (H) AUTÓ TIPUS (PL) MODELE SAMOCHODÓW (SLO) MODELI AVTOMOBILOV (HR) MODELI AUTA	(IT) TIRANTE (GB) COUPLER (E) TIRANTE (D) KOPPLER (F) TIRANT (NL) TREKSTANG (H) RÖGZÍTŐ BETÉT (PL) ŁAPKA (SLO) SPOJ (HR) ZAKAČKA	(IT) MODELLI AUTO (GB) CARS (E) COCHES (D) WAGEN (F) VOITURES (NL) AUTO (P) MODELO AUTO (H) AUTÓ TIPUS (PL) MODELE SAMOCHODÓW (SLO) MODELI AVTOMOBILOV (HR) MODELI AUTA	(IT) TIRANTE (GB) COUPLER (E) TIRANTE (D) KOPPLER (F) TIRANT (NL) TREKSTANG (H) RÖGZÍTŐ BETÉT (PL) ŁAPKA (SLO) SPOJ (HR) ZAKAČKA
AUDI A3 Sportback 5P (04→12)	1	FIAT Panda III (12→)	2	OPEL Zafira B (05→11)	1
AUDI A3 Sportback 5P (12→)	1	FIAT Panda III Cross 5P (14→) Railings	2	OPEL Zafira C (11→)	1
AUDI A4 Allroad SW (09→)	1	HONDA Civic IX Tourer SW (13→)	1	PEUGEOT 308 II SW (14→)	1
AUDI A4 Avant (08→15)	1	HYUNDAI ix35 (10→)	2	PEUGEOT 508 SW (11→)	2
AUDI A6 Avant (05→11)	1	KIA Sportage (10→)	2	SEAT Alhambra II MPV (13→)	1
AUDI A6 Allroad SW (12→)	1	MERCEDES Classe C SW (14→)	1	SEAT Altea XL (06→)	1
AUDI A6 Avant (11→)	1	MERCEDES Classe E SW Railings (09→)	1	SEAT Altea FreeTrack (07→)	1
AUDI Q3 (11→)	1	MERCEDES Classe M SUV Railings (11→)	2	SEAT Ibiza ST (10→)	1
AUDI Q5 (08→)	1	MERCEDES GLA SUV (13→)	1	SEAT Leon ST SW (13→)	1
AUDI Q7 (06→15)	1	MINI Countryman (10→)	1	SEAT Leon X-PERIENCE SW (15→)	1
BMW Serie 3 Touring (10→12)	1	MITSUBISHI ASX (10→)	2	SUZUKI SX4 S-Cross 5P (13→)	1
BMW Serie 3 Touring (12→)	1	MITSUBISHI Outlander (12→)	2	VOLKSWAGEN Cross Up! 5P (14→)	1
BMW Serie 5 Touring (10→)	1	NISSAN Qashqai II SUV (13→)	2	VOLKSWAGEN Golf VII Variant SW Railings (13→)	2
BMW X1 (09→)	1	OPEL Astra H SW (04→10)	1	VOLKSWAGEN Golf Sportsvan MPV Railings (14→)	2
BMW X3 (10→)	1	OPEL Astra J Sports Tourer SW (11→)	1	VOLKSWAGEN Passat VIII Variant SW (14→)	1
BMW X5 (07→13)	1	OPEL Insignia Sports Tourer (09→)	1	VOLKSWAGEN Tiguan SUV Railings (07→)	2
CADILLAC SRX SUV (10→)	2	OPEL Mokka (12→)	1	VOLVO V40 Cross Country SW (12→)	2
CITROËN C4 Aircross (12→)	2	OPEL Vectra C SW (03→05)	1	VOLVO V60 (10→)	1
DR DR5 SUV (07→)	2	OPEL Vectra C SW (06→08)	1	VOLVO XC60 (10→)	2

2B

(IT) SVITARE
(GB) UNSCREW
(E) AFLOJAR
(D) ABSCHRAUBEN
(F) DEVISSER
(NL) OPENSCHROEVEN
(P) DESAPARAFUSAR
(H) KICSAVARNI
(PL) WYKRĘCIĆ
(SLO) ODVITI
(HR) ODVITI

(IT) MONTAGGIO TIRANTE 2
(GB) HOW TO ASSEMBLE COUPLER 2
(E) COMO MONTAR LOS TIRANTE 2
(D) ZUSAMMENBAU DER KOPPLER 2
(F) MONTAGE TIRANT 2
(NL) MONTAGE VAN DE TREKSTANG 2
(H) RÖGZÍTŐ BETÉT SZERELÉSE
(PL) WYMIANA ŁAPKI 2
(SLO) KAKO SESTAVITI SPOJ 2
(HR) UGRADNJA 2 ZAKAČKE

(IT) SOSTITUIRE
(GB) TO REPLACE
(E) APRETAR
(D) ERSETZEN
(F) REMPLACER
(NL) VERVANGEN
(H) CSERÉLJE ÁT 2A ÁBRA SZERINT
(PL) ZAMIEŃIĆ
(SLO) NAMESTITI NAZAJ
(HR) ZAMIJENITI

(IT) AVVITARE
(GB) TO SCREW
(E) APRETAR
(D) FESTSCHRAUBEN
(F) VISSER
(NL) VASTSCHROEVEN
(P) APERTAR
(H) MEGHÚZNI
(PL) WKRĘCIĆ
(SLO) PRIVITI
(HR) PRIČVRSTITI

3

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NAŁOŻIĆ
(SLO) VSTAVITI
(HR) UMETNUTI


(x4)

4

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NAŁOŻIĆ
(SLO) VSTAVITI
(HR) PREKRITI

(x4)

5

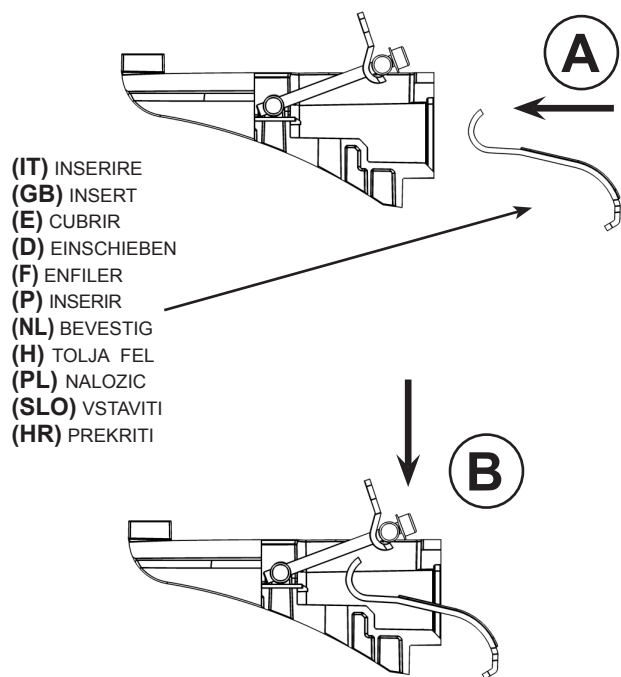


(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NALOZIC
(SLO) VSTAVITI
(HR) PREKRITI

OK


C

(x4)

6

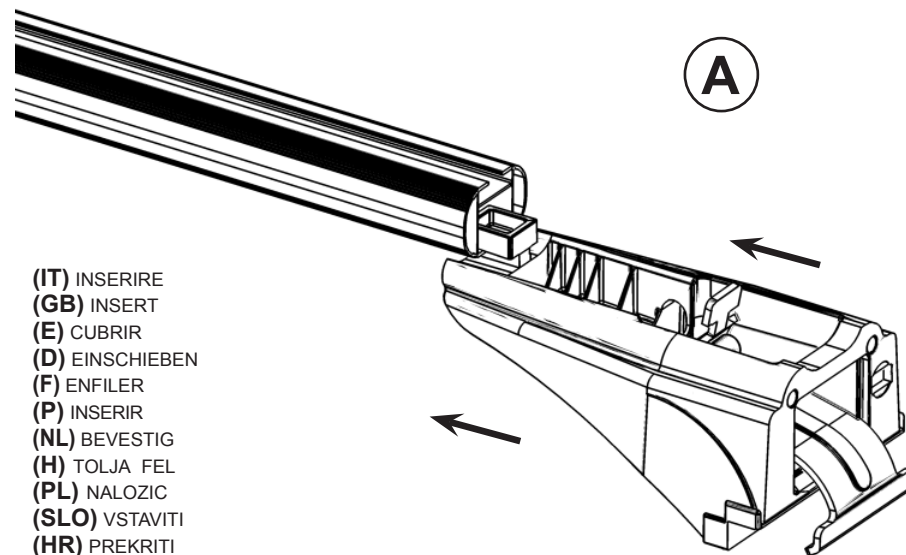


(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NALOZIC
(SLO) VSTAVITI
(HR) PREKRITI

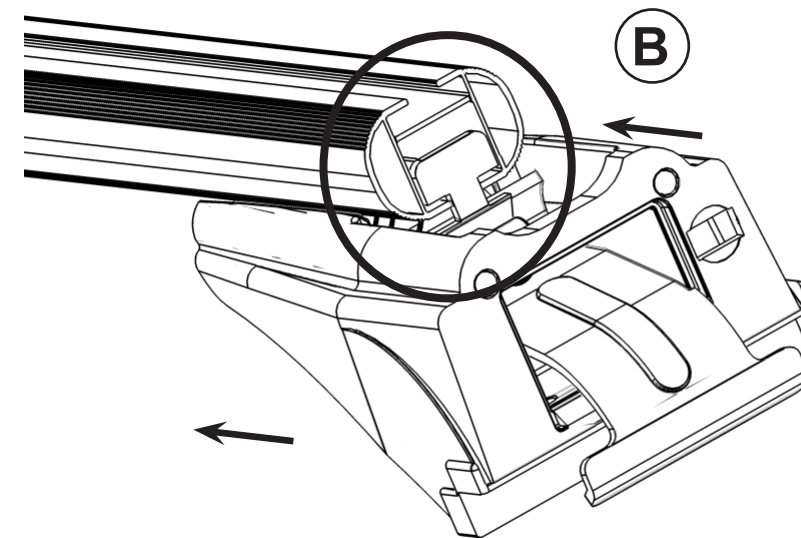

(x4)

7

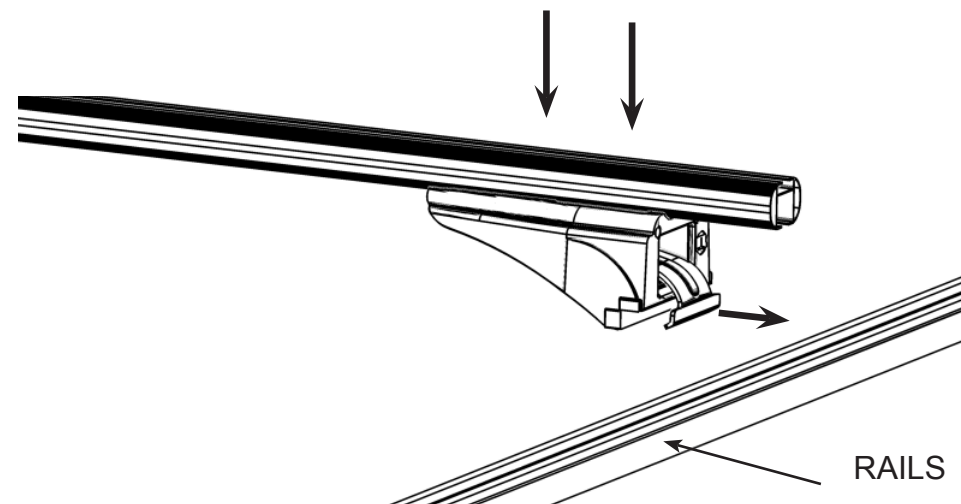


RAILS

8

(IT) CENTRARE IL P. TUTTO SUL TETTO
(GB) CENTRE THE UNIVERSAL BAR CARRIER ON THE ROOF
(E) CENTRAR EL PORTAEQUIPAJES SOBRE EL TECHO
(D) LASTENTRÄGER AUF DEM DACH ZENTRIEREN
(F) CENTRER LE PORTE-TOUT SUR LE TOIT
(NL) PLAATS DE UNIVERSELE DRAGER IN HET MIDDEN VAN HET DAK
(P) CENTRAR AS BARRAS PORTA BAGAGENS NO TEJADILHO
(H) HELYEZZE KÖZÉPRE A RUDAKAT
(PL) WYSRODKOWAC BAGAŻNIK NA DACHU
(SLO) CENTRIRATI PRILJAZNIK NA STREHO
(HR) CENTRIRATI NOSAČE NA KROV




9

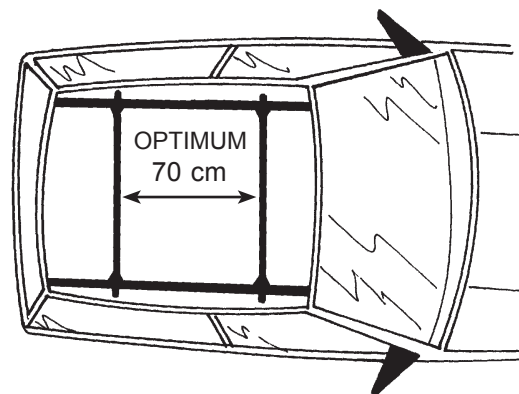

OPTIMUM
70 cm




10

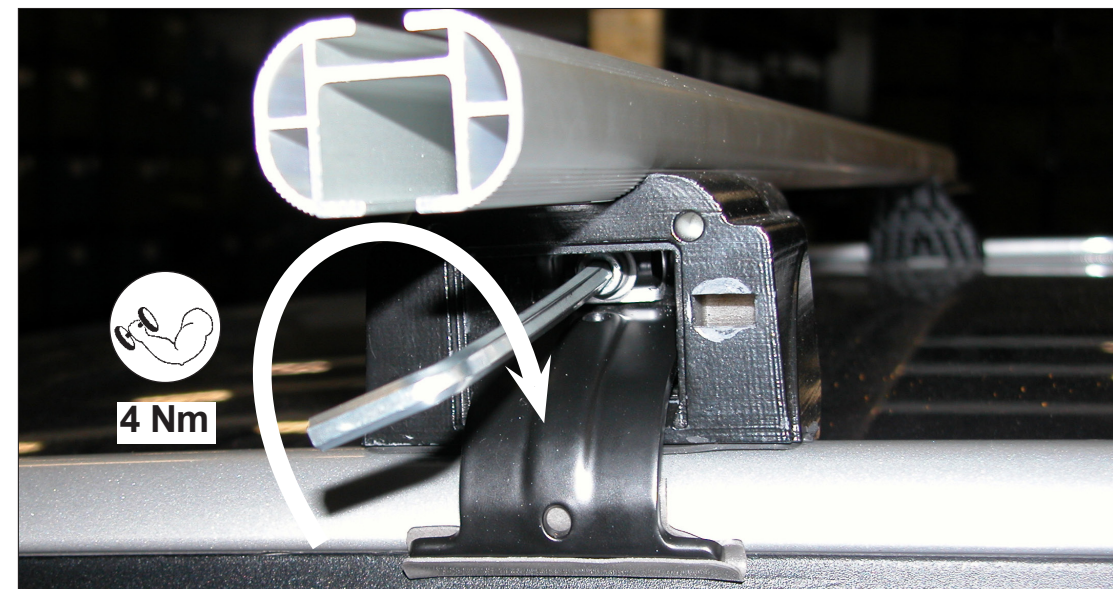

4 Nm


(IT) AVVITARE
(GB) TO SCREW
(E) APRETAR
(D) FESTSCHRAUBEN
(F) VISSER
(NL) VASTSCHROEVEN
(P) APERTAR
(H) MEGHÚZNI
(PL) WKRECIC
(SLO) PRIVITI
(HR) PRIČVRSTITI

(x4)

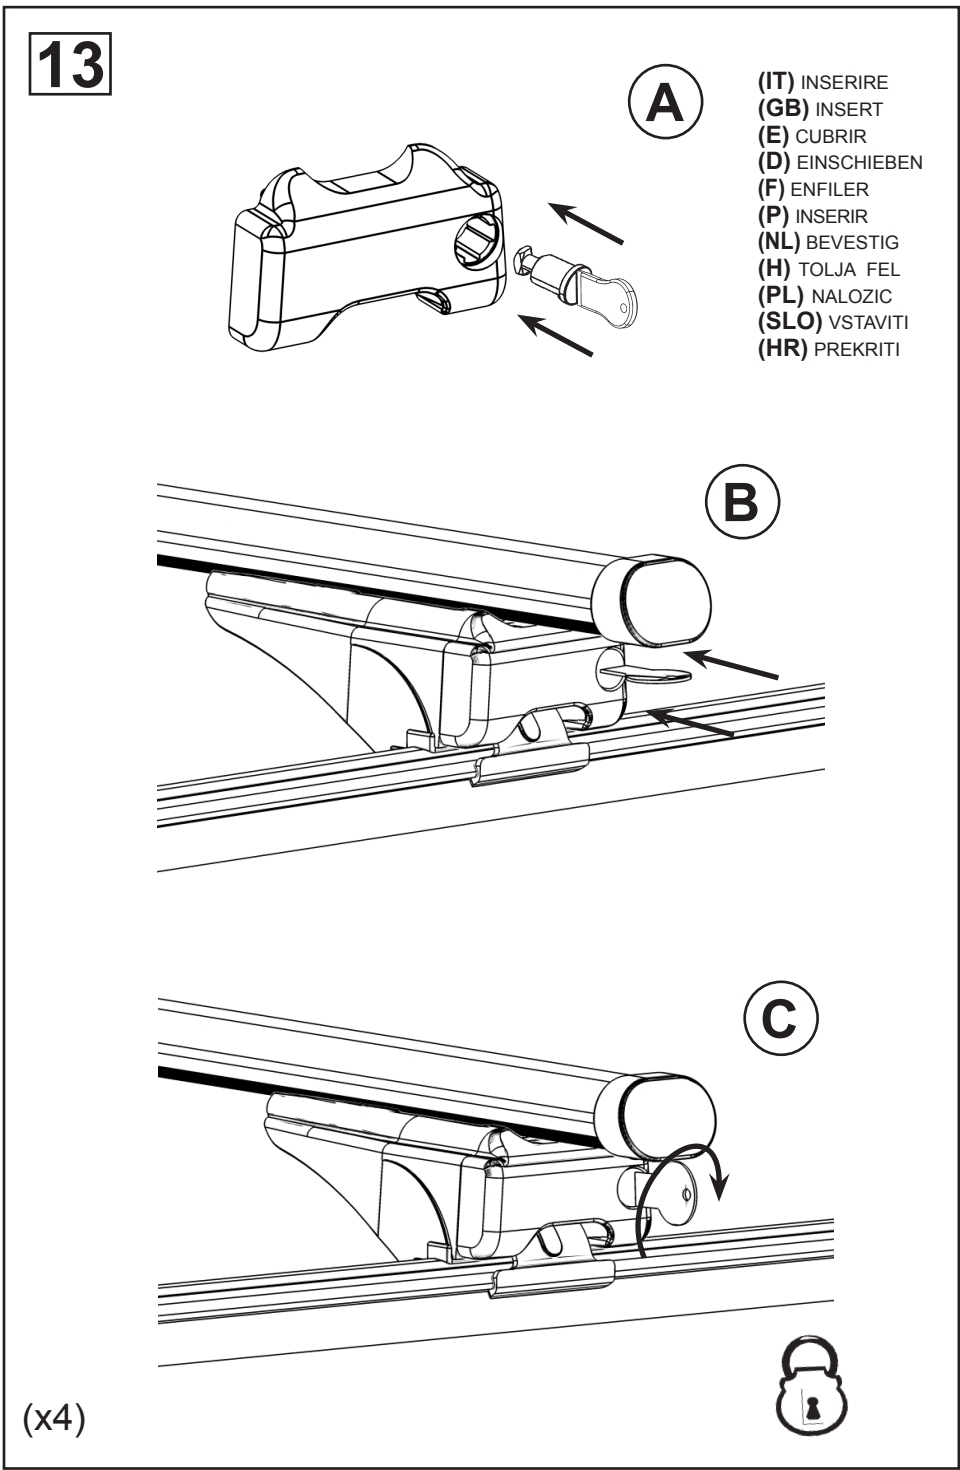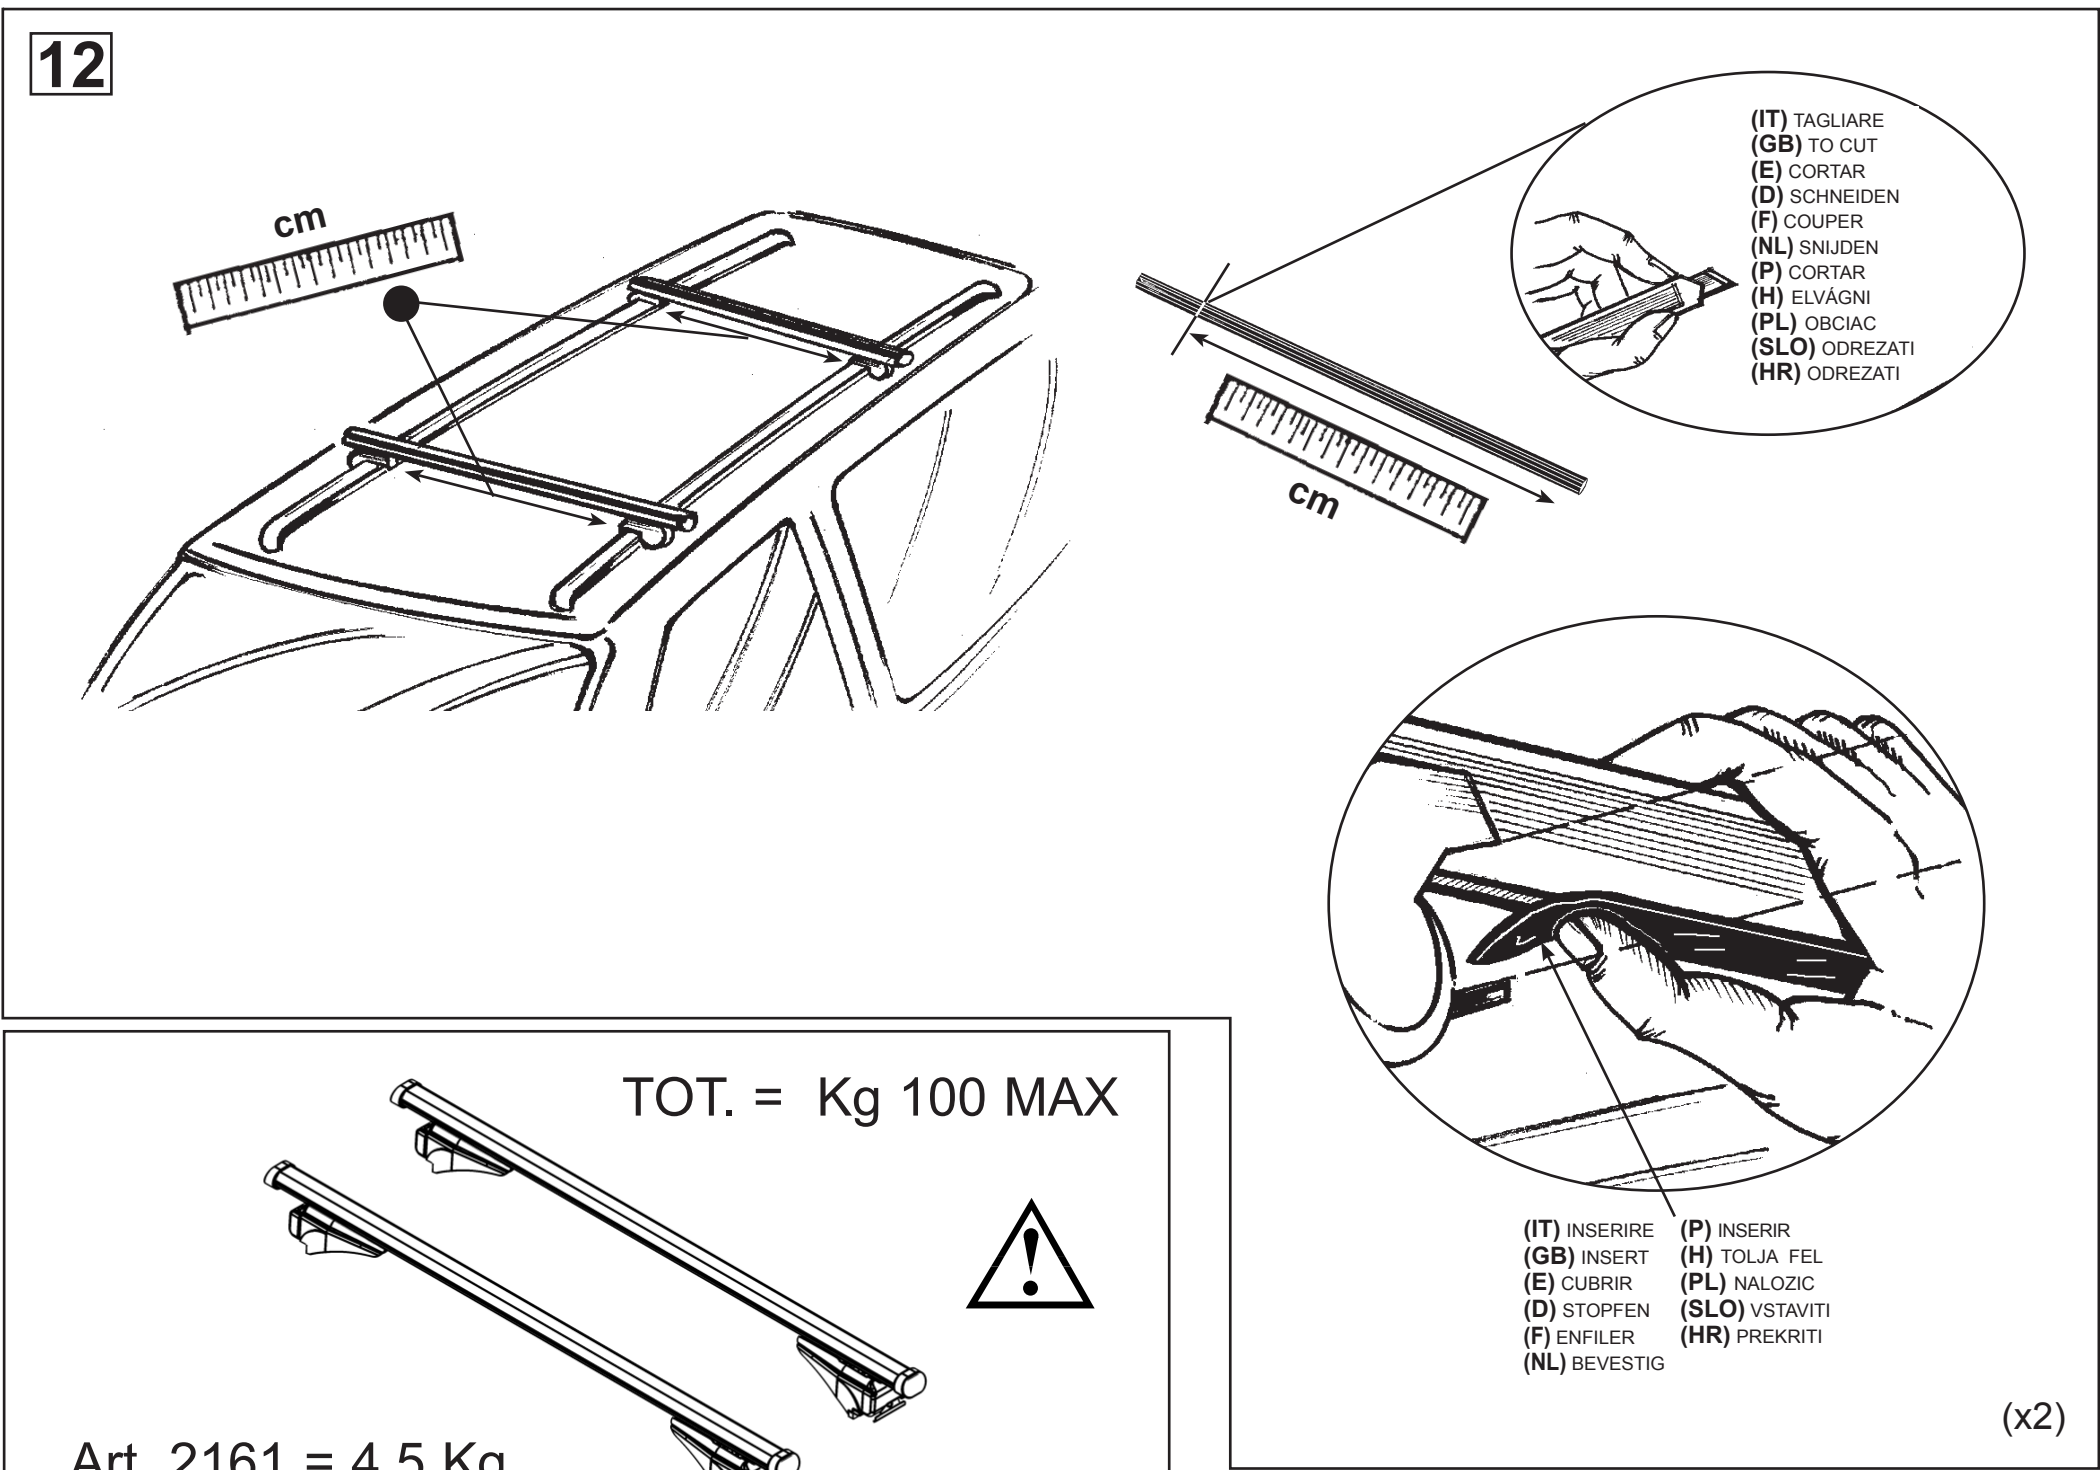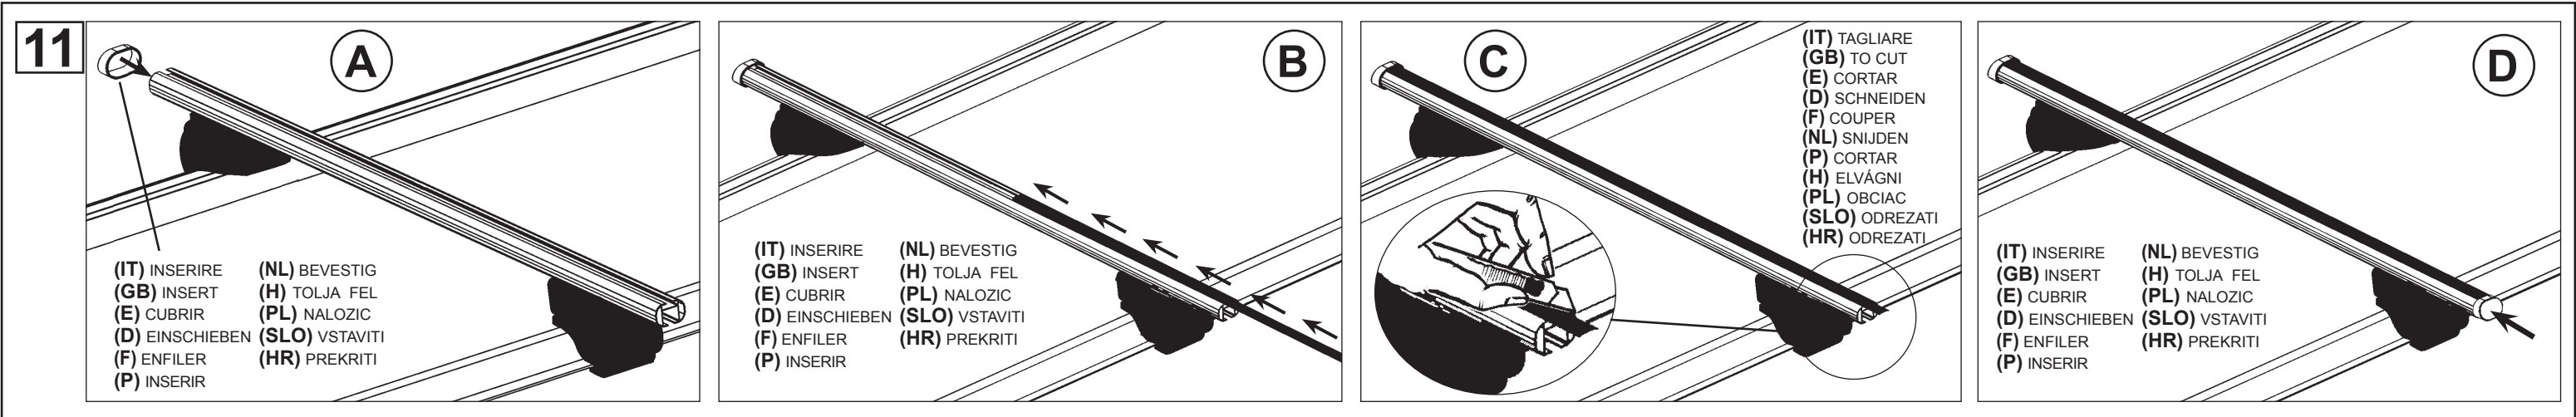





2161 PARTS LIST

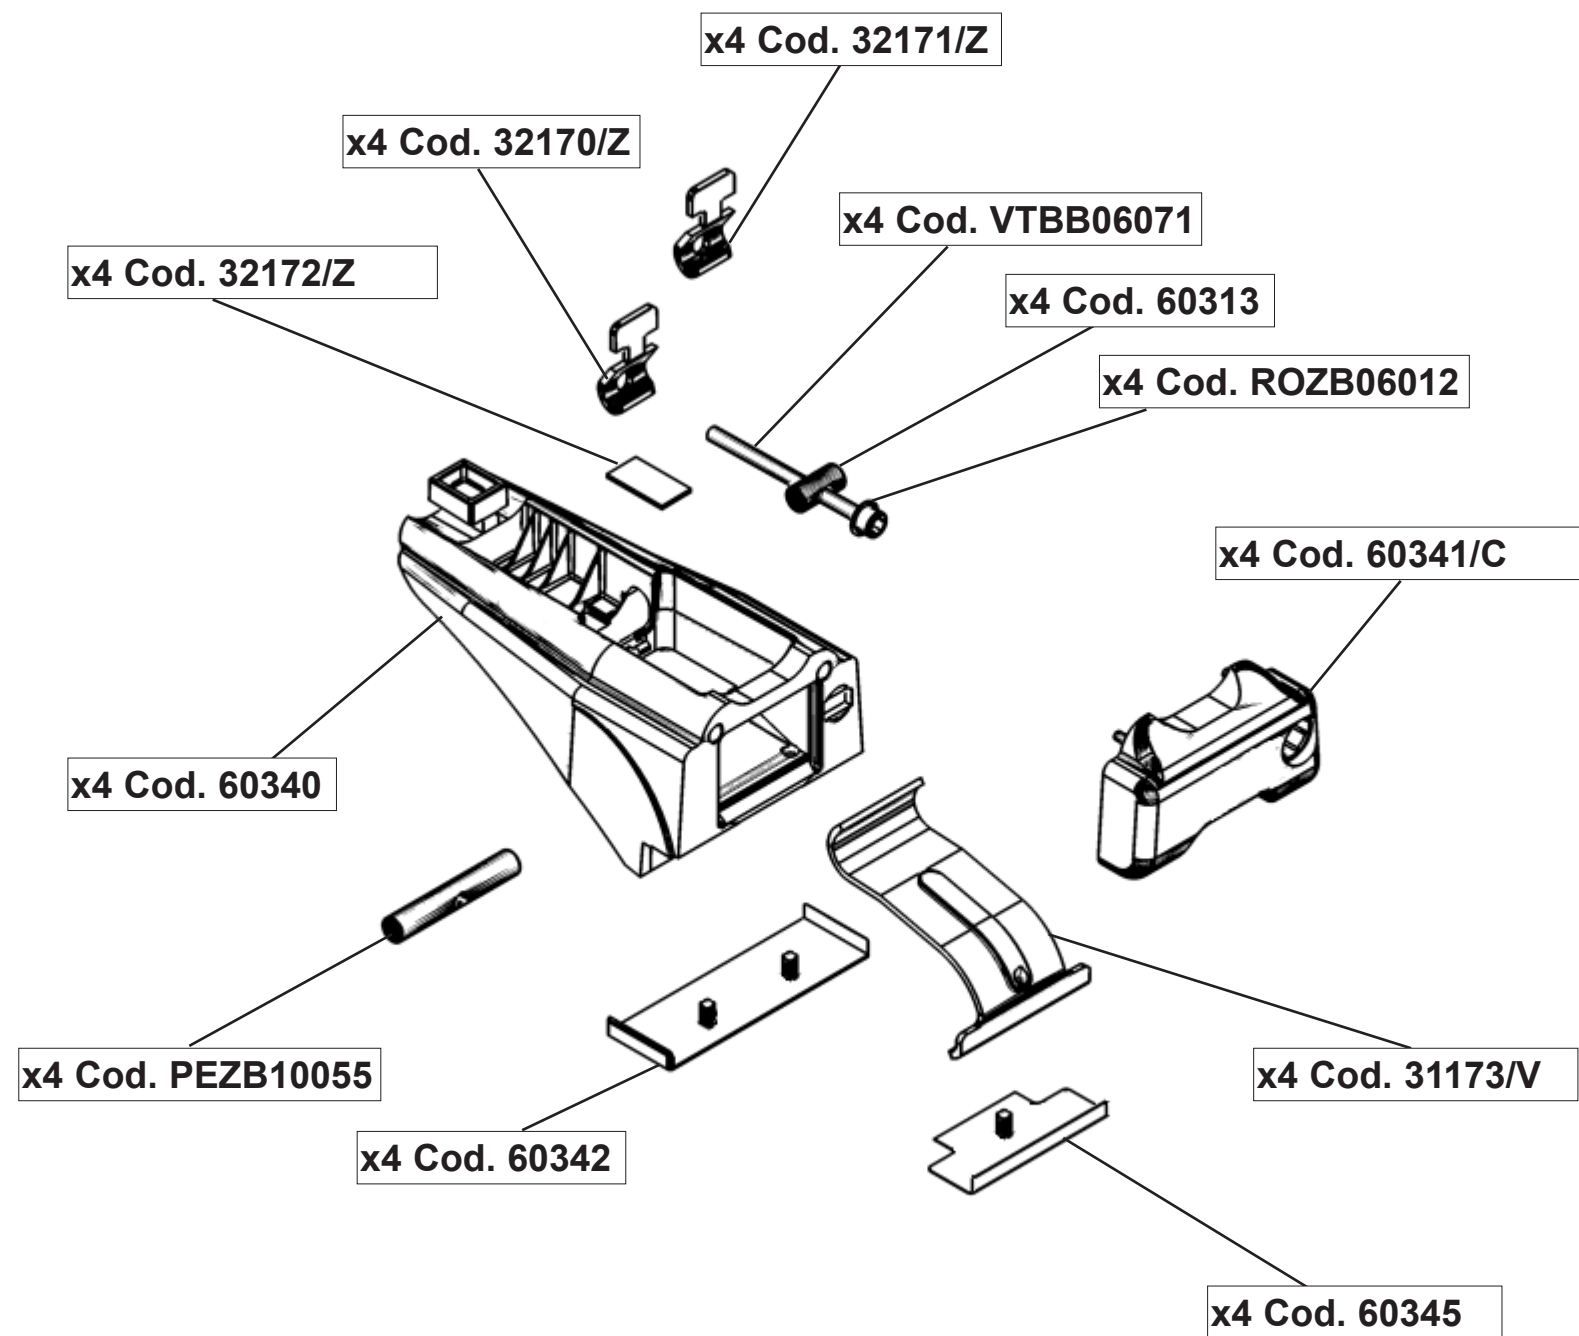


x4 Cod. 60265

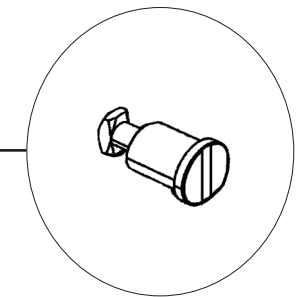

x1 Cod. 60273

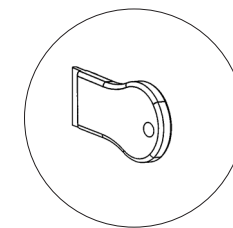


x4 Cod. 60305

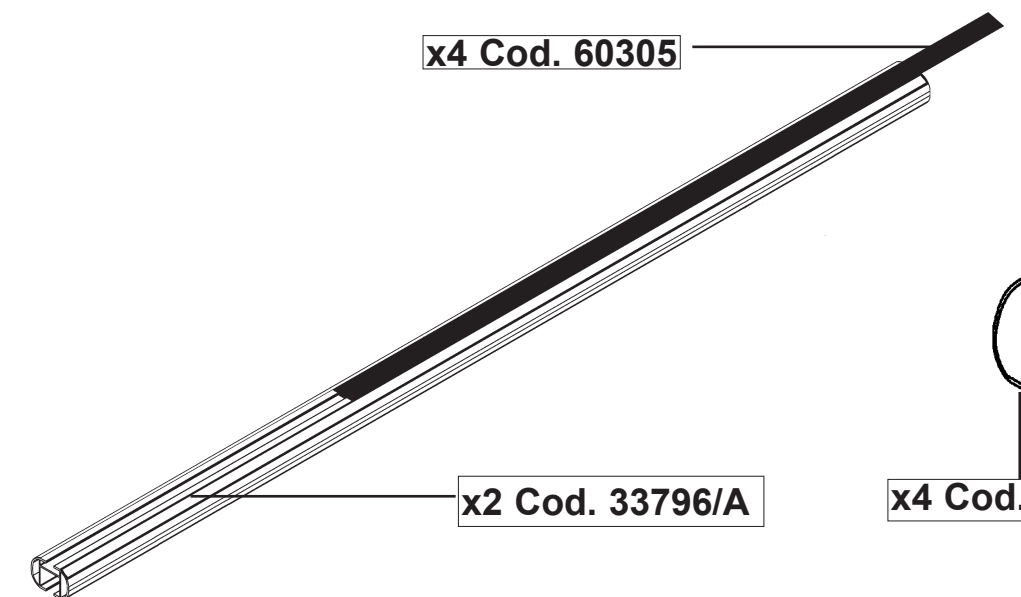


x2 Cod. 33796/A

x4 Cod. 60280

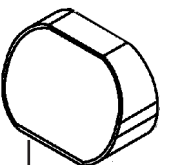

x1 Cod. 60339

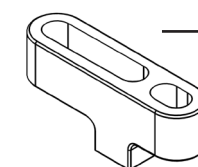

x1 Cod. 60377

