



2162

(IT) **Attenzione:** Istruzioni di montaggio per barre in ferro. (GB) **Attention:** Mounting instructions for steel bar carriers. (E) **Atencion:** Instrucciones de montaje para barras portatodo en hierro. (D) **Achtung:** Montageanweisungen für Stahl-Lastenträger. (F) **Attention:** Notices de montage pour barres de portage en acier. (NL) **Attentie:** Handleiding voor dakdragers gemaakt van ijzer. (P) **Atenção:** Instruções de montagem para barras de tejadilho em ferro. (H) Szerelési utasítás acél tartórudakhoz. (PL) **Uwaga:** Instrukcja montażu bagazników wykonanych ze stali. (SLO) **Pozor:** Navodila za montažo nosilcev prtljažnika-železnih. (HR) Uputstvo za montažu željeznih krovnih nosača.

1

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA BE
(PL) NAŁOŻIĆ
(SLO) VSTAVITI
(HR) UMETNUTI

2A

(IT) MODELLI AUTO (GB) CARS (E) COCHES
(D) WAGEN (F) VOITURES (NL) AUTO (P) MODELO
AUTO (H) AUTÓ TIPUS (PL) MODELE SAMOCHODÓW
(SLO) MODELI AVTOMOBILOV (HR) MODELI AUTA

AUDI	A3 Sportback 5P (04→12)	1
AUDI	A3 Sportback 5P (12→)	1
AUDI	A4 Allroad SW (09→)	1
AUDI	A4 Avant (08→15)	1
AUDI	A6 Avant (05→11)	1
AUDI	A6 Allroad SW (12→)	1
AUDI	A6 Avant (11→)	1
AUDI	Q3 (11→)	1
AUDI	Q7 (06→15)	1
BMW	Serie 3 Touring (10→12)	1
BMW	Serie 3 Touring (12→)	1
BMW	Serie 5 Touring (10→)	1
BMW	X1 (09→)	1
BMW	X3 (10→)	1
BMW	X5 (07→13)	1
CADILLAC	SRX SUV (10→)	2
CITROËN	C4 Aircross (12→)	2
DR	DR5 SUV (07→)	2
FIAT	Panda III (12→)	2

(IT) TIRANTE
(GB) COUPLER
(E) TIRANTE
(D) KÖPPLER
(F) TIRANT
(NL) TREKSTANG
(H) RÖGZÍTŐ BETÉT
(PL) ŁAPKA
(SLO) SPOJ
(HR) ZAKAČKA

FIAT	Panda III Cross 5P (14→) Railings	2
HONDA	Civic IX Tourer SW (13→)	1
HYUNDAI	ix35 (10→)	2
KIA	Sportage (10→)	2
MERCEDES	Classe C SW (14→)	1
MERCEDES	Classe E SW Railings (09→)	1
MERCEDES	GLA SUV (13→)	1
MINI	Countryman (10→)	1
MITSUBISHI	ASX (10→)	2
MITSUBISHI	Outlander (12→)	2
NISSAN	Qashqai II SUV (13→)	2
OPEL	Astra H SW (04→10)	1
OPEL	Astra J Sports Tourer SW (11→)	1
OPEL	Insigna Sports Tourer (09→)	1
OPEL	Mokka (12→)	1
OPEL	Vectra C SW (03→05)	1
OPEL	Vectra C SW (06→08)	1
OPEL	Zafira B (05→11)	1
OPEL	Zafira C (11→)	1

(IT) MODELLI AUTO (GB) CARS (E) COCHES
(D) WAGEN (F) VOITURES (NL) AUTO (P) MODELO
AUTO (H) AUTÓ TIPUS (PL) MODELE SAMOCHODÓW
(SLO) MODELI AVTOMOBILOV (HR) MODELI AUTA

PEUGEOT	308 II SW (14→)	1
PEUGEOT	508 SW (11→)	2
SEAT	Alhambra II MPV (13→)	1
SEAT	Altea XL (06→)	1
SEAT	Altea Freetrack (07→)	1
SEAT	Ibiza ST (10→)	1
SEAT	Leon ST SW (13→)	1
SEAT	Leon X-PERIENCE SW (15→)	1
SUZUKI	SX4 S-Cross 5P (13→)	1
VOLKSWAGEN	Cross Up! 5P (14→)	1
VOLKSWAGEN	Golf Sportsvan MPV Railings (14→)	2
VOLKSWAGEN	Passat VIII Variant SW (14→)	1
VOLKSWAGEN	Tiguan SUV Railings (07→)	2
VOLVO	V60 (10→)	1
VOLVO	XC60 (10→)	2

(IT) TIRANTE
(GB) COUPLER
(E) TIRANTE
(D) KÖPPLER
(F) TIRANT
(NL) TREKSTANG
(H) RÖGZÍTŐ BETÉT
(PL) ŁAPKA
(SLO) SPOJ
(HR) ZAKAČKA

2B

(IT) SVITARE
(GB) UNSCREW
(E) AFLOJAR
(D) ABSCHRAUBEN
(F) DEVISSER
(NL) OPENSCHROEVEN
(P) DESAPARAFUSAR
(H) KICSAVARNI
(PL) WYKRĘCIĆ
(SLO) ODVITI
(HR) ODVITI

(IT) MONTAGGIO TIRANTE 2
(GB) HOW TO ASSEMBLE COUPLER 2
(E) COMO MONTAR LOS TIRANTE 2
(D) ZUSAMMENBAU DER KÖPPLER 2
(F) MONTAGE TIRANT 2
(NL) MONTAGE VAN DE TREKSTANG 2
(H) RÖGZÍTŐ BETÉT SZERELÉSE
(PL) WYMIANA ŁAPKI 2
(SLO) KAKO SESTAVITI SPOJ 2
(HR) UGRADNJA 2 ZAKAČKE

(IT) AVVITARE
(GB) TO SCREW
(E) APRETAR
(D) FESTSCHRAUBEN
(F) VISSER
(NL) VASTSCHROEVEN
(P) APERTAR
(H) MEGHÚZNI
(PL) WKRĘCIĆ
(SLO) PRIVITI
(HR) PRIČVRSTITI

(IT) SOSTITUIRE
(GB) TO REPLACE
(E) APRETAR
(D) ERSETZEN
(F) REMPLACER
(NL) VERVANGEN
(H) CSERÉLJE ÁT 2A ÁBRA SZERINT
(PL) ZAMENIĆ
(SLO) NAMESTITI NAZAJ
(HR) ZAMIJENITI

(x4)

3

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NAŁOŻIĆ
(SLO) VSTAVITI
(HR) UMETNUTI

(x4)




4

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NAŁOŻIĆ
(SLO) VSTAVITI
(HR) PREKRITI

(x4)

5



(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NALOZIC
(SLO) VSTAVITI
(HR) PREKRITI

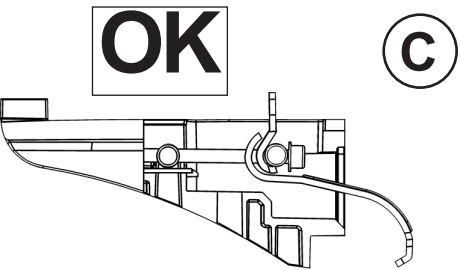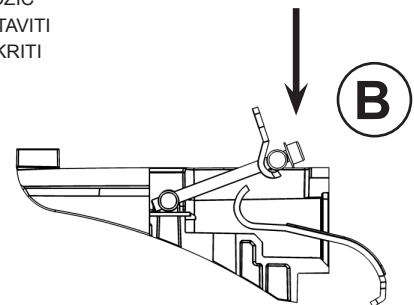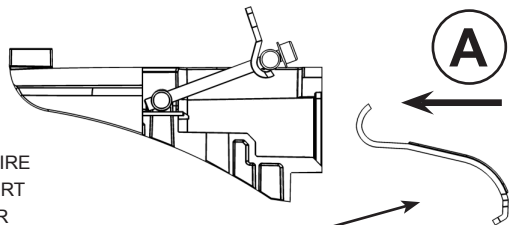

(x4)


6

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NALOZIC
(SLO) VSTAVITI
(HR) PREKRITI

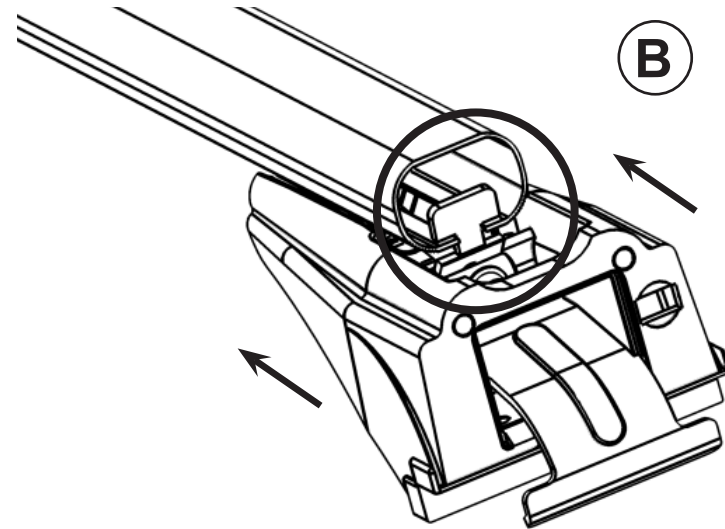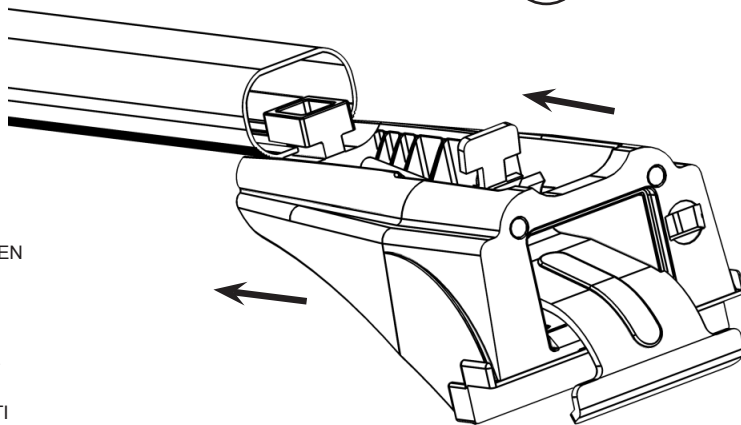

(x4)

7

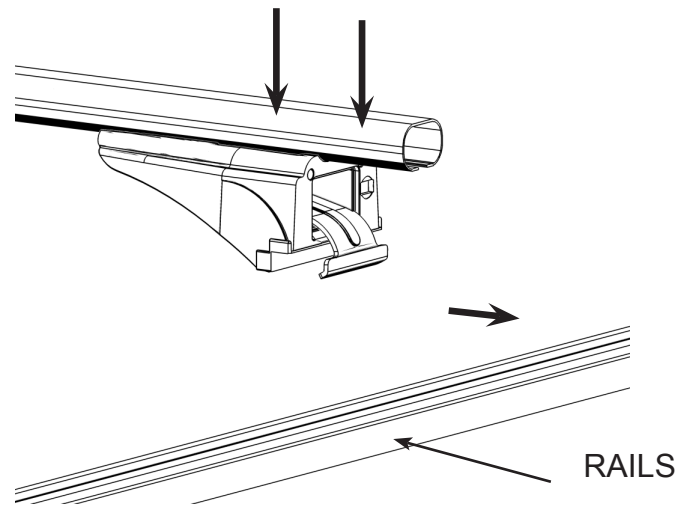


8

(IT) CENTRARE IL P. TUTTO SUL TETTO
(GB) CENTRE THE UNIVERSAL BAR CARRIER ON THE ROOF
(E) CENTRAR EL PORTAEQUIPAJES SOBRE EL TECHO
(D) LASTENTRÄGER AUF DEM DACH ZENTRIEREN
(F) CENTRER LE PORTE-TOUT SUR LE TOIT
(NL) PLAATS DE UNIVERSELE DRAGER IN HET MIDDEN VAN HET DAK
(P) CENTRAR AS BARRAS PORTA BAGAGENS NO TEJADILHO
(H) HELYEZZE KÖZÉPRE A RUDAKAT
(PL) WYSRÓDKOWAC BAGAZNIK NA DACHU
(SLO) CENTRIRATI PRTLJAŽNIK NA STREHO
(HR) CENTRIRATI NOSAČE NA KROV



9

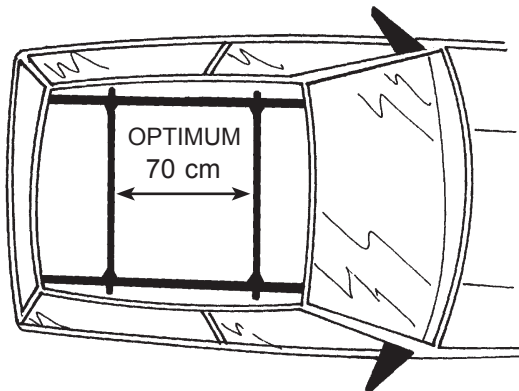


10



(IT) AVVITARE
(GB) TO SCREW
(E) APRETAR
(D) FESTSCHRAUBEN
(F) VISSER
(NL) VASTSCHROEVEN
(P) APERTAR
(H) MEGHÚZNI
(PL) WKRECIC
(SLO) PRIVITI
(HR) PRIČVRSTITI

(x4)


11

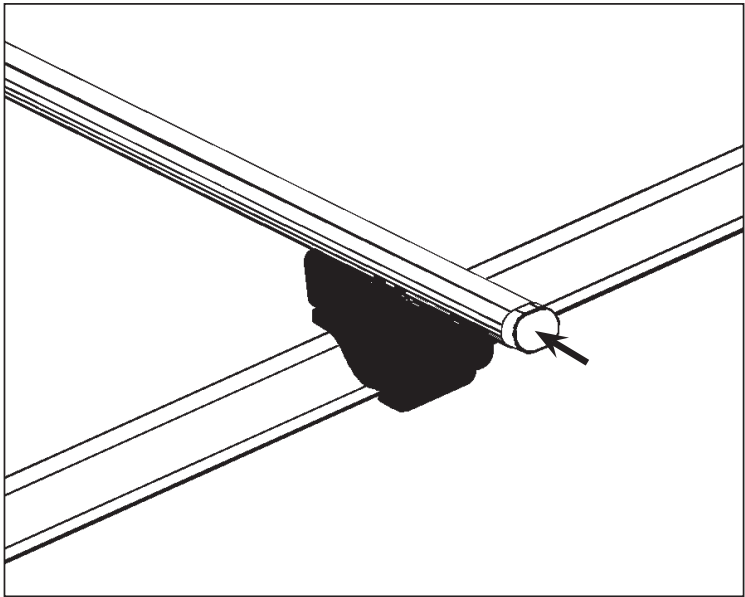

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NALOZIC
(SLO) VSTAVITI
(HR) PREKRITI


(x4)

12

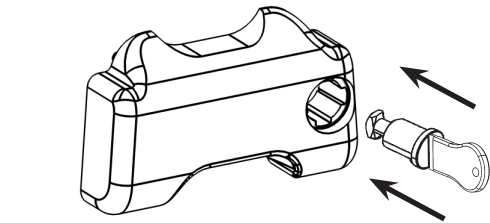


A

(IT) INSERIRE
(GB) INSERT
(E) CUBRIR
(D) EINSCHIEBEN
(F) ENFILER
(P) INSERIR
(NL) BEVESTIG
(H) TOLJA FEL
(PL) NALOZIC
(SLO) VSTAVITI
(HR) PREKRITI

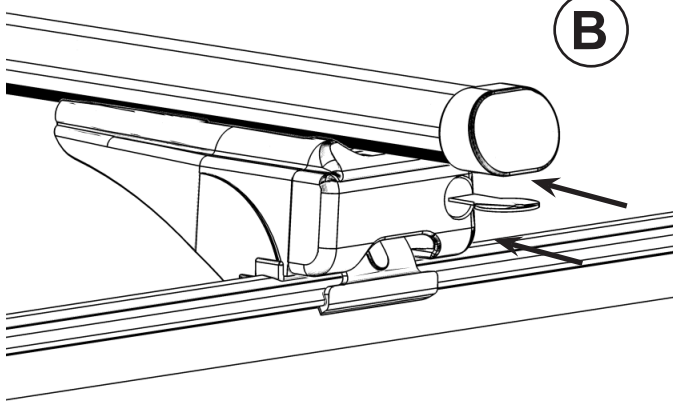

B

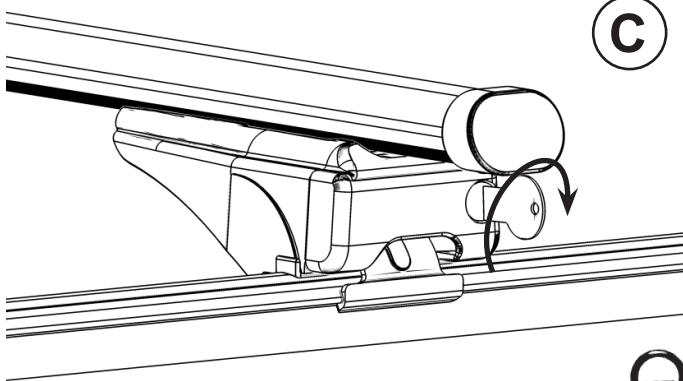


C



(x4)


TOT. = Kg 100 MAX

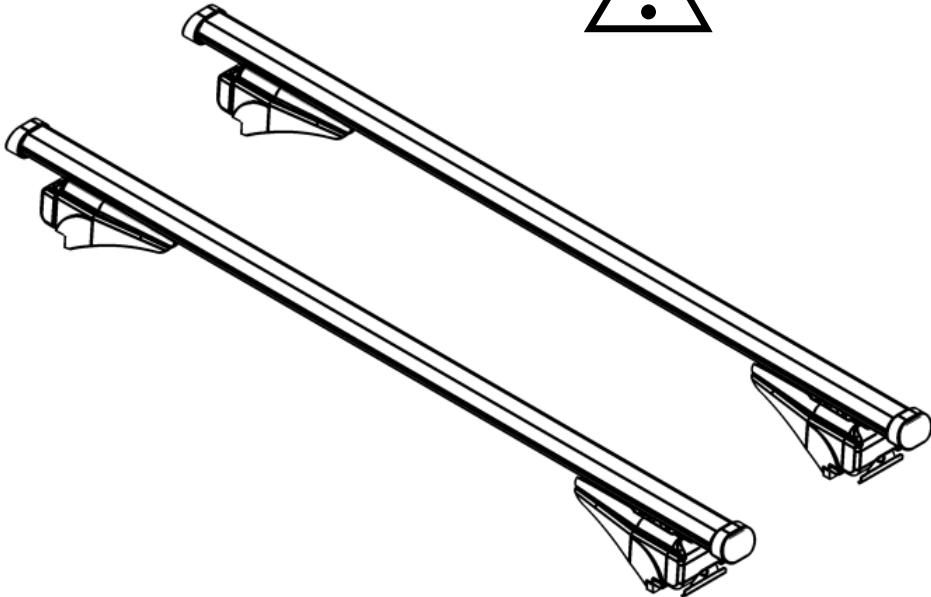


Art. 2162 = 4,8 Kg




2162 PARTS LIST

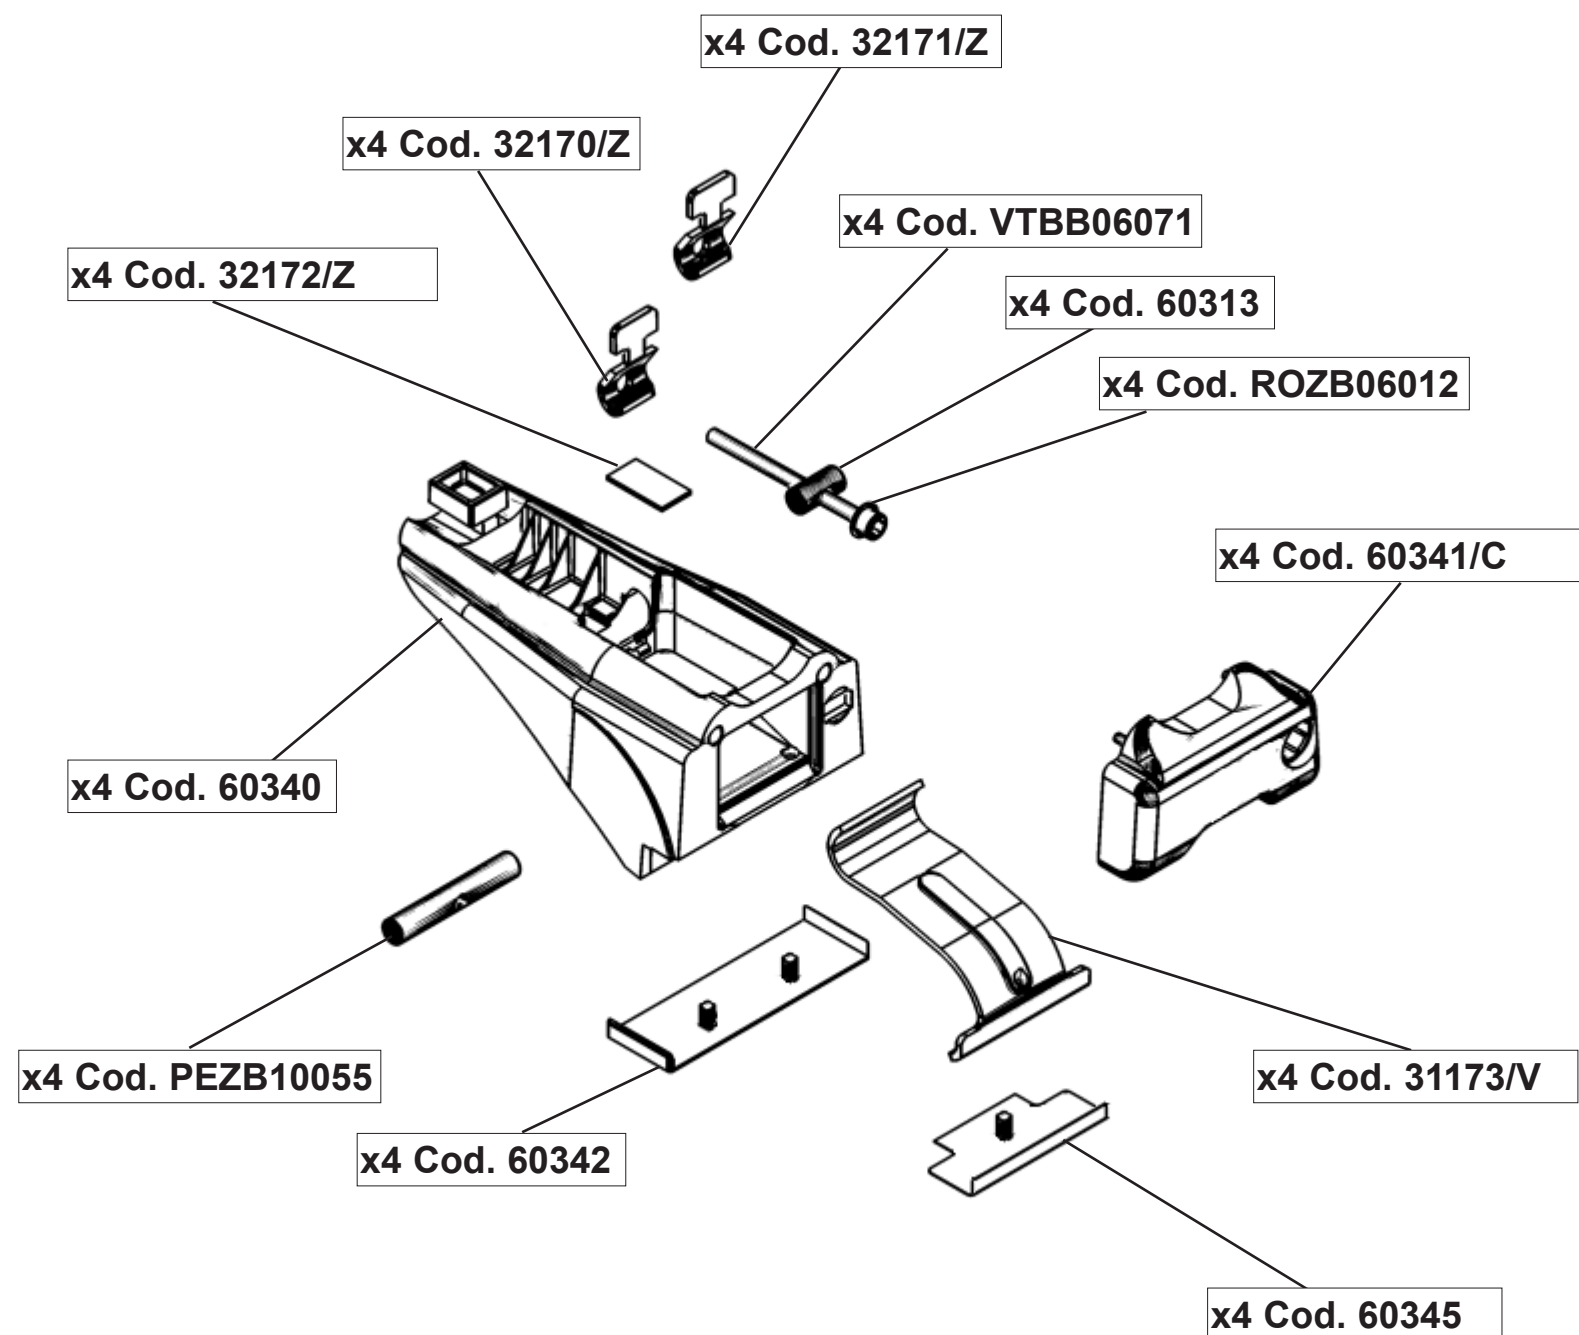


x4 Cod. 60265

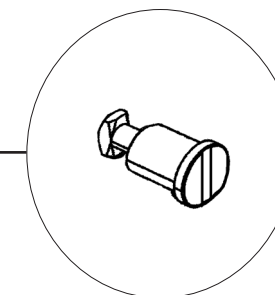


x1 Cod. 60273

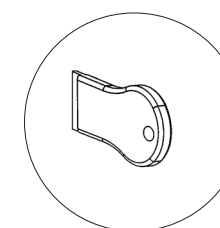


x2 Cod. 37924/C

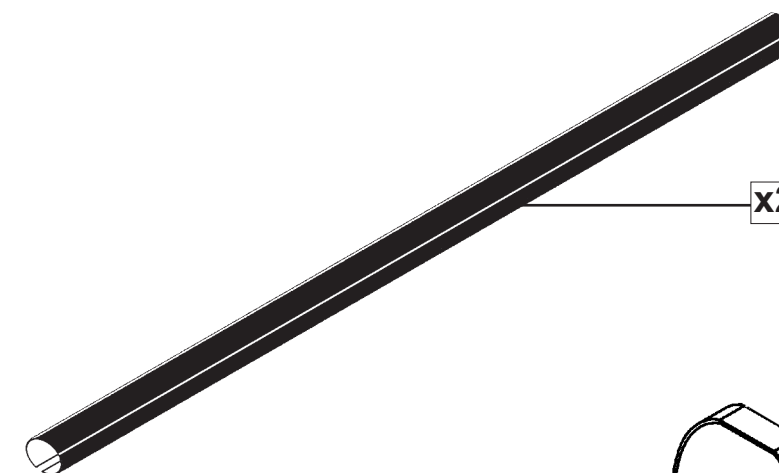

x4 Cod. 60280

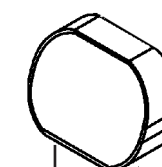

x1 Cod. 60339

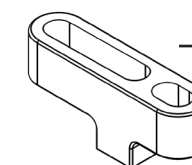

x1 Cod. 60377

