






1

BOX 320 LT
BOX 430 LT
BOX 500 LT

BOX 350 LT





2

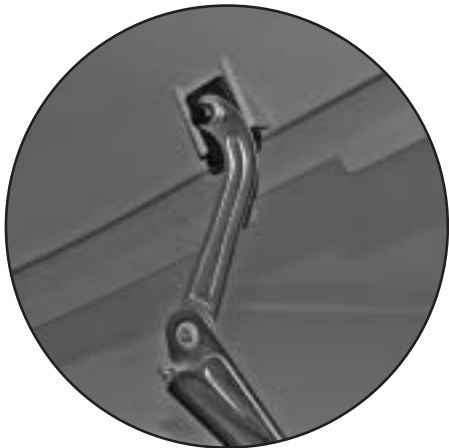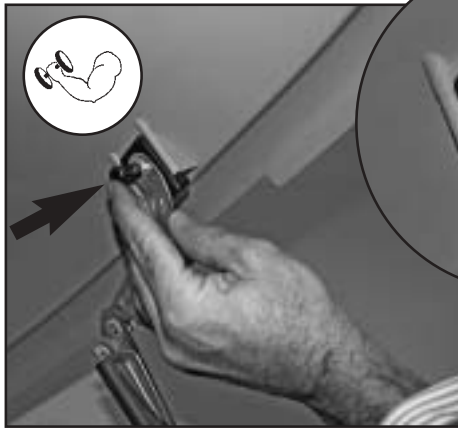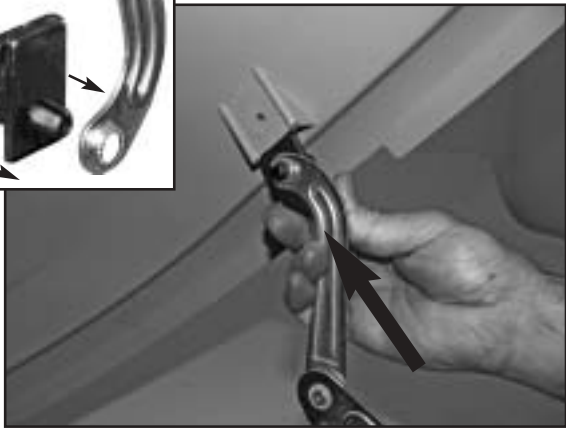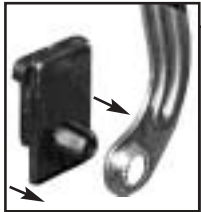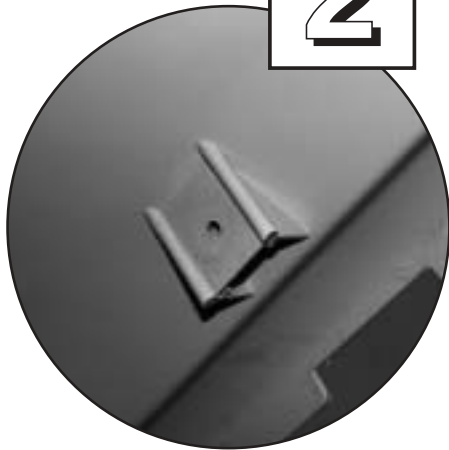

x 2


2 Bis

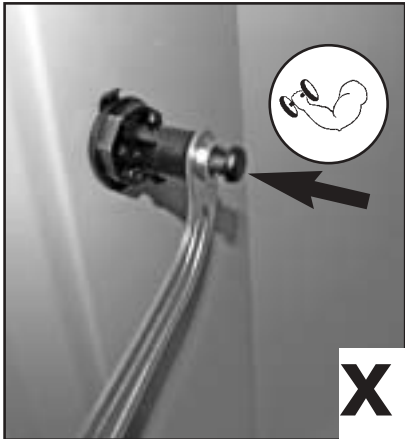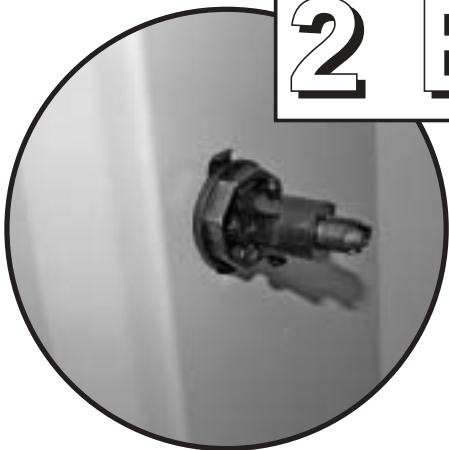

x 2



3

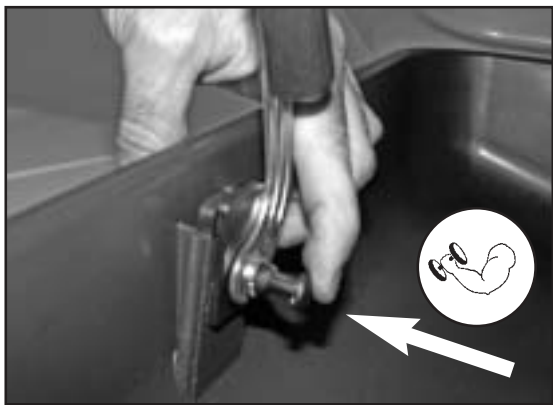


x 2




SOVRAPPORRE IL COPERCHIO


PLACE THE LID ON TOP
SOBREPONER LA TAPADERA
DECKEL AUFSETZEN
SUPERPOSER LE COUVERCLE
HET DEKSEL OP DE KOFFER PLAATSEN
RÁHELYEZNI A BOX TETEJÉT
NASTAVITI POKROV

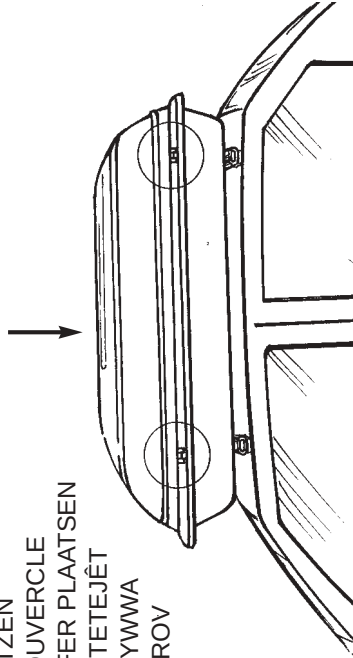


A

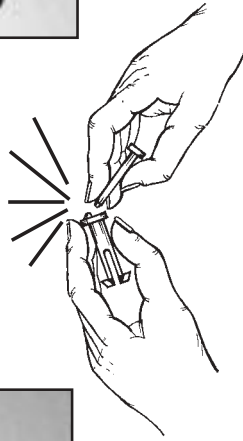


B

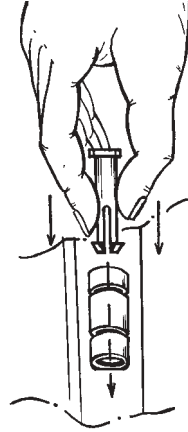

C

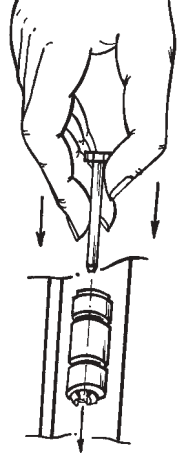

INSERIRE
INSERT
CUBRIR
EINFÜHREN
ENFILER
BEVESTIG
INSERIR
CSAVARJA FEL
NALOZYĆ
VSTAVITI
PREKRITI

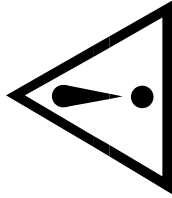


INSERIRE
INSERT
CUBRIR
EINFÜHREN
ENFILER
BEVESTIG
INSERIR
CSAVARJA FEL
NALOZYĆ
VSTAVITI
PREKRITI




X3



X2

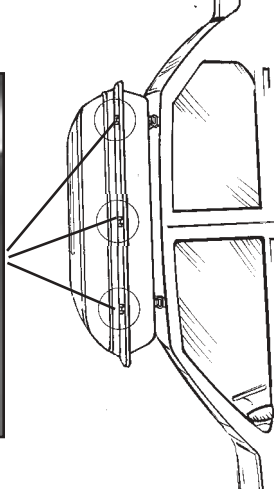


430 LT
500 LT

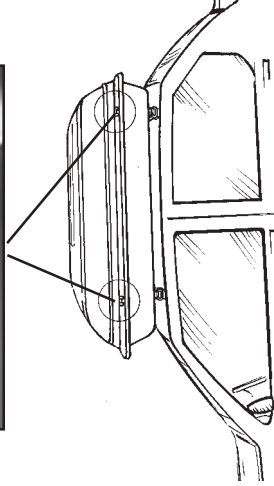

320 LT
350 LT




A

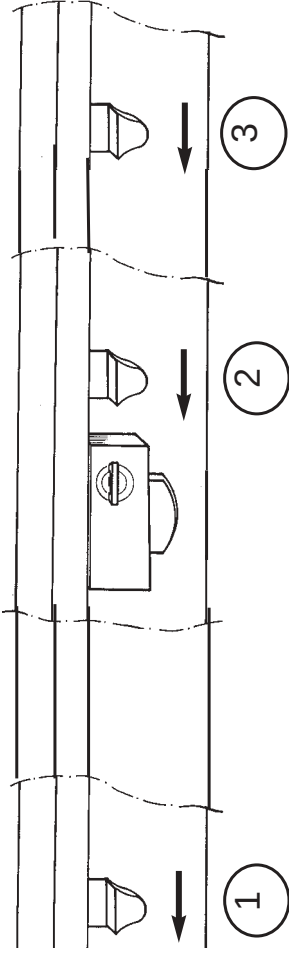


SOVRAPPORRE IL COPERCHIO

PLACE THE LID ON TOP
SOBREPONER LA TAPADERA
DECKEL AUFSETZEN
SUPERPOSER LE COUVERCLE
HET DEKSEL OP DE KOFFER PLAATSEN
RÁHELYEZNI A BOX TETEJÉT
NASTAVITI POKROV



B

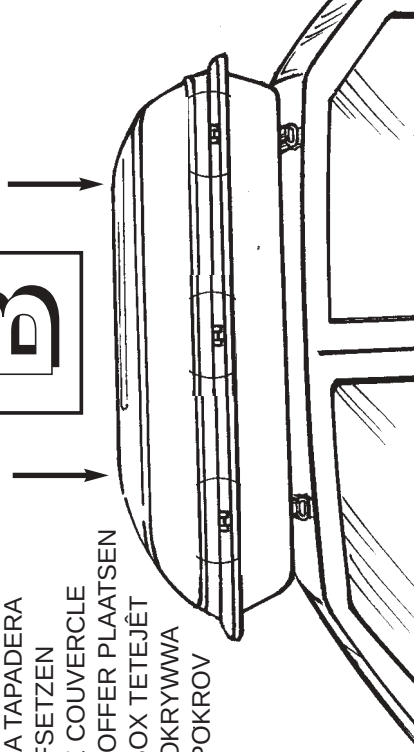

C

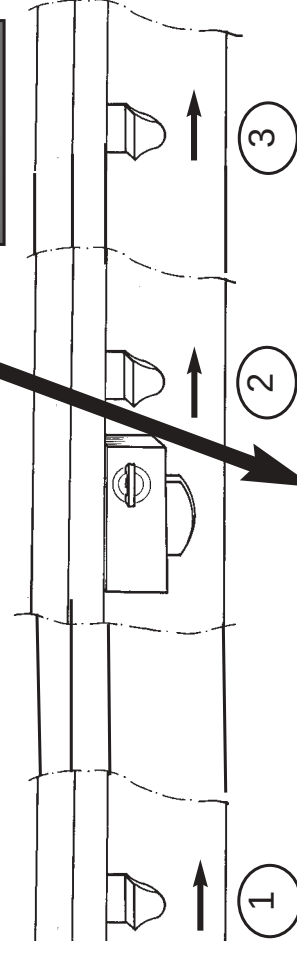

D

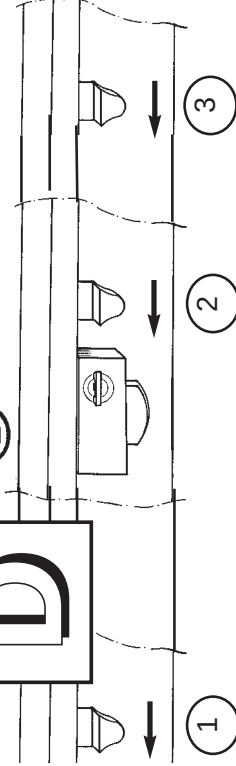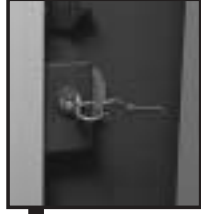

E

