



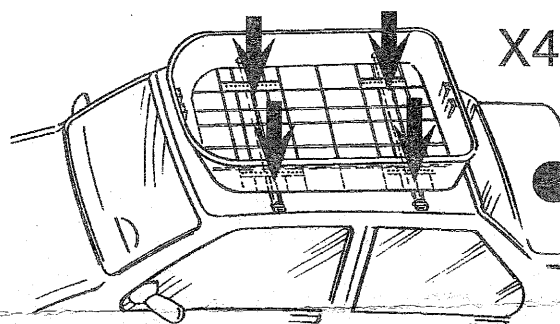


POSTERIORE AUTO
 REAR OF THE CAR
 LADO POSTERIOR DEL COCHE
 RUECKSEITE DES WAGENS
 PARTIE ARRIERE DE LA VOITURE
 ACHTERZIJDE VAN DE AUTO

A

INSERIRE
 INSERT
 CUBRIR
 BEFESTIGEN
 ENFILER
 BEVESTIG
 INSERIR
 CSAVARJA FEL
 NALOZYĆ
 VSTAVITI
 PREKRITI

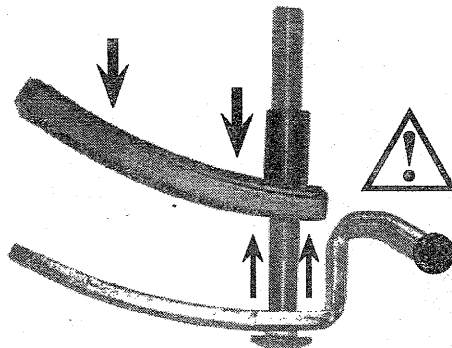

POSTERIORE AUTO
 REAR OF THE CAR
 LADO POSTERIOR DEL COCHE
 RUECKSEITE DES WAGENS
 PARTIE ARRIERE DE LA VOITURE
 ACHTERZIJDE VAN DE AUTO

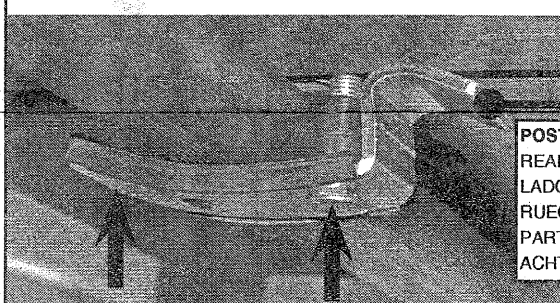

B

POSTERIORE AUTO
 REAR OF THE CAR
 LADO POSTERIOR DEL COCHE
 RUECKSEITE DES WAGENS
 PARTIE ARRIERE DE LA VOITURE
 ACHTERZIJDE VAN DE AUTO

INSERIRE
 INSERT
 CUBRIR
 BEFESTIGEN
 ENFILER
 BEVESTIG


INSERIR
 CSAVARJA FEL
 NALOZYĆ
 VSTAVITI
 PREKRITI



C

INSERIRE
 INSERT
 CUBRIR
 BEFESTIGEN
 ENFILER
 BEVESTIG


INSERIR
 CSAVARJA FEL
 NALOZYĆ
 VSTAVITI
 PREKRITI

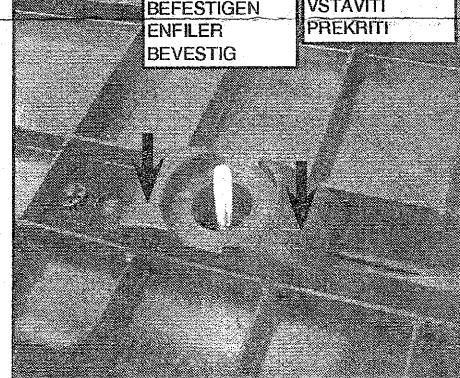

D



10 Nm








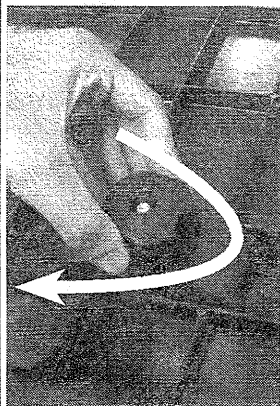


AVVITARE (A FONDO)
 TO SCREW (DOWN)
 APRETAR (A FONDO)
 FESTSCHRAUBEN
 VISSER (À FOND)
 VASTSCHROEVEN
 APERTAR POR BAIXO
 MEGHÚZNI
 WKREĆĆ DO KONCA
 PRIVITI (DO KONCA)
 PRIVRSTITI (DO KRAJA)


E

INSERIRE TAPPO SU VITE
 INSERT THE CAP ON THE SCREW
 CUBRIR TORNILLO CON SU PLASTICO
 KAPPE EINSETZEN
 ENFILER LE CAPUCHON SUR LA VIS
 BEVESTIG DE DOP OP DE SCHROEF
 INSERIR A TAMPA NO PARAFUSO
 CSAVARJA FEL A MŰANYAG KUPAKOKAT
 NALOZYĆ KOREK NA SRUBE
 VSTAVITI POKROVČEK NA VIJAK
 PREKRITI VIJAK POKROVČEM



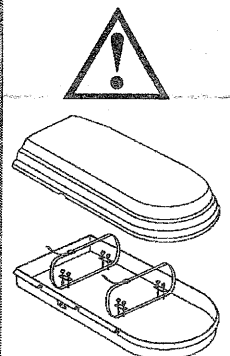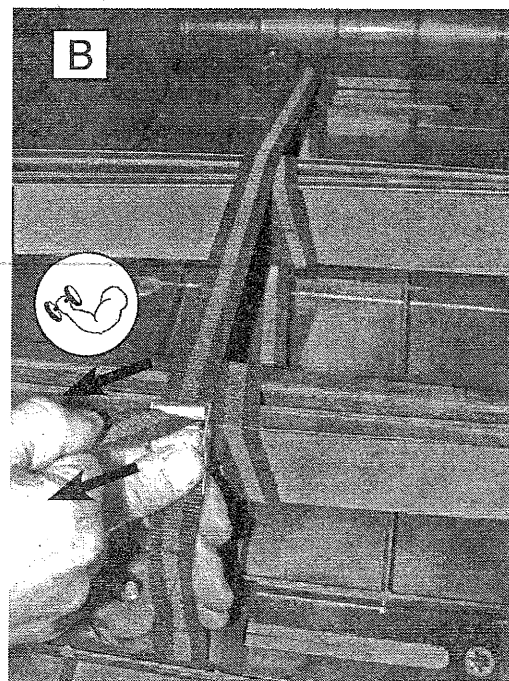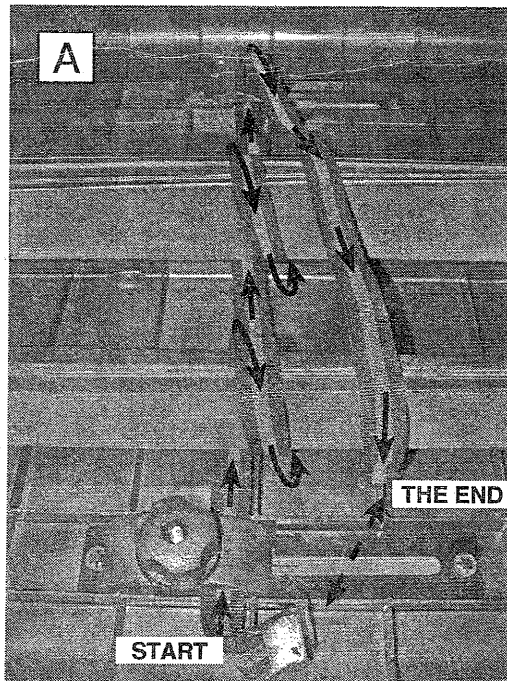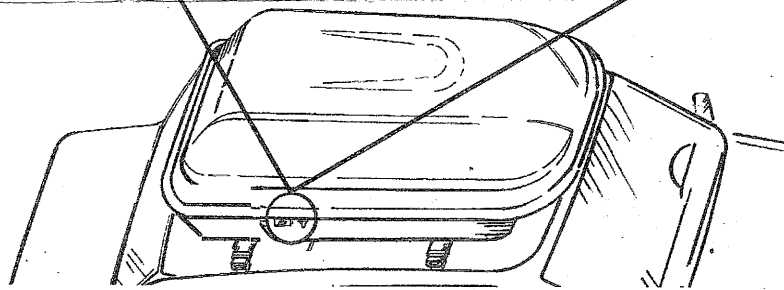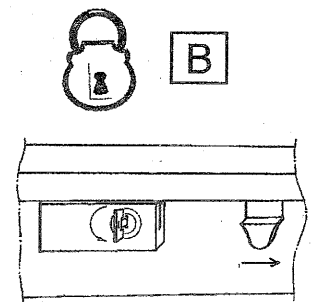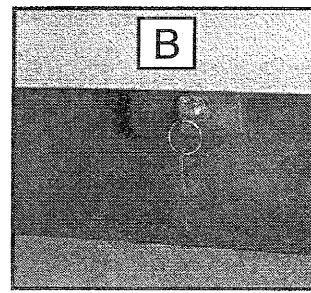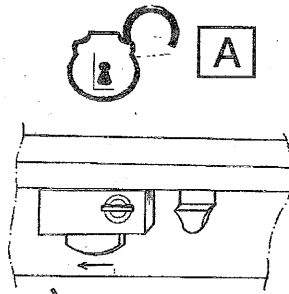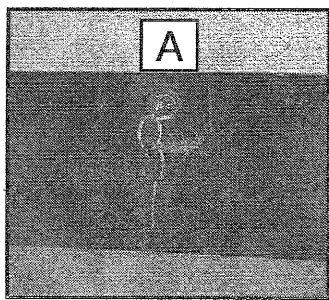

CS 500
CD 500

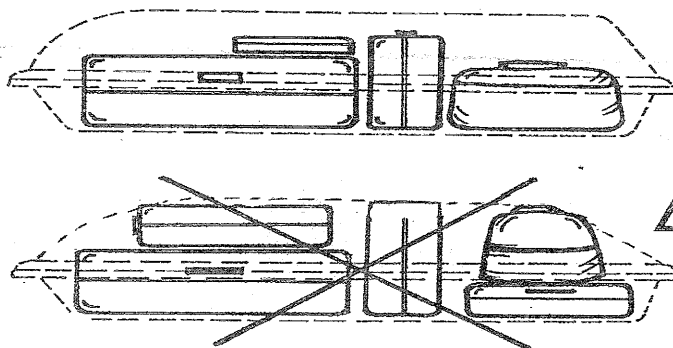

Walmecc S.p.A. Via Canova N° 53
CAP 20020 Lainate (MI) Italy